

## Greenstar Heatslave II

HEATSLAVE II EXT 12/18 ERP+

7731600168

The information provided fulfills the requirements of regulations (EU) 811/2013 and (EU) 813/2013.

Productdata	Symbol	Unit	7731600168
Declared load profile			XL
Energy Efficiency Class			A
Water heating energy efficiency class			B
Rated heat output	Prated	kW	18
Annual energy consumption (average climate conditions)	Q <sub>HE</sub>	kWh	-
Annual energy consumption	Q <sub>HE</sub>	GJ	58
Annual electricity consumption	AEC	kWh	46
Annual fuel consumption	AFC	GJ	25
Seasonal space heating energy efficiency	η <sub>s</sub>	%	90
Water heating energy efficiency	η <sub>wh</sub>	%	66
Sound power level, indoors	L <sub>WA</sub>	dB	-
Indication about ability working only during off-peak hours			No
Special precautions to be taken during assembly, installation or maintenance (if applicable)	see product accompanying documents		
Condensing boiler			Yes
Low temperature boiler			No
B1 boiler			No
Cogeneration space heater			No
Combination heater			Yes
<b>Useful heat output</b>			
At rated heat output and high temperature regime	P <sub>4</sub>	kW	18,2
At 30 % of rated heat output and low temperature regime	P <sub>1</sub>	kW	5,7
<b>Useful efficiency</b>			
At rated heat output and high temperature regime	η <sub>4</sub>	%	92,0
At 30 % of rated heat output and low temperature regime	η <sub>1</sub>	%	96,2
<b>Auxiliary electricity consumption</b>			
At full load	e <sub>lmax</sub>	kW	0,156
At part load	e <sub>lmin</sub>	kW	0,052
In standby mode	P <sub>SB</sub>	kW	0,002
<b>Other items</b>			
Standby heat loss	P <sub>stby</sub>	kW	0,174
Ignition burner power consumption	P <sub>ign</sub>	kW	-
Emissions of nitrogen oxides (only gas- or oil fired)	NO <sub>x</sub>	mg/kWh	110
<b>Additional data for combination heaters</b>			
Daily electricity consumption (average climate conditions)	Q <sub>elec</sub>	kWh	0,210
Daily fuel consumption	Q <sub>fuel</sub>	kWh	31,232

Specific precautions for installation, maintenance as well as recycling and/or disposal are provided within the installation and operating manuals. Read and follow the installation and operating manuals.