

Data Sheet

Thermostatic Radiator Sensor RTW

Application



 

RTW is a self-actuating proportional controller with a small P-band.
 RTW radiator thermostats can be used for all central and district heating systems.
 RTW sensors incorporate a "Frost Protection Setting"

The design is particularly robust, with both End-Stop strength limits and sensor bending force limits being above the requirements of the European Standard EN 215.

Data and Ordering

Type	Version	Setting range	Code No.
RTW	Radiator Pack 15mm	8-28 °C	013G7105
RTW	Radiator Pack 10mm	8-28 °C	013G 7106
RTW-R	Single Pack	8-28 °C	013G7110

Setting the Temperature

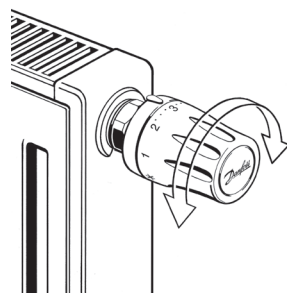


***** = Frost protection setting
 Positive shut off

The required room temperature is set by turning the setting dial. The temperature scales show the correlation between scale values and the room temperature. The temperature values stated are for guidance only as the obtained room temperature will often be influenced by installation conditions.

The temperature scales are stated according to European standards at $X_p = 2^\circ\text{C}$. This means that the radiator thermostats close at a sensor temperature which is 2°C higher than stated on the temperature scales.

Mounting

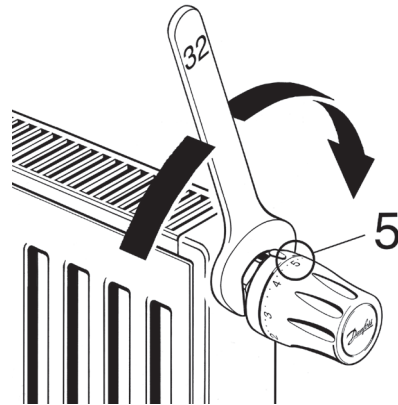

Danfoss A/S
Heating Segment
Haarupvaenget 11
8600 Silkeborg
Denmark
Phone: +45 7488 8000
Fax: +45 7488 8100
e-mail: heating.solutions@danfoss.com
www.heating.danfoss.com

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequential changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.