

110mm Ring Seal Soil System BS EN 1329 - 1:2000/BS 4514:2001

Fixing Guide

Install and test system in accordance with BS EN 1610:1998.

- Commence the stack from the base and work up. Mark the position of the brackets and drill and fix screws before erecting the stack.
- Fix pipe or socket brackets at maximum 2m centres vertical and at maximum 1m centres horizontal.
- An allowance for expansion should be made by withdrawing all pipe and fitting spigots from sockets by 10mm.
 Soil Fittings with spigot ends can be inserted into the socket to depth marks engraved on the spigot to ensure correct allowance is made for expansion. Expansion joints should be incorporated every 4m.
- The use of silicone lubricant on all seals will facilitate jointing.
- The system should incorporate suitable access points to enable testing and maintenance of the system.

BOSS ADAPTORS

Solvent Weld Connection to ABS		32mm	40mm	50mm	
	ABS	SP20	SP21	SP22	
Straight Push-fit Connection to Push-fit Waste or Solvent Weld Waste		SP10	SP11	SP12	

FIRE COLLAR APPLICATION

Used to seal PVC-U pipes as they pass through cavity walls and floors. In a fire the intumescent lining reacts to extreme heat which expands and blocks a potential fire path.



Scan with your Smart Phone to view our Soil Installation Video

TT

SP440 Offset Bend

FC110 Fire Protection Collar

SP230 92½° (87½°) Double Branch

SP101

Straight WC Connector



SP560 ADJUSTABLE BEND 0-90°

SP319 Strap on Boss

SP82 Pipe Clip

The above drawings are for illustrative purposes only. For detailed installation advice please contact your local stockist.

