



## UNDERGROUND DRAINAGE

### Installation Guide - Universal Gully Trap with access facility

- The gully should be assembled out of the ground.
- Place the gully on a substantial base e.g. Pre-cast concrete slab, bricks etc and stabilise by concreting base up to the level where the supporting feet meet the gully body. Ensure that concrete does not enter the ring seal joint.
- Connect the Access Bend (D169) onto the 45° spigot end of the gully using FloPlast Silicone Lubricant to assist with easy insertion.
- Make connection to drainage run using socketed pipe (D146).
- Backfill with suitable material to the required level.
- To complete the access installation, set in concrete an airtight 340mm Sealed PVC Cover and Frame (D830).




**D560**  
0-90° Adjustable Bend

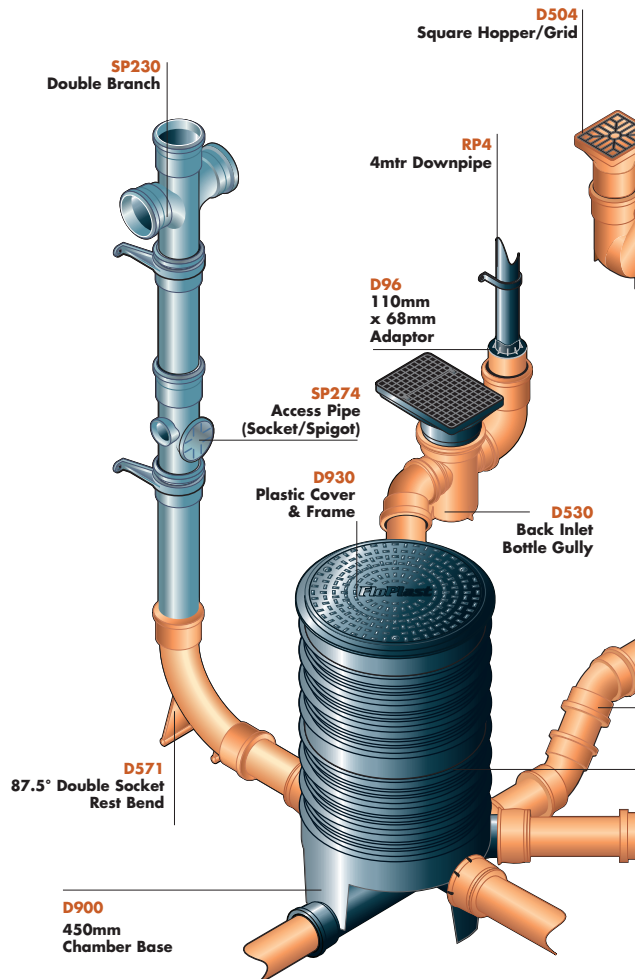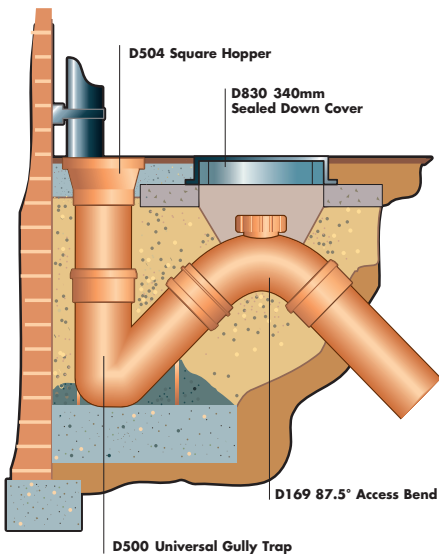


## BACK INLET BOTTLE GULLY (BIG)


### Bottle Gully with rectangular hopper

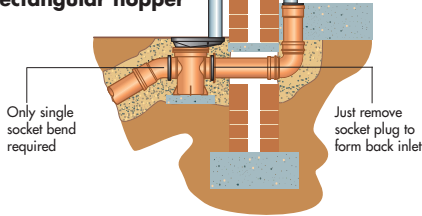

### Bottle Gully with circular hopper

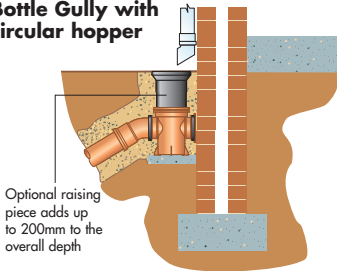

- Screw down, hinged rectangular heavy duty hopper.
- Heavy duty circular hopper available (D540).
- Both hoppers allow for height adjustment of 32mm.
- Sealed dip tube easily removed for rodding purposes.
- Gully riser allows an increase of invert depth up to 200mm (D505). Maximum of one riser only.
- Back inlet socket plug easily removed. No need to drill.

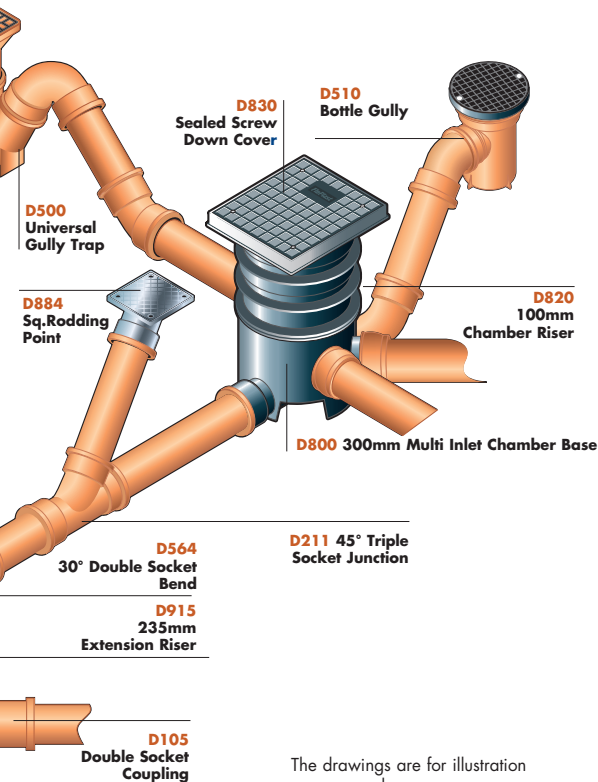

The drawings are for illustration purposes only.  
For detailed installation advice please contact your local stockist.

