


## COVER PLATE FOR TRAPPED SHOWER GULLY WITH 1½" UNIVERSAL PIPE BOSS



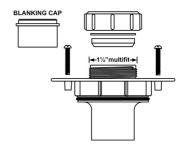

**Code: CPTSG** 

- For use with McAlpine TSG1, TSG2, TSG50 & TSG52 Shower Gullies for sheet flooring
- Provides connection to suit 11/2" Waste Pipe, either BS 5254 or BS 5255, from bath
- When removed, allows Gully to revert for use as a Shower Drain
- Blanking Cap supplied to enable Gully to be sealed off

## **INSTALLATION INSTRUCTIONS**

To convert TSG1, TSG2, TSG50 & TSG52 to receive a Waste Pipe from bath:-

- 1. Remove existing Cover Plate and Dip Tube
- 2. Remove Inner Cup
- 3. Fit CPTSG
- 4. Place items removed in the box or polythene bag and keep the parts in a safe place to enable Gully to be converted back to a Shower Drain

To seal off Gully:-

Fit Blanking Cap to Waste Boss

To convert back to Shower Gully:-

Reverse the above procedure

McAlpine & co. Ltd., Kelvin Avenue, Hillington, Glasgow G52 4LF.

Tel: 0141 882 3213. Fax:0141 891 5065 Fax: Orders (Sales Office) 0141 883 5697.

Website: http://www.mcalpineplumbing.com/