



# EVOLVED



## INSTALLATION INSTRUCTIONS

### Recessed Installation

1. Cut flooring, allowing clearance on width and length of the tray to enable the tray to slot into position.
2. Ensure the joists are adapted to give complete support to the shower tray.
3. Install as per flat to floor installation.

### Maintenance

As good as new finish can be maintained by following these simple instructions:

1. Dry out the tray fully after every use, to avoid build up of limescale and soap residue.
2. Clean the shower tray regularly using a damp cloth or sponge, dry with a soft dry cloth.
3. Occasionally use a non-abrasive cleaner to remove stubborn stains.

Just Trays Ltd  
Whitehall Ind. Est.  
Ashfield Way  
Farnley  
Leeds  
LS12 5JB

www.just-trays.com  
Tel: +44 (0)113 201 5090  
Fax: +44 (0)113 201 5099  
Email: info@just-trays.co.uk

### Shower Tray Customer 25 year Guarantee

Just Trays Ltd guarantees all Evolved by JT™ shower trays against faulty materials or manufacture for a period of 25 years from date of installation, provided that it has been installed, used and maintained in accordance with the manufacturers instructions. If in our opinion the product falls under those circumstances, Just Trays Ltd will undertake to repair or replace the product at our option. Should a claim arise, we request that the following conditions be satisfied. 1. Proof of purchase at the time of claim. 2. The product has been fitted/installed in accordance with our fixing instructions, local by laws and general good plumbing practice. 3. The product has been maintained and cared for in accordance with our instructions. If in our opinion the product has been modified, misused, neglected, wilfully or accidentally damaged, we can accept no responsibility for failure. 4. Just Trays Ltd must be given the opportunity to inspect the product in the installed condition. Should Just Trays Ltd carry out work as a result of a claim but subsequently it is revealed that the product has been abused or improperly installed, we reserve the right to charge the customer for all expenses incurred. The liability of Just Trays Ltd is limited to the product supplied by Just Trays Ltd, and does not extend to consequential loss or damage arising from the defective product. All aftersales enquiries must be directed to the stockist where the product was purchased. Just Trays Ltd believes in continuous improvement. If in our opinion the product has failed under the terms of the guarantee and a replacement is offered but identical goods are no longer available, Just Trays Ltd will replace it with our nearest equivalent product. This guarantee, which is effective for products purchased after September 2009, states our entire liability and is offered to customers acquiring our products as consumers, not in the course of trade or business. This guarantee does not affect your statutory rights. This guarantee is only applicable in the UK and Republic of Ireland.

### Check List

PLEASE NOTE: These checks should be carried out before installation.


- TICK
- 1. Ensure the Quality Acceptance section has been read and understood.
  - 2. Ensure the enclosure dimensions are compatible with the shower tray.
  - 3. Check for any transit damage or product defects.
  - 4. Perform a shower tray water drainage test before installation.
  - 5. Check that all Riser kit contents are present.\* (See table below)

Riser Kit Number	Legs	Panel Support	Large Circular Sticky Pad	Small Circular Sticky Pad	Floor Clips	Panels
1	6	4	6	4	6	1
6	10	6	10	6	7	2

\*Riser kits must be purchased separately.

### Quality Acceptance

1. Fitting the product is acceptance of quality.
2. All guarantees are void unless all these instructions are followed. (Including maintenance)
3. In acceptance of quality, the check list must be completed.

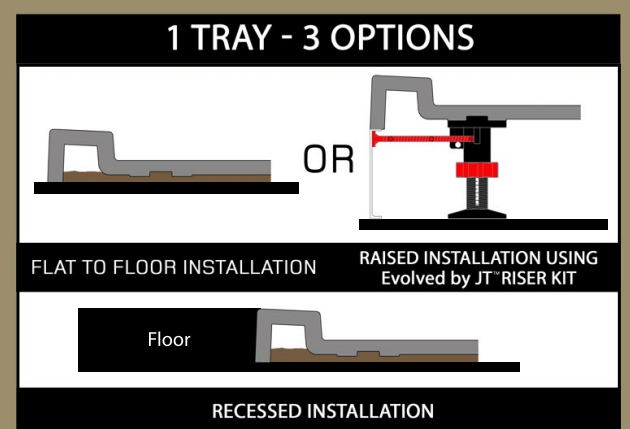



# RAISED INSTALLATION

## Preparation


1. Scribe 2. Prepare

**1.** Place the tray in situ. Scribe a pencil line around the tray and waste hole as shown. Refer to step 1 of the waste instructions and turn the tray over on to a soft dust sheet.




**2.** Determine the required:  
 - Tray diagram below appropriate to your installation  
 - Leg assemblies: A, B, C  
 - Positions of Panel supports  
 - Required panel positions

Leg Assemblies

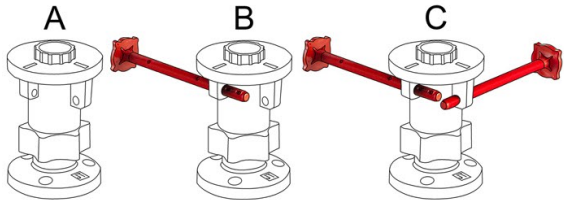

Rule: Panel supports should be used on open edges and to support panels only. When waste is against a wall, leg C should be used in the open corner as shown below.

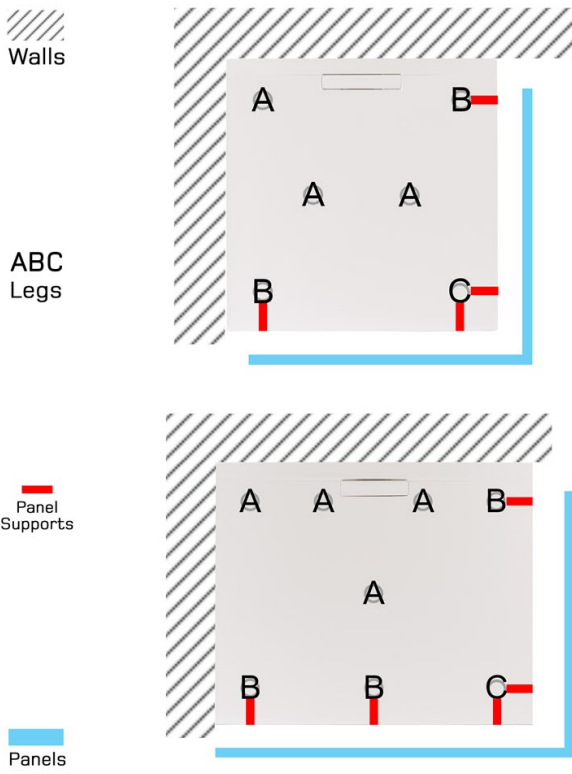


## Fitting

3. Assembly + Leg Fitting

**3.** Apply the large circular sticky pads to all leg bayonet fittings. Following diagrams A to D below, fix all the legs to the built-in leg fixing locations. Use step 2 diagrams for reference.


**A. Align panel supports**

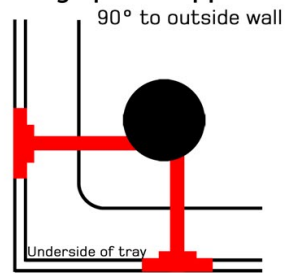

**B. Fit**



**C. Adjust**

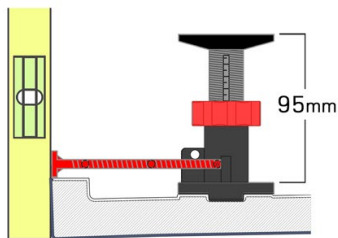


**D. Level**




## Finishing

4. Clips 5. Level 6. Fix 7. Panels 8. Seal


**4.** Screw down all floor clips as shown below.

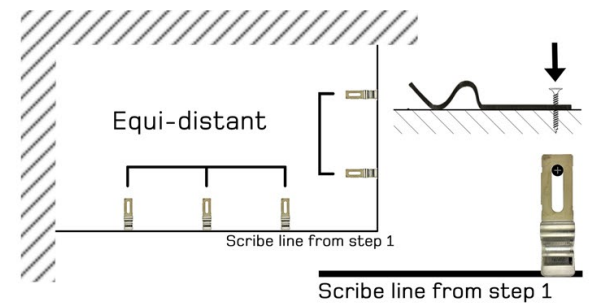

**5.** Turn the tray over and peel the protective film from the outer edges and waste only. Place the tray in situ and level both ways.

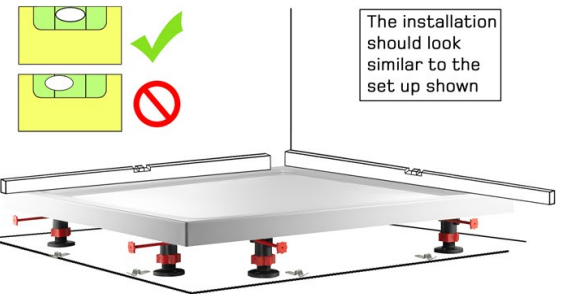


**6.** Refer to step 2 of the waste instructions then proceed to fix all legs to the floor. Screw fix legs where possible and fix the centre leg(s) last to form a stabilising point.

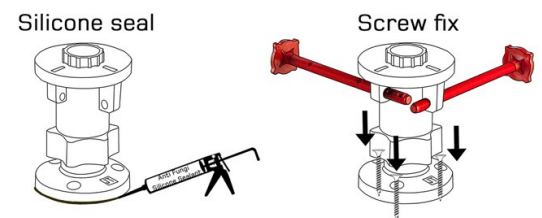

**7.** Panels - Retain the return rebated ends (circled). Follow steps A to C below to fit the panels. Ensure quad panels line up with quad trays


**A. Mark and cut**



**B. Apply the small sticky pads**



**C. Fit to tray**

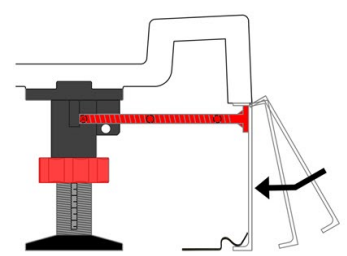

**8.** To complete the installation, tile and seal all joints by following steps 7 and 8 of the FLAT TO FLOOR 'Finishing' section below.


The following items, which are not provided, are also required to complete the installation: - A soft dust sheet - 10mm marine plywood - Sand and cement - Anti-fungal silicone sealant

# FLAT TO FLOOR INSTALLATION

## Preparation

1. Clean 2. Base 3. Film

**1.** Prepare area by clearing all debris and levelling off.

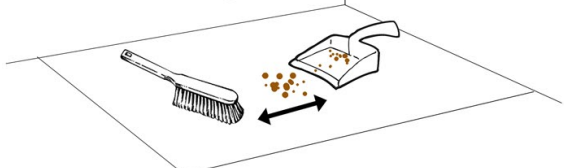

**2.** Ensure the flooring is moisture resistant. A marine ply base (min. 10mm thick) is required if the floor is not moisture resistant. Cut a hole to accommodate the waste and ensure the floor is well supported.




**3.** Remove protective film from wall sides and waste only. Refer to step 1 of the waste instructions.




## Fitting

4. Base 5. Fit and Level

**4.** Cover the base with a 15mm thick 5:1 ratio Sand:Cement mix.

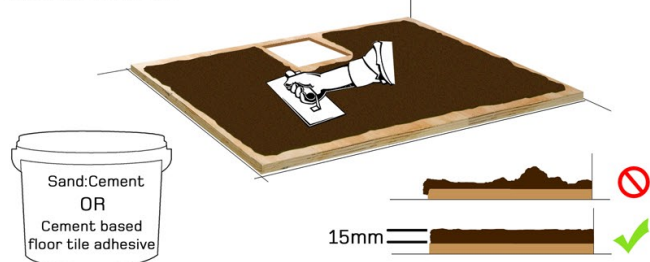

**5.** Carefully lower the tray onto the prepared base. Gently press on the tray to force it into position and level off. Ensure tray is completely level.

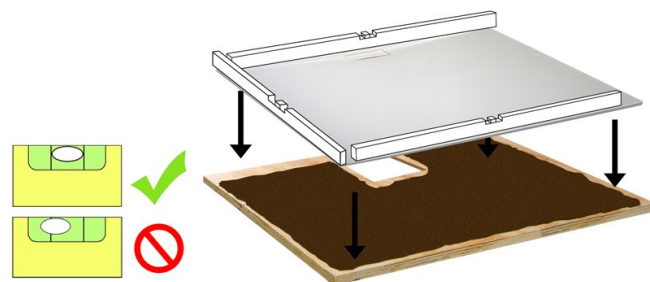

## Finishing

6. Waste 7. Tile 8. Seal

**IMPORTANT:** Allow tray to fully set for 24 hours before proceeding

**6.** Refer to step 2 of the waste instructions.

**7.** Protect the tray with a soft dust sheet and commence tiling.

**8.** Seal all joints and allow to set to complete the installation.

