

time flow - Non Concussive Basin Mounted Tap with Adjustable Temperature Control

non concussive operation with manual adjustment

Introduction

The Non Concussive basin mounted tap with Adjustable Temperature control is designed for use with the Inta range of Thermostatic Mixing Valves. The tap is operated by manually pressing the control knob, the non concussive action automatically closes the tap after approximately 15 seconds. Rotating the control knob clockwise or anti-clockwise reduces or increases the mixed water temperature.



Non Concussive operation

Manual temperature adjustment

Operating pressure range of 0.5 to 5 bar (dynamic)

▼ Flow Time = 15 seconds ±3 seconds

non concussive basin mounted manual mixer tap NC230CP


Product Range


Description	Code
Non concussive basin mounted tap with adjustable temperature control	NC230CP






time flow - Non Concussive Basin Mounted Tap with Adjustable Temperature Control

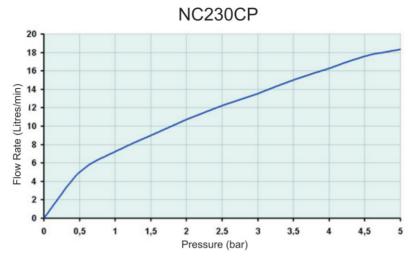

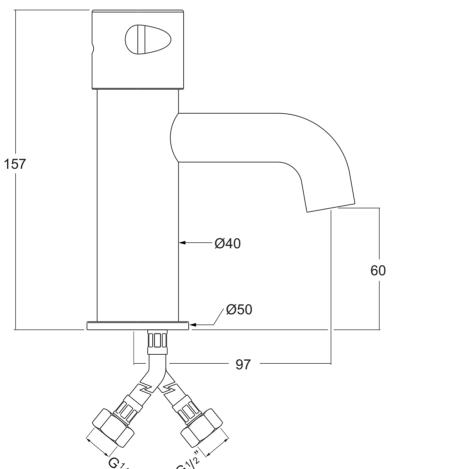

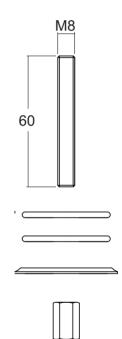

▼ Technical Specification

iodinical opodinicalion	
Max Inlet Pressure (static)	5 Bar
Min Inlet Pressure (dynamic)	0.5 Bar
Max Basin Thickness	45mm
Inlet Connections	G1/2" flexible tail
Timed Flow At 1 Bar	15 seconds ± 3 seconds

