




ARISTON



420011055503 - Rev. 01 - 092023

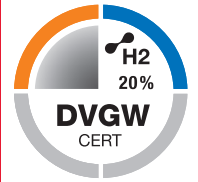

READY FOR ARISTON NET

discover more
ariston-net.ariston.com



UK
CA
CE

CLAS ONE R 15 CLAS ONE R 24

G.C.N.: 41-116-53 (15 kW)

G.C.N.: 41-116-52 (24 kW)

INSTALLATION AND SERVICING INSTRUCTIONS

CONDENSING WALL-HUNG GAS BOILER

Country of Destination: GB/IE



HOT WATER ■ HEATING ■ RENEWABLE

3302443
3301466

420000533303



0000000420005333032220000000

INDEX

Overview	3	Commissioning	30
General Information.....	4	Initial Preparation.....	30
Advice for the Installer.....	4	Electricity Supply.....	30
CE Labelling.....	4	Filling the Heating System.....	30
Data Plate Symbols.....	4	Gas Supply.....	30
Safety Regulations.....	5	Water Treatment.....	30
Product description	7	First Ignition Operation.....	31
Control Panel.....	7	Ignition procedure.....	32
Overall View.....	8	First Ignition.....	32
Overall Dimension.....	8	Combustion checking procedure.....	33
Minimum Clearances.....	8	AUTO Function.....	36
Installation	9	Boiler Protection Devices	37
Reference Standards.....	9	Boiler Protection Devices.....	37
Installing the Boiler.....	16	Anti-Frost Device.....	37
Gas Connection.....	16	Table summarising error codes.....	37
Central Heating connection.....	17	Settings - Adjustment - Problem Identification Menus	
Instructions for Opening the Casing and Performing an		Accessing the Menus.....	38
Internal Inspection.....	17	Maintenance	
Water circuit diagram.....	18	General Comments.....	44
Connecting the Flue.....	19	Operational Test.....	44
Fitting the Coaxial Flue (Ø 60/100 Horizontal).....	21	Draining procedures.....	44
Fitting the 5" Flue (Ø 80/125 Horizontal / Vertical).....	21	Cleaning the primary exchanger.....	44
Fitting the Coaxial Flue (Ø 60/100 Vertical).....	22	Cleaning the trap.....	44
Fitting the Twin Pipe (Ø 80/80).....	23	Maintenance Guide	
Electrical Connections.....	26	1. General Access.....	45
Electrical connection unit.....	26	2. Electrical Unit.....	45
Electrical Diagram.....	27	3. Hydraulic Unit.....	48
		4. Burner Unit.....	52
		5. Annual Maintenance.....	56
		Technical Information	
		Technical Data.....	57
		ERP Data.....	58
		Product fiche.....	58
		Package Label - Instructions to filling.....	59
		Package fiche.....	61
		Benchmark Commissioning Checklist	63
		Benchmark Service Interval Record	65

These instructions are suitable for CLAS ONE R boilers :

Do not forget the Log Book!

The Benchmark Scheme

Benchmark places responsibilities on both manufacturers and installers. The purpose is to ensure that customers are provided with the correct equipment for their needs, that it is installed, commissioned and serviced in accordance with the manufacturer's instructions by competent persons and that it meets the requirements of the appropriate Building Regulations England & Wales. The Benchmark Checklist can be used to demonstrate compliance with Building Regulations England & Wales and should be provided to the customer for future reference.

Installers are required to carry out installation, commissioning and servicing work in accordance with the Benchmark Code of Practice which is available from the Heating and Hotwater Industry Council who manage and promote the Scheme. Visit www.centralheating.co.uk for more information.

To The Installer

As part of the commissioning of this appliance it is vital that the Log Book is completed and given to the Householder. Please ensure that your customer is aware of the importance of keeping the Log Book safe as a record of the installation and the appliance service history.

Please ensure that your customer is aware of the correct operation of the system, boiler and controls.

CUSTOMER CARE

ARISTON, as a leading manufacturer of domestic and commercial water heating appliances is committed to providing high quality products and a high quality after sales service.

Advice on installation or servicing can also be obtained by contacting the ARISTON Technical and Customer Service Departments.

TECHNICAL DEPARTMENT

Tel: 0333 240 7777

Fax: 01494 459775

CUSTOMER SERVICE DEPARTMENT

Tel: 0333 240 8777

Fax: 01494 459775

GUARANTEE

The manufacturer's guarantee is from the date of purchase. The guarantee is invalidated if the appliance is not installed in accordance with the recommendations made herein or in a manner not approved by the manufacturer. To assist us in providing you with an efficient after sales service, please register the guarantee online at WWW.ariston.com/uk

CAUTION

In the United Kingdom, installation, start-up, adjustments and maintenance, must be performed by a competent person only, in accordance with the current Gas Safety (Installation & Use) Regulations and the instructions provided.

In the Republic of Ireland, the installation and initial start up of the appliance must be carried out by a Competent Person in accordance with the current edition of IS 813:2014+A1 "Domestic Gas Installations", the current Building Regulations, reference should also be made to the current ETCI rules for electrical installation.

All GAS SAFE registered installers carry a GAS SAFE ID card, and have a registration number. Both should be recorded in your boiler Log Book. You can check your installer is GAS SAFE registered by calling GAS SAFE directly on:- 0800 408 5500.

Improper installation may cause damage or injury to individuals and personal property for which the manufacturer will not be held liable. To ensure efficient and safe operation it is recommended that the boiler is serviced annually by a competent person.

If it is known that a fault exists on the appliance, it must not be used until the fault has been corrected by a competent person.

This instruction booklet is especially designed for appliances installed in the UK and the Republic of Ireland

ATTENTION!!
THE INSTALLATION AND FIRST IGNITION OF THE BOILER MUST BE PERFORMED BY QUALIFIED PERSONNEL IN COMPLIANCE WITH CURRENT NATIONAL REGULATIONS REGARDING INSTALLATION, AND IN CONFORMITY WITH ANY REQUIREMENTS ESTABLISHED BY LOCAL AUTHORITIES AND PUBLIC HEALTH ORGANISATIONS.
AFTER THE BOILER HAS BEEN INSTALLED, THE INSTALLER MUST ENSURE THAT THE END USER RECEIVES THE DECLARATION OF CONFORMITY AND THE OPERATING MANUAL, AND SHOULD PROVIDE ALL NECESSARY INFORMATION AS TO HOW THE BOILER AND THE SAFETY DEVICES SHOULD BE HANDLED.



Advice for the installer

These appliance are designed for use on open vented central heating systems. These appliances are designed for domestic use only.

It should be connected to a heating system and a distribution network for domestic hot water, both of which must be compatible with its performance and power levels.

The use of the appliance for purposes other than those specified is strictly forbidden. The manufacturer cannot be held responsible for any damage caused by improper, incorrect and unreasonable use of the appliance or by the failure to comply with the instructions given in this manual.

Installation, maintenance and all other interventions must be carried out in full conformity with the governing legal regulations and the instructions provided by the manufacturer. Incorrect installation can harm persons, animals and possessions; the manufacturing company shall not be held responsible for any damage caused as a result. The boiler is delivered in a carton. Once you have removed all the packaging, make sure the appliance is intact and that no parts are missing. If this is not the case, please contact your supplier. Keep all packaging material (clips, plastic bags, polystyrene foam, etc.) out of reach of children as it may present a potential hazard.

In the event of a fault and/or malfunction, turn the appliance off, turn off the gas cock and do not attempt to repair it yourself. Contact a qualified professional instead.

Before any maintenance or repair work is performed on the boiler, make sure you have disconnected it from the electricity supply by switching the isolator switch to the “OFF” position and removing the fuse.

All repairs, which should only be performed using original spare parts, should be carried out by a qualified professional. Failure to comply with the above instructions could compromise the safety of the appliance and invalidate all liability on the part of the manufacturer.

In the event of any maintenance or other structural work in the immediate vicinity of the flue or flue gas exhaust devices and their accessories, switch the appliance off by switching the isolator switch to the “OFF” position and shutting off the

gas control valve. When the work has been completed, a qualified technician must check the efficiency of the flue and the devices.

Turn the boiler off and turn the external switch “OFF” to clean the exterior parts of the appliance.

Clean using a cloth dampened with soapy water. Do not use aggressive detergents, insecticides or toxic products. If the appliance is used in full compliance with current legislation, it will operate in a safe, environmentally-friendly and cost-efficient manner.

If using kits or optional extras, make sure they are authentic.

Symbols used on the data plate

1				2		
3			4	5		
			6			
			7			
8				MAX	MIN	
9		12	Q _{nom}	14		
		13	η _{nom}	15		
10	11			16	17	18
					20	
			19		21	
					22	

Legend :

1. Brand
2. Manufacturer
3. Boiler model - Serial number
4. Commercial reference
5. certification number
6. Destination country - gas category
7. Gas setting
8. Installation type
9. Electrical data
10. Maximum domestic hot water pressure
11. Maximum heating pressure
12. Boiler type
13. NOx class / Efficiency
14. Input rating nominal heating
15. Power ouput heating
16. DHW specific flow rate
17. Boiler output efficiency
18. Input rating nominal DHW
19. Gases which may be used
20. Minimum ambient temperature for use
21. Max. central heating temperature
22. Max. domestic hot water temperature

SAFETY REGULATION

Key to symbols:



Failure to comply with this warning implies the risk of personal injury, in some circumstances even fatal



Failure to comply with this warning implies the risk of damage, in some circumstances even serious, to property, plants or animals.

Install the appliance on a solid wall which is not subject to vibration.

Noisy operation.



When drilling holes in the wall for installation purposes, take care not to damage any electrical wiring or existing piping.

Electrocution caused by contact with live wires. Explosions, fires or asphyxiation caused by gas leaking from damaged piping.



Damage to existing installations.

Flooding caused by water leaking from damaged piping.



Perform all electrical connections using wires which have a suitable section.

Fire caused by overheating due to electrical current passing through undersized cables.



Protect all connection pipes and wires in order to prevent them from being damaged.

Electrocution caused by contact with live wires. Explosions, fires or asphyxiation caused by gas leaking from damaged piping.



Flooding caused by water leaking from damaged piping.



Make sure the installation site and any systems to which the appliance must be connected comply with the applicable norms in force.

Electrocution caused by contact with live wires which have been installed incorrectly.



Damage to the appliance caused by improper operating conditions.



Use suitable manual tools and equipment (make sure in particular that the tool is not worn out and that its handle is fixed properly); use them correctly and make sure they do not fall from a height. Replace them once you have finished using them.

Personal injury from the falling splinters or fragments, inhalation of dust, shocks, cuts, pricks and abrasions.



Damage to the appliance or surrounding objects caused by falling splinters, knocks and incisions.



Use electrical equipment suitable for its intended use (in particular, make sure that the power supply cable and plug are intact and that the parts featuring rotary or reciprocating motions are fastened correctly); use this equipment correctly; do not obstruct passageways with the power supply cable, make sure no equipment could fall from a height. Disconnect it and replace it safely after use.

Personal injury caused by falling splinters or fragments, inhalation of dust, knocks, cuts, puncture wounds, abrasions, noise and vibration.



Damage to the appliance or surrounding objects caused by falling splinters, knocks and incisions.



Make sure any portable ladders are positioned securely, that they are suitably strong and that the steps are intact and not slippery and do not wobble when someone climbs them. Ensure someone provides supervision at all times.

Personal injury caused by falling from a height or cuts (stepladders shutting accidentally).



Make sure any rolling ladders are positioned securely, that they are suitably strong, that the steps are intact and not slippery and that the ladders are fitted with handrails on either side of the ladder and parapets on the landing.

Personal injury caused by falling from a height.



During all work carried out at a certain height (generally with a difference in height of more than two metres), make sure that parapets are used to surround the work area or that individual harnesses are used to prevent falls.

The space where any accidental fall may occur should be free from dangerous obstacles, and any impact upon falling should be cushioned by semi-rigid or deformable surfaces.

Personal injury caused by falling from a height.



Make sure the workplace has suitable hygiene and sanitary conditions in terms of lighting, ventilation and solidity of the structures.

Personal injury caused by knocks, stumbling etc.



Protect the appliance and all areas in the vicinity of the work place using suitable material.

Damage to the appliance or surrounding objects caused by falling splinters, knocks and incisions.



Handle the appliance with suitable protection and with care.

Damage to the appliance or surrounding objects from shocks, knocks, incisions and squashing.



During all work procedures, wear individual protective clothing and equipment.

Personal injury caused by electrocution, falling splinters or fragments, inhalation of dust, shocks, cuts, puncture wounds, abrasions, noise and vibration.



Place all debris and equipment in such a way as to make movement easy and safe, avoiding the formation of any piles which could yield or collapse.

Damage to the appliance or surrounding objects from shocks, knocks, incisions and squashing.



All operations inside the appliance must be performed with the necessary caution in order to avoid abrupt contact with sharp parts.

Personal injury caused by cuts, puncture wounds and abrasions.



Reset all the safety and control functions affected by any work performed on the appliance and make sure they operate correctly before restarting the appliance.

Explosions, fires or asphyxiation caused by gas leaks or an incorrect flue gas exhaust.



Damage or shutdown of the appliance caused by out-of-control operation.



Before handling, empty all components that may contain hot water, carrying out any bleeding if necessary.

Personal injury caused by burns.



Descale the components, in accordance with the instructions provided on the safety data sheet of the product used, airing the room, wearing protective clothing, avoid mixing different products, and protect the appliance and surrounding objects.

Personal injury caused by acidic substances coming into contact with skin or eyes; inhaling or swallowing harmful chemical agents.



Damage to the appliance or surrounding objects due to corrosion caused by acidic substances.



If you detect a smell of burning or smoke, keep clear of the appliance, disconnect it from the electricity supply, open all windows and contact the technician.

Personal injury caused by burns, smoke inhalation, asphyxiation.



This appliance can be used by children aged from 8 years and above and person with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.



Children shall not play with the appliance.

Cleaning and user maintenance shall not be made by children without supervision.

UKCA labelling

The UKCA mark guarantee that the appliance conform to the following UK regulations:

- Gas Appliances Regulation (Regulation (EU) 2016/426 as brought into GB law and amended) and the Gas Appliances (Enforcement) and Miscellaneous Amendment Regulations 2018 (S.I. 2018 No. 389, as amended)
- The Ecodesign for Energy-Related Products and Energy Information (Amendment) (EU Exit) Regulations 2019 (S.I. 2019 No. 539, as amended)
- BED (Boiler Efficiency Directive) - only art.7 (2), art.8 and annex III, IV, V
- Electrical Equipment (Safety) Regulations 2016 (S.I. 2016 No 1101, as amended)
- Electromagnetic Compatibility Regulations 2016
- Radio Equipment Regulations 2017 (S.I. 2017 No. 1206, as amended) (S.I. 2016 No. 1091, as amended)
- The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012 (S.I. 2012 No. 3031, as amended).


CE labelling

The CE mark guarantees that the appliance conforms to the following directives:

- 2016/426/EU relating to gas appliances
- 2014/30/EU relating to electromagnetic compatibility
- 92/42/CEE relating to energy efficiency
- 2014/35/EU relating to electrical safety
- 2009/125/CE Energy related Products
- 813/2013 Commission regulation (EU)
- 2014/53/EU RED (Radio Equipment Directive)

PRODUCT DESCRIPTION

CONTROL PANEL

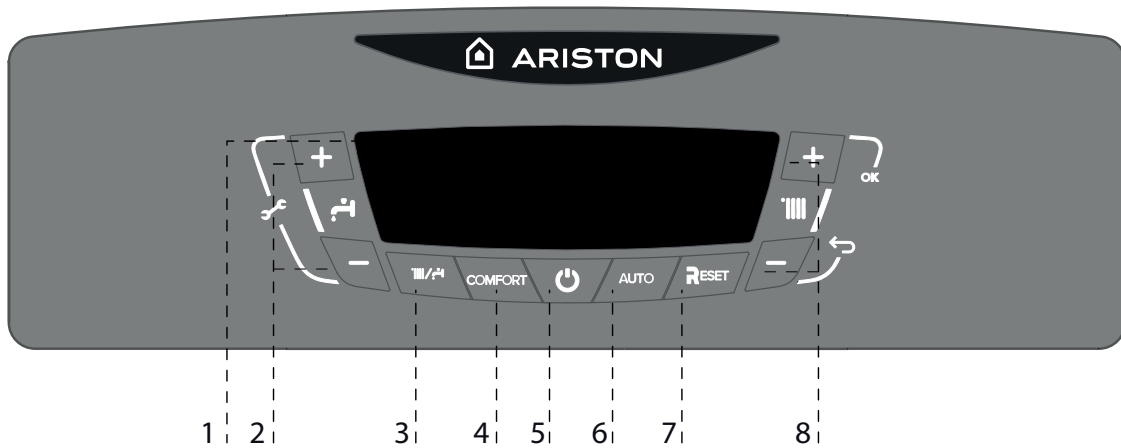


Legend:

1. Display
2. Domestic Hot Water adjustment button +/- **NOT ACTIVE (a)**
3. MODE button
(Operation mode selection summer/winter)
4. COMFORT button **NOT ACTIVE**
5. ON/OFF button
6. Auto button (To activate Thermoregulation)
7. RESET button
8. Heating temperature adjustment button +/- **(b)**

- (a) Pressing the buttons simultaneously allows access to the engineers menu and all parameters and settings**
- (b) Use these buttons to modify and save the parameter settings**



DISPLAY

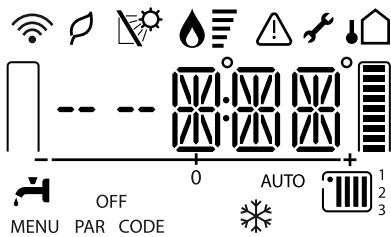

Legend:



Digits indicating:

- Boiler status
- Temperature indication with bar level
- Error code signals (ERROR)
- Request press RESET button (boiler block)
- Menu settings



Technical assistance request



Flame detected with indication of power used



Heating operation set



Heating operation active

AUTO

AUTO function activated



High efficiency operation (low C.H. flow temperature)



Solar temperature probe connected - option



Error signals
The display shows the code



External temperature displayed
(with external sensor optional)



Wi-Fi active (Kit Optional)

COMFORT

Hot Water Comfort activated




Boiler off with antifreeze function active




Anti-frost Function Active

PRODUCT DESCRIPTION

OVERALL VIEW

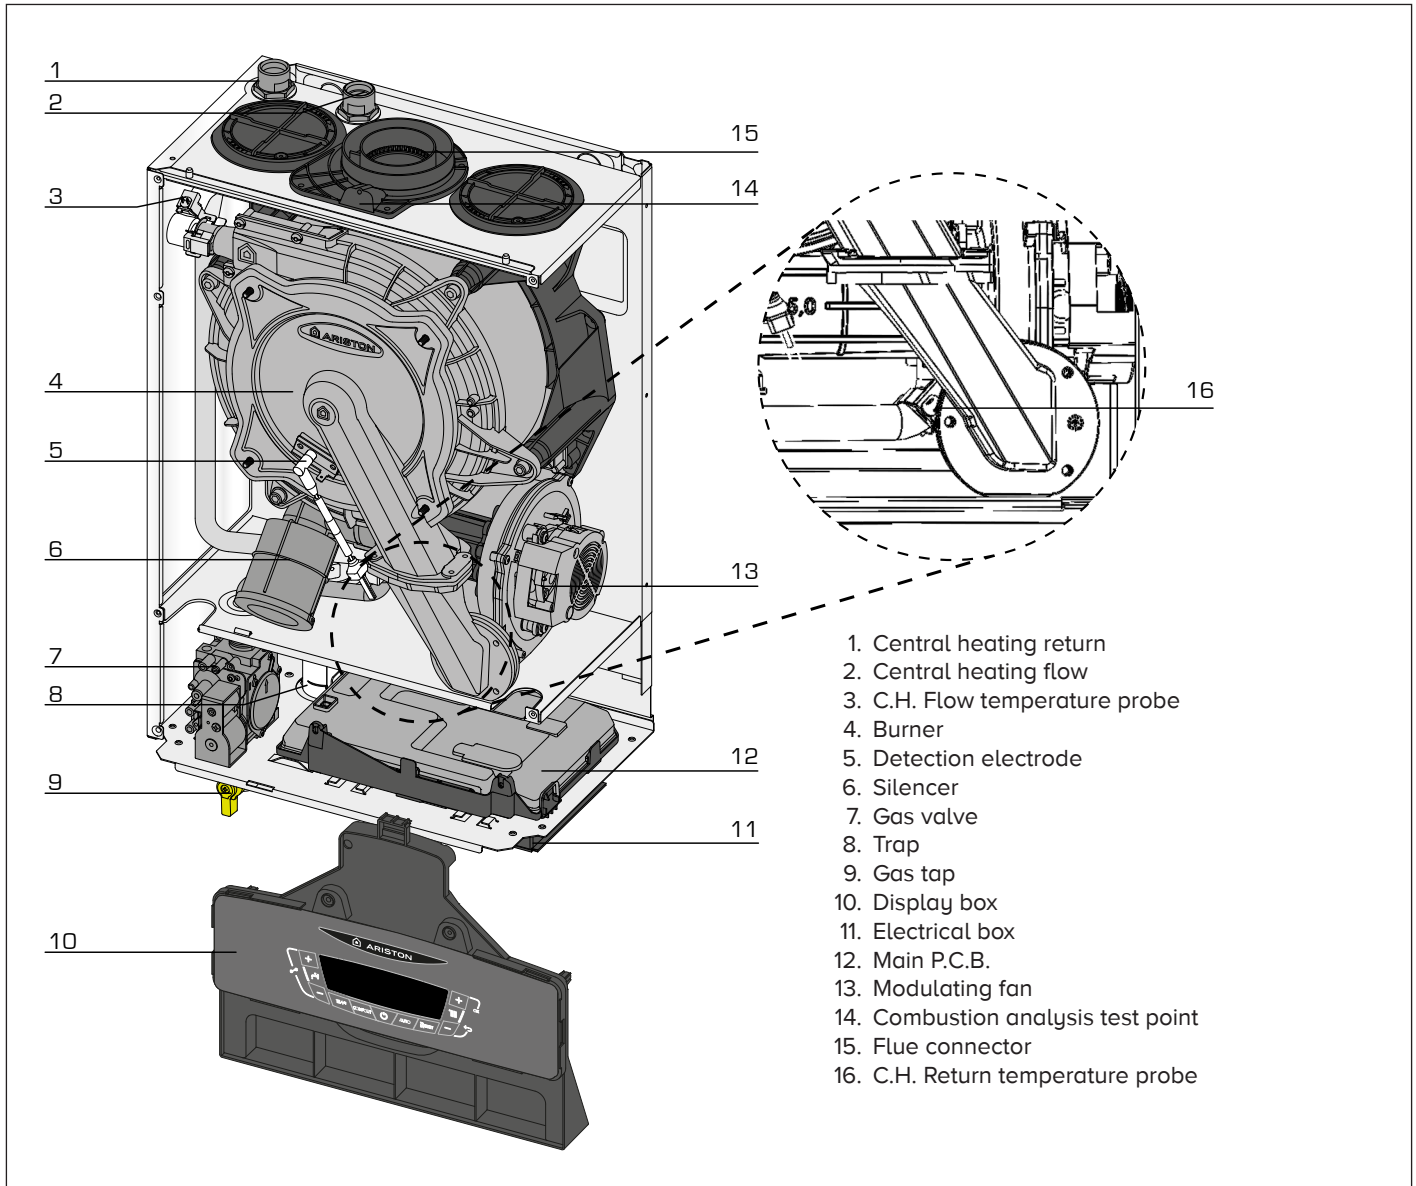


OVERALL DIMENSIONS

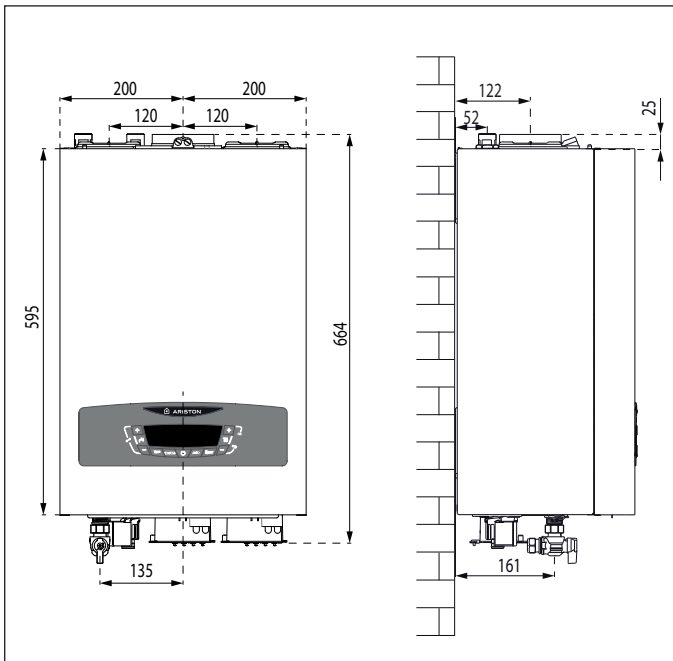

MINIMUM CLEARANCES

In order to allow easy access to the boiler for maintenance operations, The boiler must be installed in accordance with the clearances stated below.

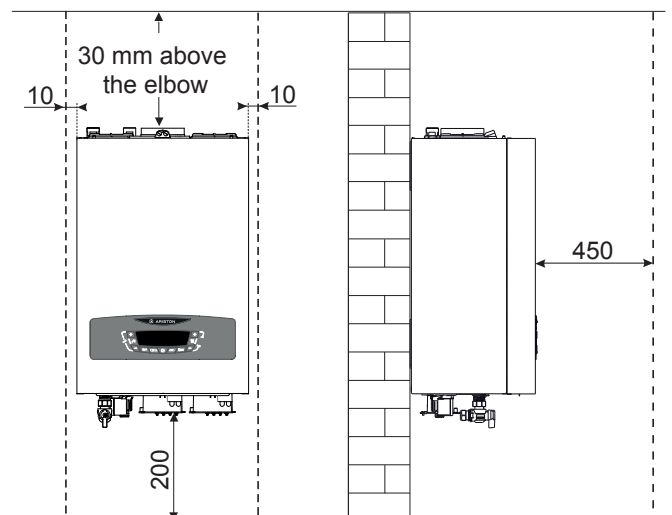

INSTALLATION

Reference Standards

In the United Kingdom, the installation and initial start-up of the boiler must be by a Gas Safe registered installer in accordance with the installation standards currently in effect, as well as with any and all local health and safety standards i.e. Gas Safe.

In the Republic of Ireland the installation and initial start-up of the appliance must be carried out by a Competent Person in accordance with the current edition of IS 813:2014+A1 “Domestic Gas Installations” and the current Building Regulations, reference should also be made to the current ETCI rules for electrical installation.

In IE, the installation must be carried out by a Registered Gas Installer (RGI) and installed in accordance with the current edition of IS 813:2014+A1 “Domestic Gas Installations”, the current Building Regulations and reference should be made to the current ETCI rules for electrical installation.

The appliance contains no asbestos and no substances have been used in the construction process that contravene the COSHH Regulations (Control of Substances Hazardous to Health Regulations 1988).

Codes of Practice

Where no specific instruction is given, reference should be made to the relevant British Standard codes of Practice.

BS7074:1	Code of practice for domestic and hot water supply
BS6891	Installation of low pressure gas pipe work up to 28mm (R1)
BS5546	Installation of gas hot water supplies for domestic purposes
EN12828	Central heating for domestic premises
BS5440:1	Flues and ventilation for gas appliances of rated heating not exceeding 70kW (net): Flues
BS5440:2	Flues and ventilation for gas appliances of rated heating not exceeding 70kW (net): Air Supply
BS7593: 2019	Treatment of water in domestic hot water central heating systems
BS6798:2014	Installation of gas fired boilers of rated input up to 70kW (net)

Irish Standards

The relevant Irish standards should be followed, including:

- ETCI National rules for electrical installations
- IS 813:2014+A1 for Domestic Gas Installations.

I.S. 813 Domestic Gas Installations

Avoid installing the boiler where the air inlet can be polluted by chemical products such as chlorine (swimming pool area), or ammonia (hair dresser), or alkalin products (launderette).

INSTALLATION

Flue

Detailed information on flue assembly can be found in the “Connecting the Flue” section.


The boiler must be installed so that the flue terminal is exposed to the free passage of external air at all times and must not be installed in a place likely to cause nuisance. It must not be allowed to discharge into another room or space such as an outhouse or closed lean-to.

Condensing boilers have a tendency to form a plume of water vapour from the flue terminal due to the low temperature of the flue gasses. The terminal should therefore be located with due regard for the damage or discolouration that may occur to building within the vicinity and consideration must also be given to adjacent boundaries, openable windows should also be taken into consideration when siting the flue.

The minimum acceptable clearances are shown below:

NOTE: THE FLUE MUST NOT BE INSTALLED IN A PLACE LIKELY TO CAUSE A NUISANCE AND POSITIONED TO ENSURE THAT PRODUCTS OF COMBUSTION DO NOT DISCHARGE ACROSS A BOUNDARY

It may be necessary to protect the terminal with a guard, if this is the case it will be necessary to purchase a stainless steel terminal guard. Reference should be made to the Building Regulations for guidance.

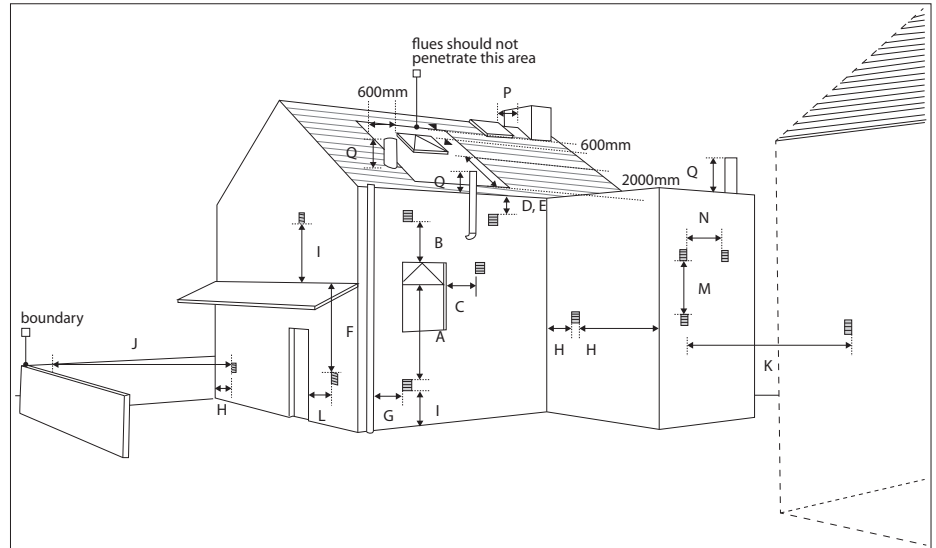

Location		Fanned draught
A	Below an opening	300
B	Above an opening	300
C	Horizontally to an opening	300
D	Below gutters, soil pipes or drain pipes	75
E	Below eaves	200
F	Below balcony or cart port roof	200
G	From a vertical drain pipe or soil pipe	150
H	From an internal or external corner, or to a boundary alongside the terminal	300
I	Above ground, roof or balcony level	300
J	From a surface or a boundary facing the terminal	600
K	From a terminal facing the terminal	1200
L	From an opening in the car port into the building	1200
M	Vertically from a terminal on the same wall	1500
N	Horizontally from a terminal on the same wall	300
P	From a structure on the roof	N/A
Q	Above the highest point of intersection with the roof	N/A

Ventilation

The room in which the boiler is installed does not require specific ventilation. If the boiler is installed in a cupboard or compartment ventilation is not required for cooling purposes.

INSTALLATION

Gas Supply

The gas installation must be in accordance with the requirements of BS6891:2015 + A1: 2019. Ensure that the pipe size is adequate for demand including other gas appliances on the same supply.

Electrical Supply

The appliance requires an earthed 230V - 50 Hz supply and must be in accordance with current I.E.E. regulations. It must also be possible to be able to completely isolate the appliance electrically. Connection should be via a 3 amp double pole fused isolating switch with contact separation of at least 3mm on both poles.

Alternatively the connection can be made via a fused 3 pin plug to an un-switched shuttered socket both complying to BS1363, provided it is not used in a room containing a bath or shower, etc.

It should only supply the appliance.


Automatic by pass

Ariston recommend that an automatic by pass is installed a minimum of 1.5 metres away from the boiler to ensure the minimum required flow rate is achieved at all times.

Additionally the design of the system and its controls must ensure that an adequate temperature differential is met, and should be such to prevent boiler cycling.

Feed and vent pipework

The feed and vent pipework from the boiler to the F & E (Feed & Expansion) tank should be configured as shown in the fig. below.

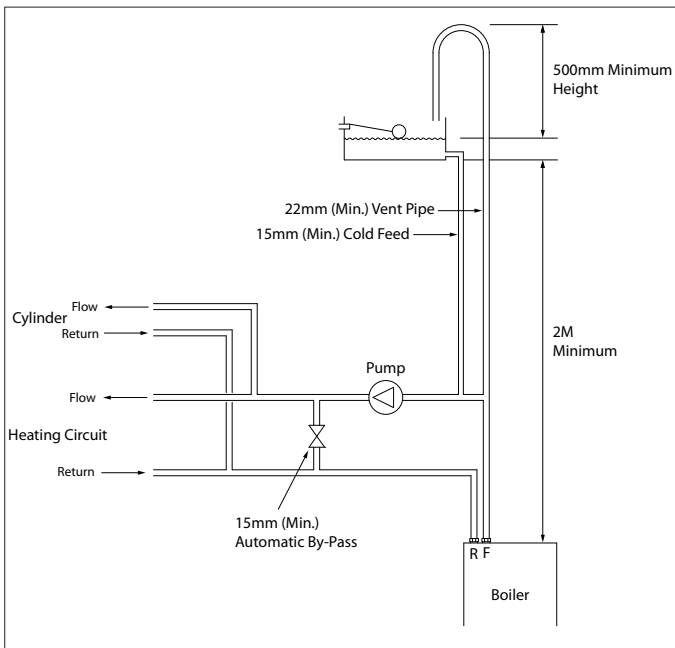

Note:

- The distance between the cold feed and the open vent pipe shall be no more than 150mm.
- The open vent pipe must be a minimum of 22mm diameter.
- The cold feed pipe must be a minimum of 15mm diameter.
- The cold feed and open vent pipes must rise continuously and be unrestricted.
- The minimum distance from the top of the boiler to the bottom of the F & E tank shall be no less than 2m. Whilst the maximum distance shall be not more than 27m.
- The distance between the bottom of the F & E tank and the highest point of the open vent must be no less than 500mm.
- The flow and return pipes from the boiler must rise continuously and be unrestricted.
- The supply of water to the F & E tank should be taken from the mains water supply via a suitable float operated valve. While the supply from the F & E tank to the boiler/heating circuit (via the cold feed) shall be unrestricted.
- The F & E tank must be adequately supported and installed in accordance with relevant Building Regulations.

Pump specification


The pump should be fitted on the flow pipe from the boiler and have isolating valves each side. A variable duty pump should be set to give a temperature differential of no greater than 20°C.

Draining tap

A draining tap must be provided at all the lowest points of the system which will allow the entire system to be drained. A drain tap must also be installed on the flow and return pipes immediately above the boiler to ensure complete draining of the primary flow and return is possible.

Drain taps shall be to the current standard of BS 2879.

Pressure Loss Graphs through the boilers

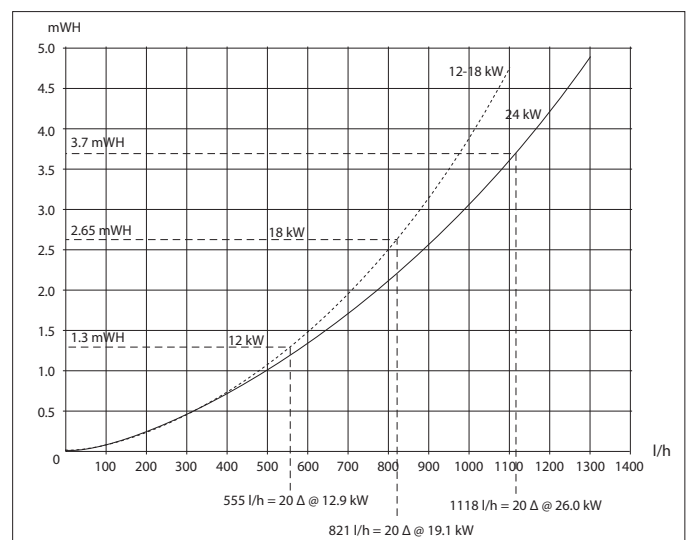

🏠 INSTALLATION

Flushing and Water Treatment

The boiler is equipped with a stainless steel heat exchanger.

The detailed recommendations for water treatment are given in BS7593:2019 (Treatment of water in domestic hot water central heating systems); the following notes are given for general guidance.

If the boiler is installed on an existing system, any unsuitable additives must be removed.

Under no circumstances should the boiler be fired before the system has been thoroughly flushed; the flushing procedure must be in line with BS7593:2019.

We highly recommend the use of a flushing detergent appropriate for the metals used in the circuit. These include cleansers produced by Fernox BetzDearbon, whose function is to dissolve any foreign matter that may be in the system.

In hard water areas or where large quantities of water are in the system the treatment of water to prevent premature scaling of the main exchanger is necessary.

The formation of scale heat compromises the efficiency of the thermic exchanger because small areas of scale cause a high increase of the temperature of the metallic walls and therefore add to the thermal stress of the heat exchanger.

Demineralised water is more aggressive so in this situation it is necessary to treat the water with an appropriate corrosion inhibitor.

Any treatment of water by additives in the system for frost protection or for corrosion inhibition has to be absolutely suitable for all metals used in the circuit.

The use of a corrosion inhibitor in the system such as Fernox MB-1, BetzDearborn Sentinel X100 or Fernox System Inhibitor is recommended to prevent corrosion (sludge) damaging the boiler and system;

If anti-freeze substances are to be used in the system, check carefully that they are compatible with the metals used in the circuit.

ARISTON suggests the use of suitable anti-freeze products such as Fernox ALPHI 11, which will prevent rust and incrustation taking place.

Periodically check the pH balance of the water/anti-freeze mixture of the boiler circuit and replace it when the amount measured is out of the range stipulated by the manufacturer ($7 < \text{pH} < 8$).

DO NOT MIX DIFFERENT TYPES OF ANTI-FREEZE

In under-floor systems, the use of plastic pipes without protection against penetration of oxygen through the walls can cause corrosion of the systems metal parts (metal piping, boiler etc), through the formation of oxides and bacterial agents.

To prevent this problem it is necessary to use pipes with an "oxygen proof barrier", in accordance with standards DIN 4726/4729. **If pipes of this kind are not used, keep the system separate by installing heat exchangers of those with a specific system water treatment.**

IMPORTANT

Failure to carry out the water treatment procedure will

invalidate the appliance guarantee.

System Controls

The boiler connections for external controls are 24V. ARISTON supply a range of wired and wireless system controls. Contact your supplier for more details.

Location

The boiler can be installed on any suitable internal wall (suitable sound proofing may be required when installing onto a stud partition wall). Provision must be made to allow for the correct routing of the flue and siting of the terminal to allow the safe and efficient removal of the flue products. A compartment or cupboard may be used provided that it has been built or modified for this purpose. It is not necessary to provide permanent ventilation for cooling purposes. Detailed recommendations are given in BS 5440 Part 2. If it is proposed that it is to be installed in a timber framed building then reference should be made to IGEM Document, IGE/UP/7 or advice sought from Gas Safe.

Where a room sealed appliance is installed in a room containing a bath or shower, the appliance and any electrical switch or appliance control, utilising mains electricity should be situated specifically in accordance with current IEE Wiring Regulations.

For unusual locations, special procedures may be necessary. **BS 6798** gives detailed guidance on this aspect.

INSTALLATION

Condensate Discharge

The condensate discharge hose from the boiler must have a continuous fall of 2.5° and must be inserted by at least 50mm into a suitable acid resistant pipe - e.g. plastic waste or overflow pipe. The condensate discharge pipe must have a minimum diameter of 22mm, must have a continuous fall and preferably be installed and terminated to prevent freezing.


The discharge pipe must be terminated in a suitable position:

- Connecting into an internal soil stack (at least 450mm above the invert of the stack). A trap giving a water seal of at least 75mm must be incorporated into the pipe run, there also must be an air break upstream of the trap.
- Connecting into the waste system of the building such as a washing machine or sink trap. The connection must be upstream of the washing machine/sink. If the connection is downstream of the waste trap then an additional trap giving a minimum water seal of 75mm and an air break must be incorporated in the pipe run, as above.
- Terminating into a gully, below the grid level but above the water level
- Into a soakaway


Note: If any condensate pipework is to be installed externally then it should be kept to a minimum and be insulated with a waterproof insulation and have a continuous fall. The total length of external pipe used should not exceed 3 metres.

Some examples of the type of condensate terminations can be found below.


1. Connection of condensate discharge pipe to internal soil and vent stack.

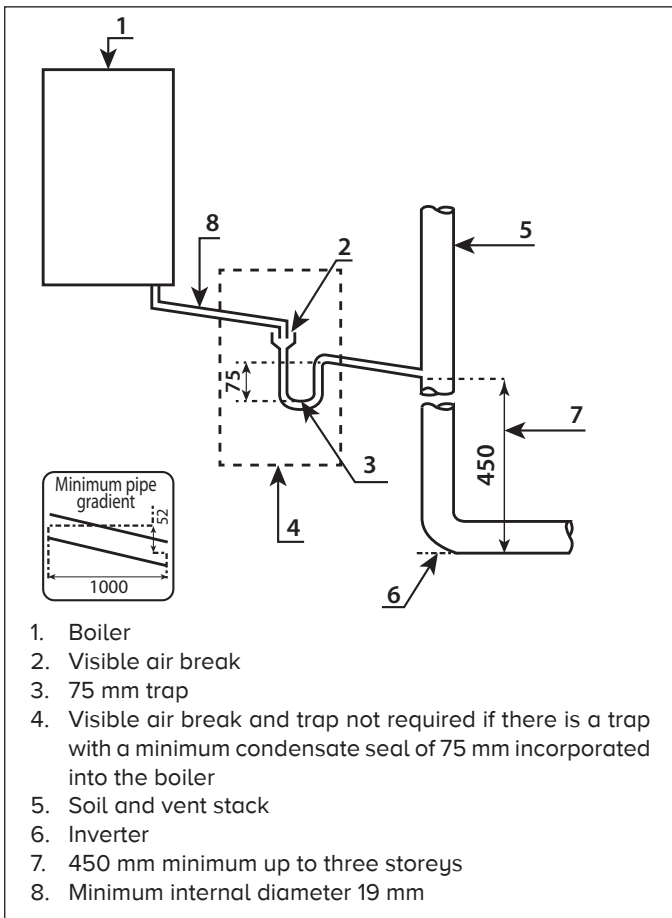

2(a). Connection of condensate discharge pipe downstream of a sink, basin, bath or shower waste trap.

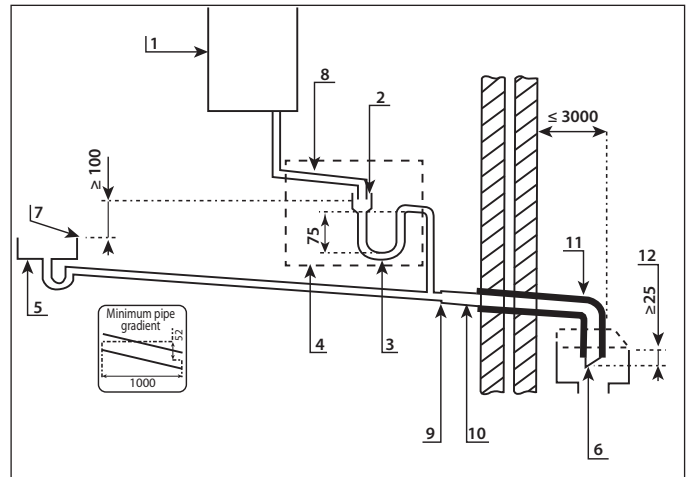


2(b). Connection of condensate discharge pipe upstream of a sink, bath or shower waste trap.

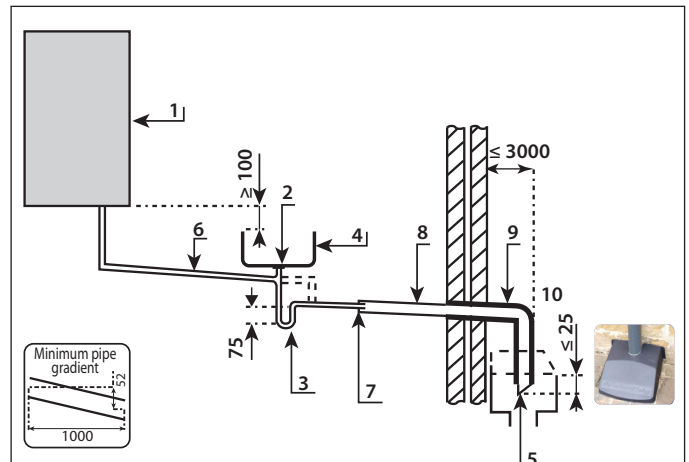


INSTALLATION

3. Connection of condensate pump - typical method (NB manufacturer's detail instructions should be followed).

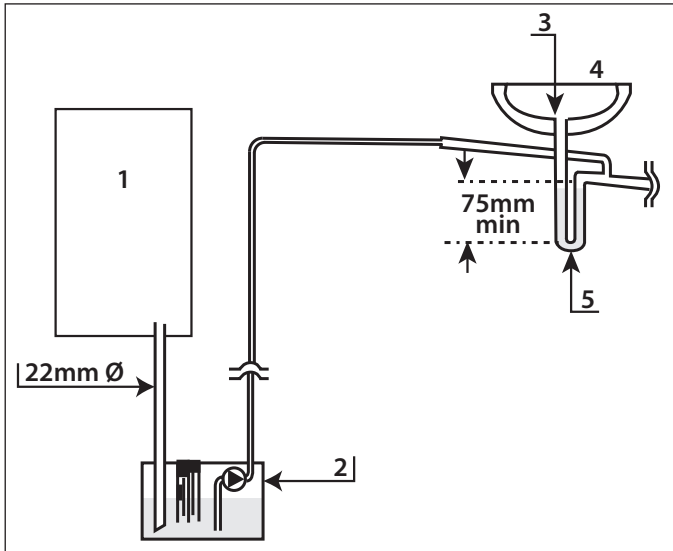


1. Condensate discharge from boiler
2. Condensate pump
3. Visible air break at plug hole.
4. Sink or basin with integrated overflow.
5. 75 mm sink waste trap.

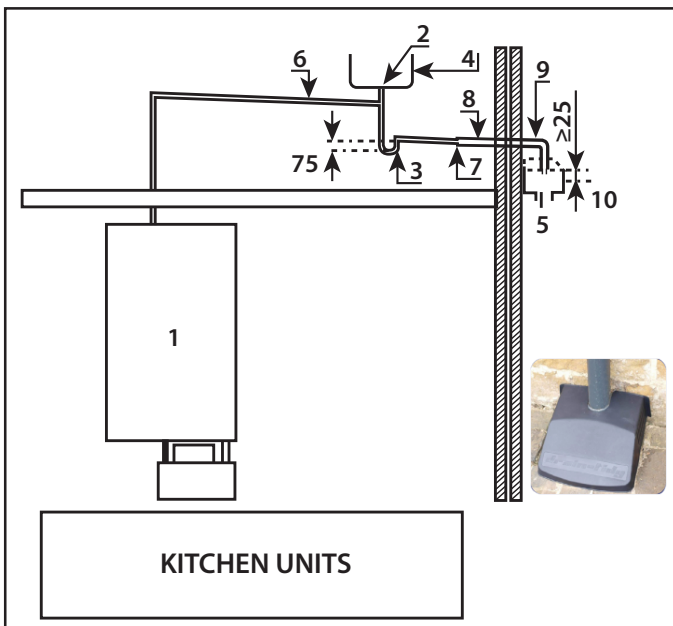

1. Boiler
2. Visible air break at plug hole
3. 75 mm sink, basin, bath or shower waste trap.
4. Sink, basin, bath or shower with integral overflow.
5. Open end of condensate discharge pipe direct into gully 25 mm min below grating but above water level; end cut at 45°. Note: the maximum external condensate discharge length is 3 metres.
6. Minimum internal diameter 19 mm.
7. Pipe size transition
8. Minimum internal diameter 30 mm
9. Water/weather proof insulation.
10. Fit drain cover/leaf guard


4. Connection of condensate discharge pipe to external soil and vent stack.

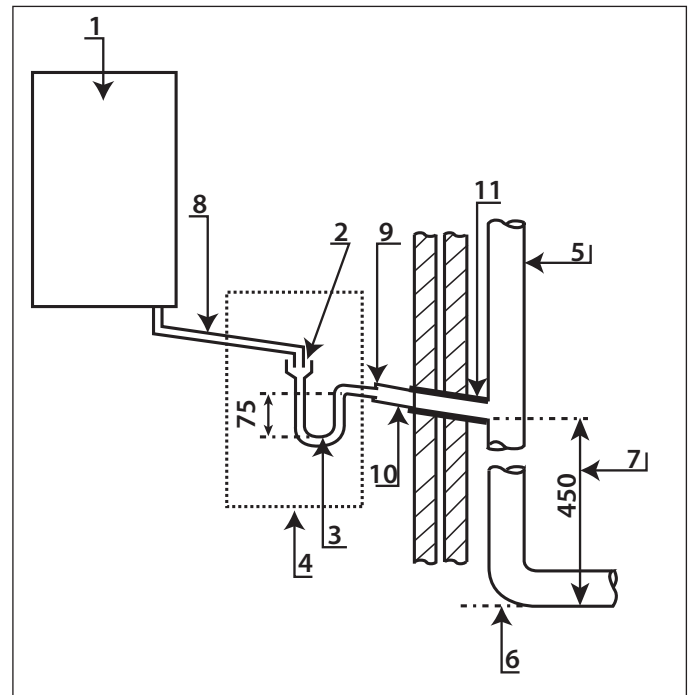

1. Boiler
2. Visible air break
3. 75 mm trap
4. Visible air break and trap not required if there is a trap with a minimum condensate seal of 75 mm incorporated into the boiler.
5. Soil and vent stack.
6. Inverter.
7. 450 mm minimum up to three storeys
8. Minimum internal diameter 19 mm.
9. Pipe size transition point
10. Minimum internal diameter 30 mm
11. UV resistant, Water/ weather proof insulation.


INSTALLATION

5. External termination to rainwater downpipe (NB only combined foul/rainwater drain)

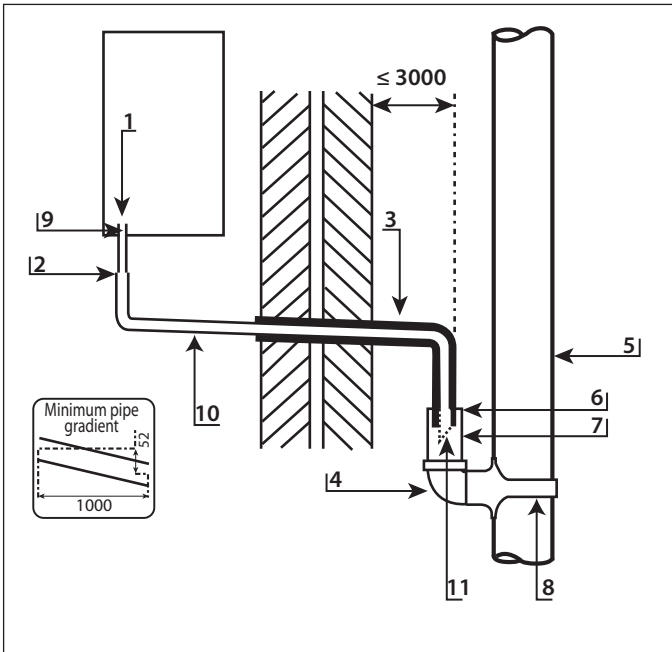


- | | |
|--|-------------------------------------|
| 1. Condensate discharge pipe from boiler | 6. External air break |
| 2. Pipe size transition point | 7. Air gap |
| 3. Water/weather proof insulation. | 8. 68mm PVCu strap on fitting |
| 4. 43mm 90° male/female bend | 9. Minimum internal diameter 19mm |
| 5. External rainwater pipe into foul water | 10. Minimum internal diameter 30 mm |
| | 11. End cut at 45°. |

6. External drain, gully or rainwater hopper

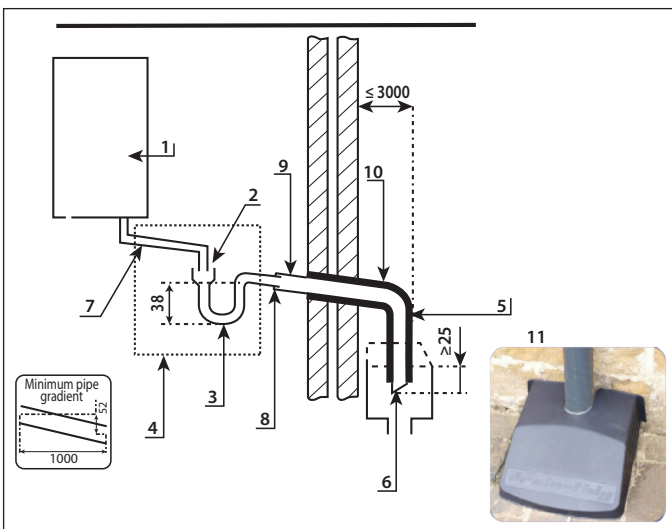

- | | |
|---|--|
| 1. Boiler | 6. Open end of condensate discharge pipe directly into gully 25mm min below grating but above water level: end cut 45° |
| 2. Visible air break | 7. Minimum internal diameter 19 mm |
| 3. 38mm visible trap | 8. Pipe size transition point |
| 4. Visible air break and trap not required if there is a trap with a minimum condensate seal of 38mm incorporated into the boiler | 9. Minimum internal diameter 30 mm |
| 5. External length of pipe 3m maximum | 10. Water/weather proof insulation. |
| | 11. Fit drain cover/leaf guard. |

7. Example of a purpose made soakaway

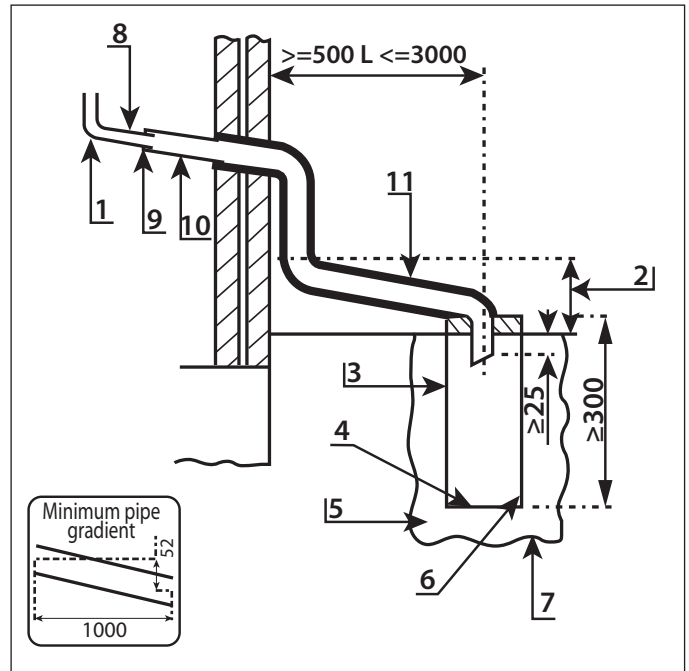

- | | |
|--|---|
| 1. Condensate discharge pipe from boiler | 50mm from bottom of tube and facing away from house |
| 2. Ground (this section of the condensate discharge pipe may be run either above or below round level); End cut at 45° | 7. Hole depth 400mm minimum by 300mm diameter |
| 3. Diameter 100mm minimum plastic tube | 8. Minimum internal diameter 19 mm |
| 4. Bottom of tube sealed | 9. Pipe size transition point |
| 5. Limestone chippings | 10. Minimum internal diameter 30 mm |
| 6. Two rows of three 12mm holes at 25mm centres, | 11. Water/weather proof insulation. |

INSTALLATION

Installing the Boiler

Please check that you are familiar with the installation requirement before commencing work.

The installation accessories described in the following list are included in the boiler packaging:

- Hanging bracket
- A paper template
- Gas isolation valve (compression)
- Washers
- Installation, Servicing and User manual
- Flue gasket
- Fixing screws



Method of positioning the boiler on the wall

The paper template can be used to ensure the correct positioning of kitchen cabinets etc.

The paper template has to be fixed to the wall and used to locate the position of the hanging bracket and the centre for the flue hole.

Drill and plug the wall and secure the hanging bracket using the screws provided, ensure the hanging bracket is fixed square on the wall. Remove the boiler from its packaging. Place the boiler on the hanging bracket.

Connecting the boiler to the system

- Remove the boiler casing as described on page 14
- Remove the cap and connect the gas isolation valve to the boiler using the washer provided (C) page 13;

Filling the system/condensate discharge

Fill the central heating and bleed air from the system as described in the Commissioning Instructions.

The system should be carefully checked for leaks, as frequent refilling could cause premature system corrosion or unnecessary scaling of the heat exchanger.

Pay special attention not to bend the condensate silicone drain pipe in such a way as to interrupt the flow. Please only use drain pipe material compatible with condensate products (refer to BS 6798:2014).

The condensate flow can reach 2 litres/hour because of the acidity of the condensate products (Ph close to 2), take care before operation.

See page 12 for condensate discharge options.


Gas connection

Make sure, using the labels on the packaging and the data plate on the appliance itself, that the boiler is in the correct country and that the gas category for which the boiler was designed corresponds to one of the categories available in the country where it will be used.


The gas supply piping must be created and measured out in compliance with specific legal requirements and in accordance with the maximum power of the boiler; ensure the gas isolation valve is connected correctly, see drawing opposite.

Check that the supplied gas corresponds to the type of gas for which the boiler was designed (see the data plate located on the appliance itself).

It is also important to check that the pressure of the gas (methane or LPG) you will be using to feed the boiler is suitable, because if it is insufficient the power may be reduced, causing inconvenience for the user.

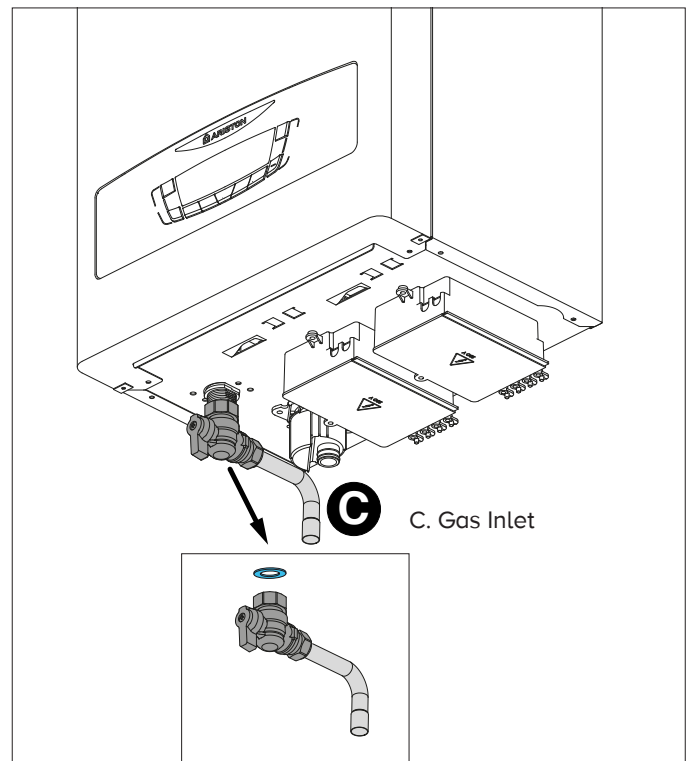

Central Heating connection



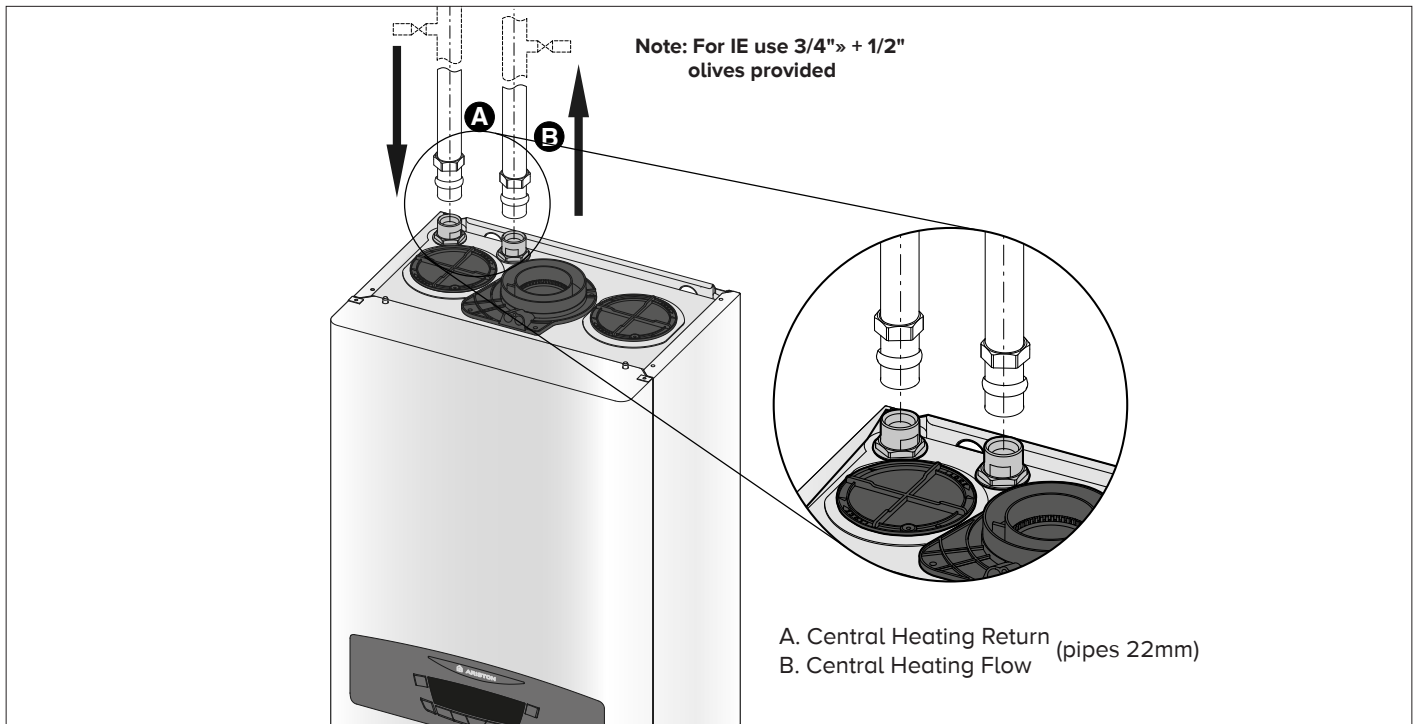


Instructions for opening the casing and performing an internal inspection

Before performing any work on the boiler, first disconnect it from the electrical power supply using the isolator switch, removing the fuse and shutting off the gas valve.

To access the inside of the boiler, the following is necessary:

1. Loosen the two screws on the front casing (a), pull it forwards and unhook it from the upper pins (b)
3. Remove the control panel (c)
4. Unhook the two clips on the combustion chamber panel and lift off (d).

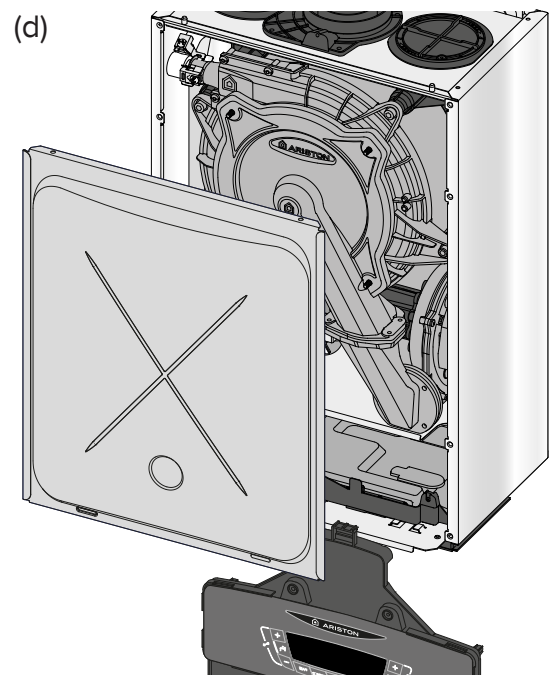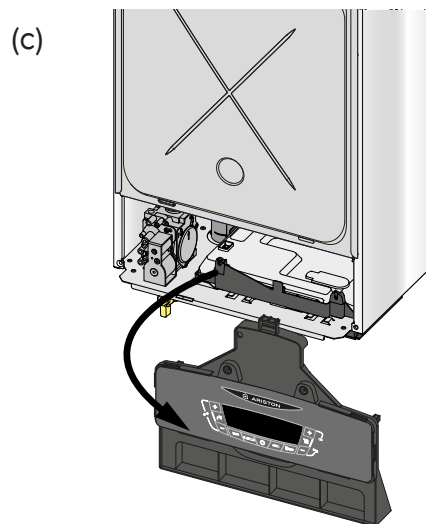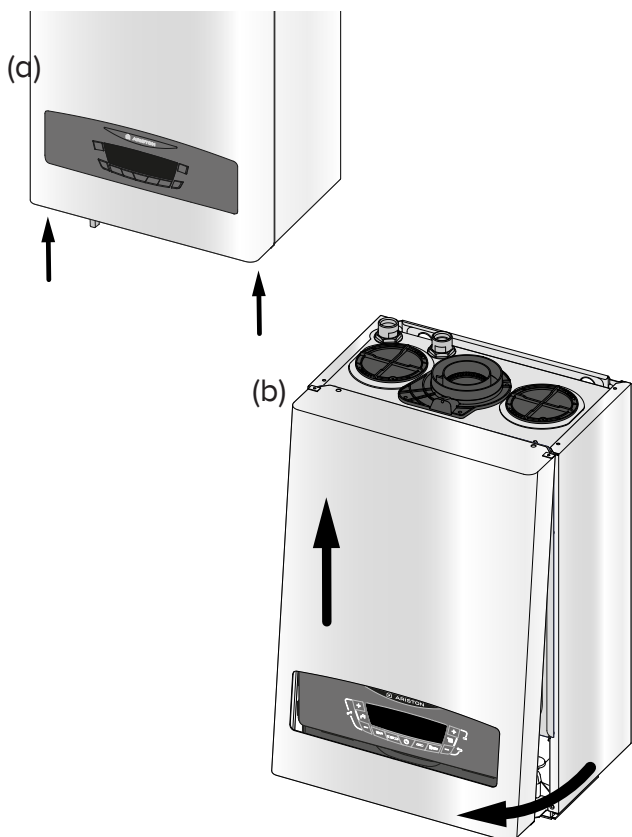

INSTALLATION



BEFORE THE EQUIPMENT IS USED, FOR THE FIRST TIME THE TRAP MUST BE FILLED WITH WATER. TO DO THIS, ADD APPROXIMATELY 1/4 LITRE OF WATER VIA THE FLUE OUTLET BEFORE FITTING THE FLUE SYSTEM, OR UNSCREW THE CAP ON THE TRAP POSITIONED UNDERNEATH THE BOILER, FILL IT WITH WATER AND REFIT IT



**WARNING!
INSUFFICIENT WATER IN THE TRAP CAN TEMPORARILY CAUSE THE FLUE GAS TO BE EXPELLED INTO THE SURROUNDING AMBIENT AIR**



Water circuit diagram

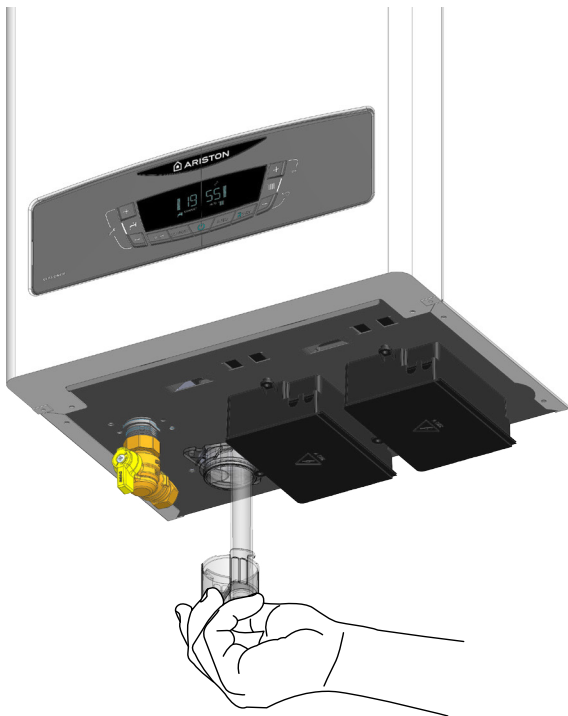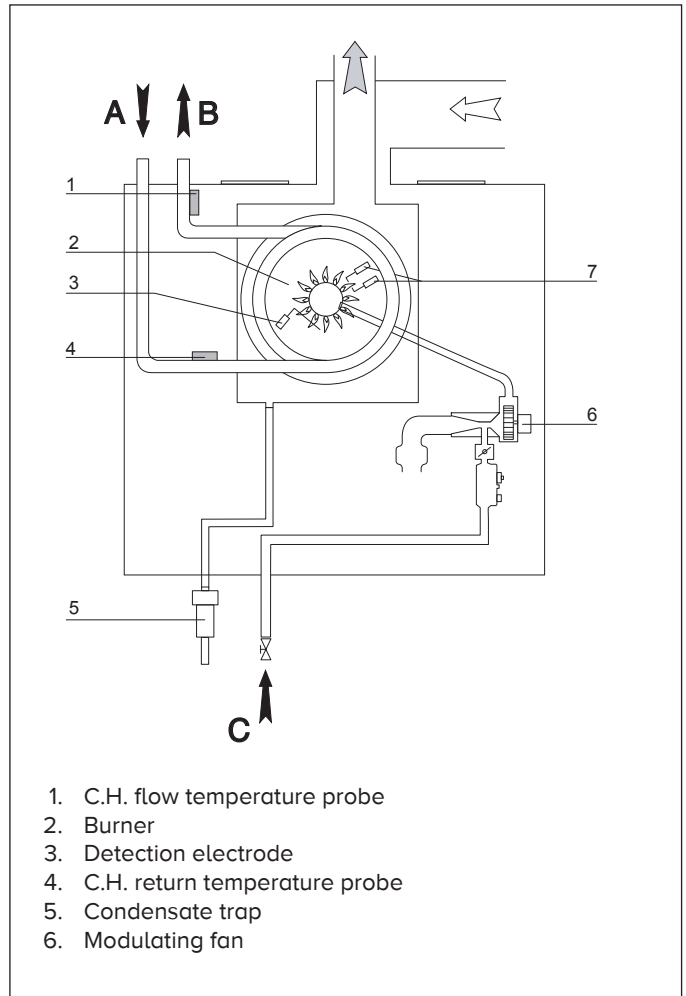

INSTALLATION

Connecting the Flue

Flue System

The provision for satisfactory flue termination must be made as described in BS 5440-1:2008.

The appliance must be installed so that the flue terminal is exposed to outdoor air.

The terminal must not discharge into another room or space such as an outhouse or lean-to.

It is important that the position of the terminal allows a free passage of air across it at all times.


The terminal should be located with due regard for the damage or discolouration that might occur on buildings in the vicinity, it must also be located in a place not likely to cause nuisance.

In cold or humid weather water vapour may condense on leaving the flue terminal.

The effect of such "steaming" must be considered.

If the terminal is less than 2 metres above a balcony, above ground or above a flat roof to which people have access, then a suitable stainless steel terminal guard must be fitted.

The minimum acceptable spacing from the terminal to obstructions and ventilation openings are specified in Fig. 1.

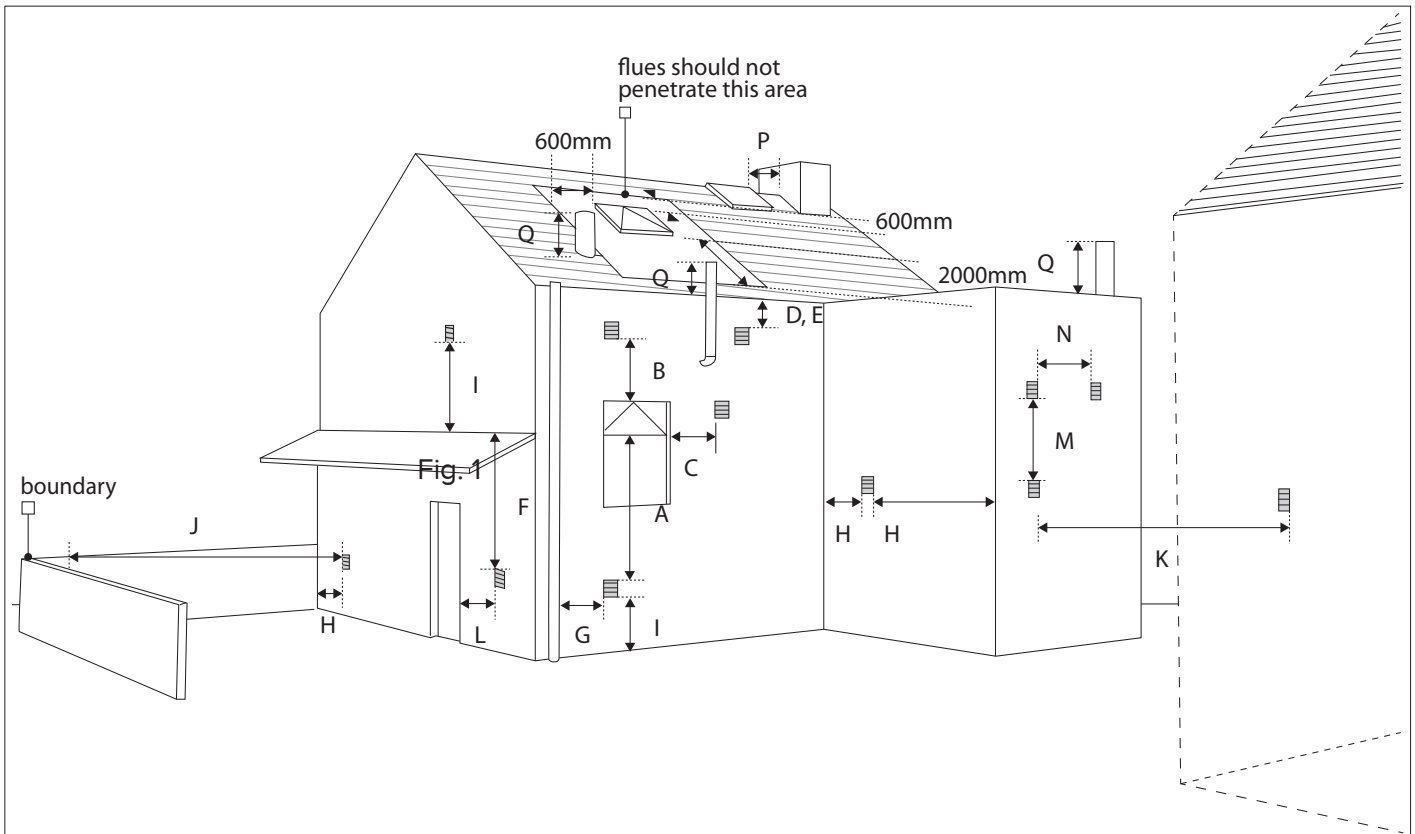

Location		Fanned draught
A	Below an opening	300
B	Above an opening	300
C	Horizontally to an opening	300
D	Below gutters, soil pipes or drain pipes	75
E	Below eaves	200
F	Below balcony or car port roof	200
G	From a vertical drain pipe or soil pipe	150
H	From an internal or external corner, or to a boundary alongside the terminal	300
I	Above ground, roof or balcony level	300
J	From a surface or a boundary facing the terminal	600
K	From a terminal facing the terminal	1200
L	From an opening in the car port into the building	1200
M	Vertically from a terminal on the same wall	1500
N	Horizontally from a terminal on the same wall	300
P	From a structure on the roof	N/A
Q	Above the highest point of intersection with the roof	

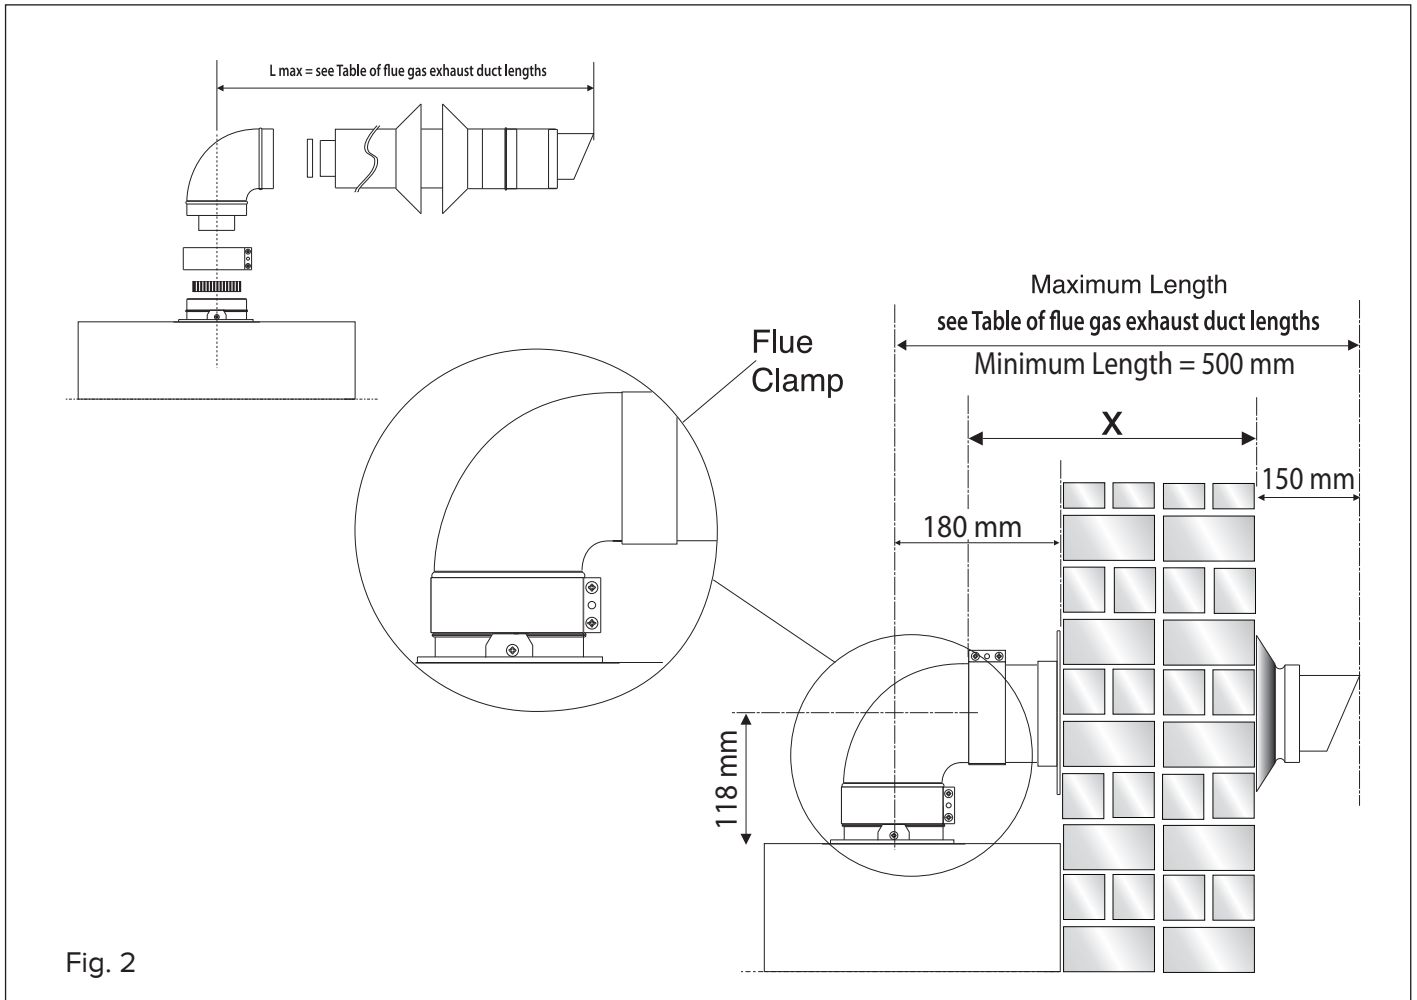


Fig. 2

Warning

The exhaust gas ducts must not be in contact with or close to inflammable material and must not pass through building structures or walls made of inflammable material. When replacing an old appliance, the flue system must be changed.

Important

Ensure that the flue is not blocked. Ensure that the flue is supported and assembled in accordance with these instructions.

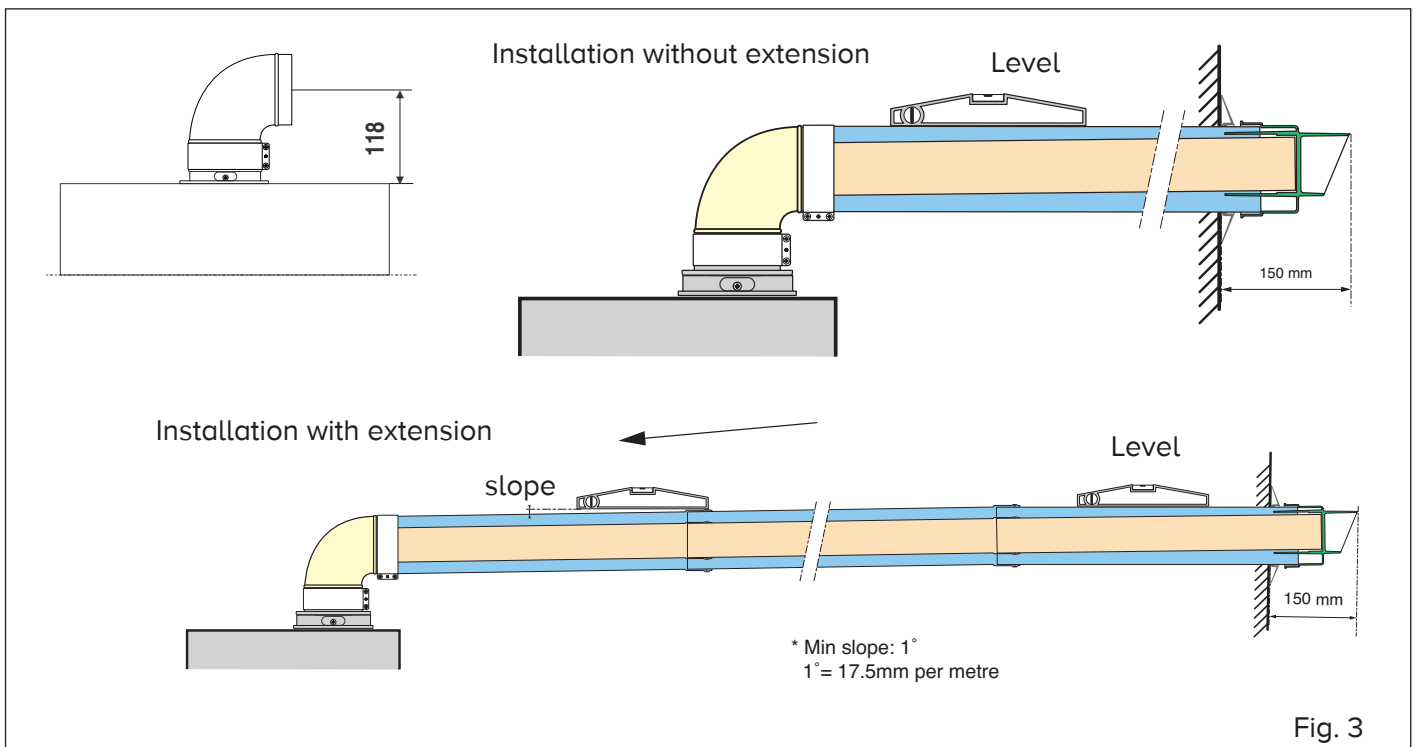


Fig. 3

INSTALLATION

Fitting the Coaxial Flue

(Ø 60 / 100 Horizontal)

Contents:

- 1x Silicone O-Ring (60mm)
- 1x Elbow (90°)
- 2x Wall Seals (Internal & External)
- 1x Flue Pipe including Terminal (1 metre - 60/100)
- 2x Flue Clamps
- 4x Screws
- 2x Seals

Once the boiler has been positioned on the wall, fit the rubber flue seal into the internal flue turret (see diagram opposite), Insert the elbow into the socket and rotate to the required position. note: It is possible to rotate the elbow 360° on its vertical axis.

Using the flue clamp, seals and screws supplied (Fig 4) secure the elbow to the boiler.

The 1 metre horizontal flue kit (3318073) supplied is suitable for an exact X dimension of 753mm.

Measure the distance from the face of the external wall to the face of the flue elbow (X - Fig 2), this figure must now be subtracted from 753mm, you now have the total amount to be cut from the plain end of the flue.

Note: A Plume management kit is available for 60/100 horizontal termination. Instructions for installation are supplied with the Plume management kit.

Draw a circle around the outer flue and cut the flue to the required length taking care not to cut the inner flue, next cut the inner flue ensuring that the length between the inner and outer flue is maintained. (Fig 4).

e.g.

$$X = 555\text{mm}$$

$753 - 555 = 198\text{mm}$ (Length to be cut from the plain end of the flue).

Once cut to the required length, ensure that the flue is free from burrs and reassemble the flue. If fitting the flue from inside of the building attach the outer wall seal to the flue terminal and push the flue through the hole, once the wall seal has passed through the hole, pull the flue back until the seal is flush with the wall. Alternatively, the flue can be installed from outside of the building, the outer seal being fitted last.

Should the flue require extending, the flue connections are push fit, however, one flue bracket should be used to secure each metre of flue.

Note: See table for maximum and minimum flue runs.

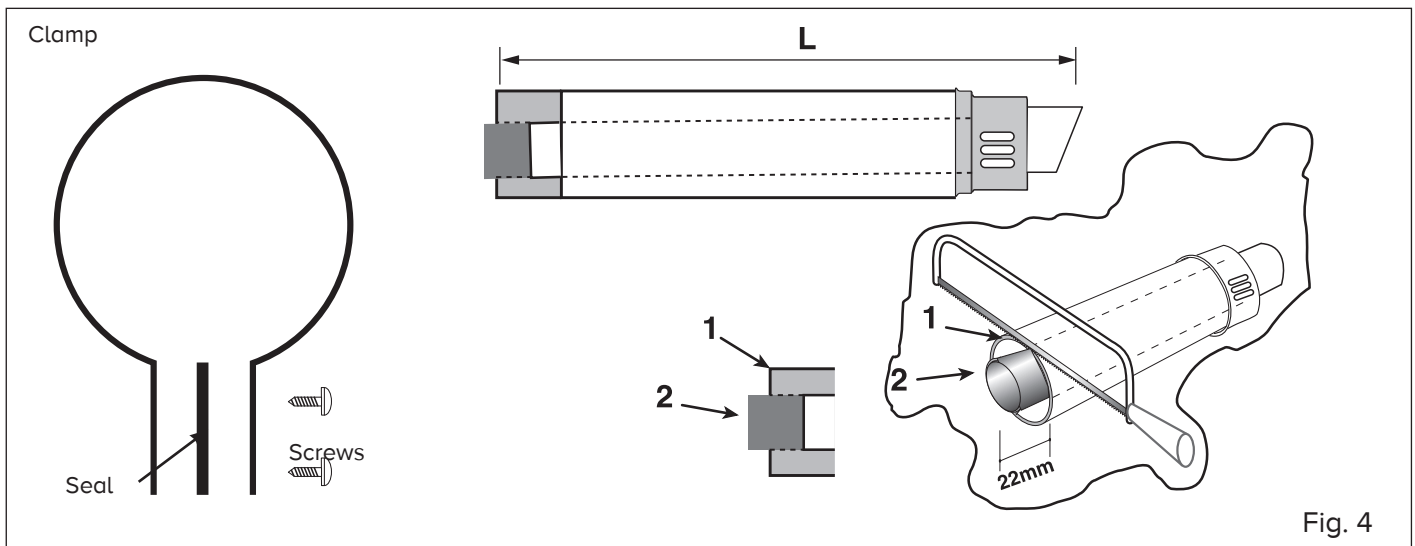


Fig. 4

Fitting the 5" Flue

(Ø 80 / 125 Horizontal/vertical)

Once the boiler has been positioned on the wall, it is necessary to insert the Ø80/125 adaptor (Fig. 5) for both horizontal and vertical flue runs into the boiler flue socket (not supplied with flue kit - Part No 3318095).

Push the adaptor onto the boilers flue connection, grease the seals then add extensions or elbows as required, secure the adaptor, using the clamp and screws provided.

To fit extensions or elbows it is first necessary to ensure that the lip seal is fitted correctly into the inner flue, once verified, it is simply necessary to push them together, no clamps are necessary to secure the flue components.




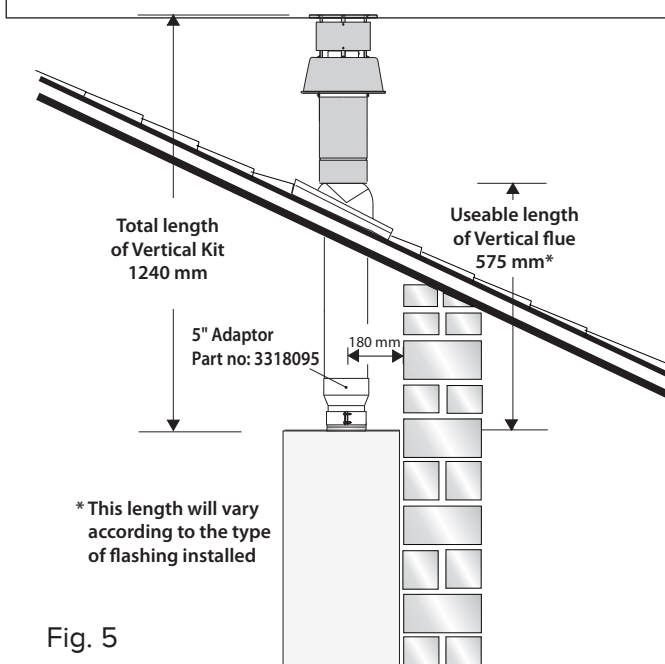


Fig. 5

INSTALLATION

Before proceeding to fit the flue, ensure that the maximum flue length has not been exceeded (See the tables) and that all elbows and bends have been taken into consideration, for each additional 90° elbow 1 metre must be subtracted from the total flue length, and for each 45° 0.5 metres must be subtracted from the total flue length (the height of the vertical adaptor and a 45° bend can be seen in Fig. 6 and a 90° bend in Fig. 7).

Note: DO NOT cut the vertical flue kit.

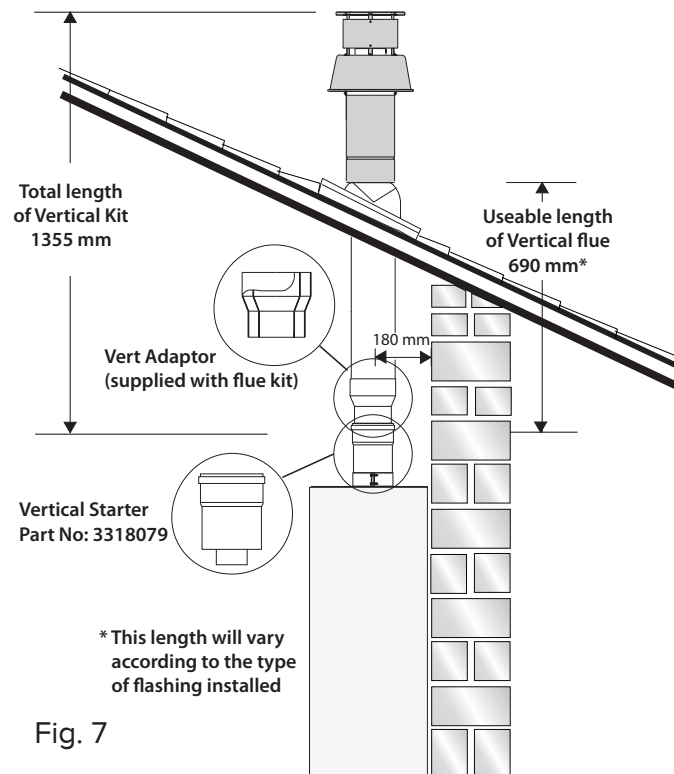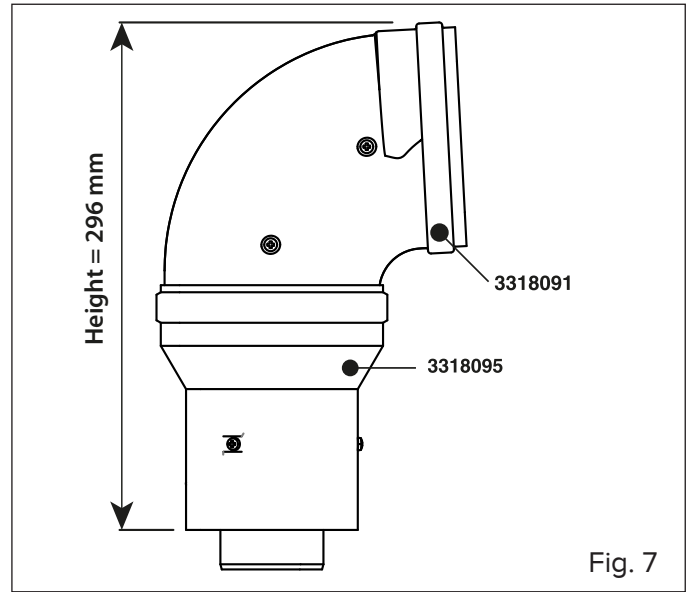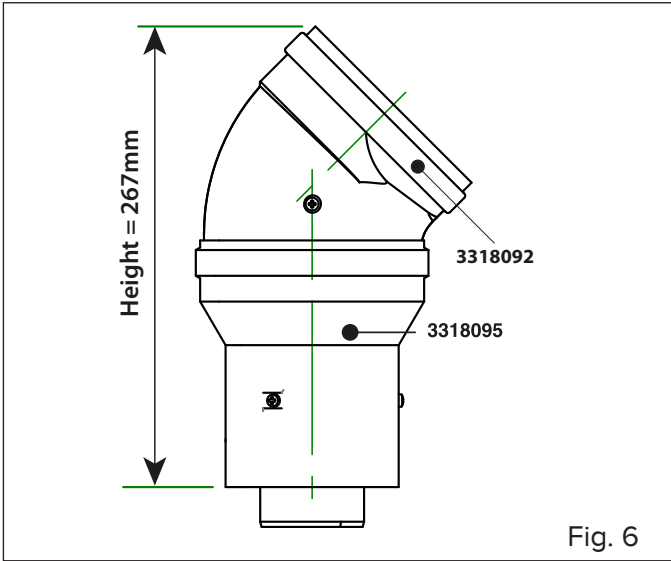

Before proceeding to fit the flue, ensure that the maximum flue length has not been exceeded (See the tables) and that all elbows and bends have been taken into consideration, for each additional 90° elbow 1 metre must be subtracted from the total flue length, and for each 45° 0.5 metres must be subtracted from the total flue length (the height of the vertical adaptor and a 45° bend can be seen in Fig. 8).

Mark the position of the flue hole in the ceiling and/or roof (see Fig. 7 for distance from wall to the centre of the flue).

Cut a 130mm diameter hole through the ceiling and/or roof and fit the flashing plate to the roof.

Fitting the Coaxial Flue

(Ø 60 / 100 Vertical)


Note: See table for maximum and minimum flue runs.

Contents:

- 1x Conical Adaptor (60/100mm)
- 1x Vertical Flue Kit (80/125mm)

The vertical flue kit is supplied with a specially designed weather proof terminal fitted, it can be used either with a flat roof or a pitched roof.

The Vertical flue kits usable lengths with the pitched roof flashings are indicated in Fig. 7.

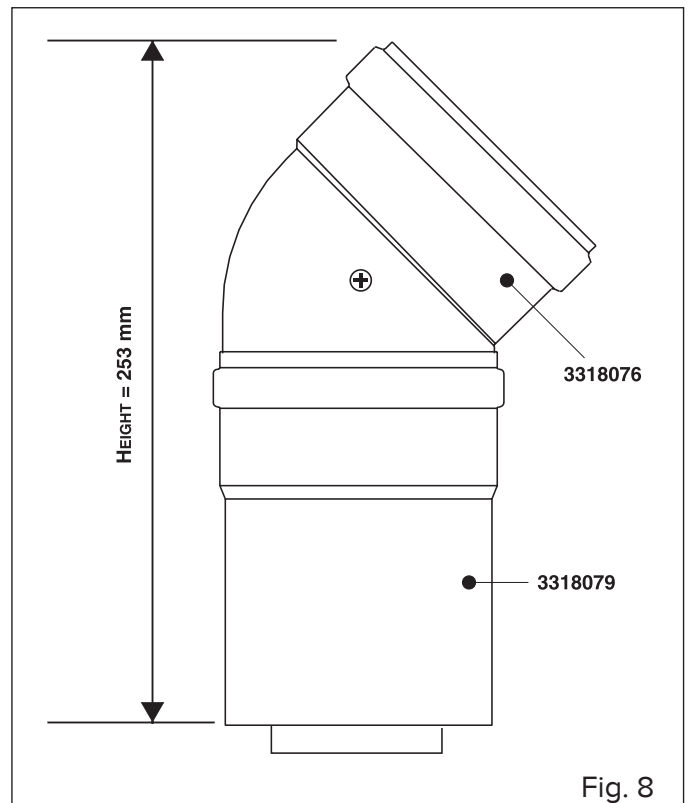

INSTALLATION

DO NOT cut the vertical flue kit.


To connect the vertical flue kit directly to the boiler, place the vertical starter kit (Part No. 3318079) (see Fig. 7) onto the exhaust manifold and secure with the clamp, fit the vertical adaptor onto the vertical starter kit (note: there is no need to use a clamp to secure this as it is a push fit connection), the vertical flue kit must then be inserted through the roof flashing, this will ensure that the correct clearance above the roof is provided as the terminal is a fixed height.

Should extensions be required, they are available in 1 metre (Part No. 3318077), 500mm (Part No. 3318078) and they must be connected directly to the vertical starter kit before connecting the adaptor to allow the vertical flue kit to be fitted. In the event that extension pieces need to be shortened, they must only be cut at the male end and it must be ensured that the inner and outer flue remain flush.

When utilising the vertical flue system, action must be taken to ensure that the flue is supported adequately to prevent the weight being transferred to the appliance flue connection by using 1 flue bracket per extension.

When the flue passes through a ceiling or wooden floor, there must be an air gap of 25mm between any part of the flue system and any combustible material. The use of a ceiling plate will facilitate this. Also when the flue passes from one room to another a fire stop must be fitted to prevent the passage of smoke or fire, irrespective of the structural material through which the flue passes.

Fitting the Twin Pipe (Ø80 / 80)

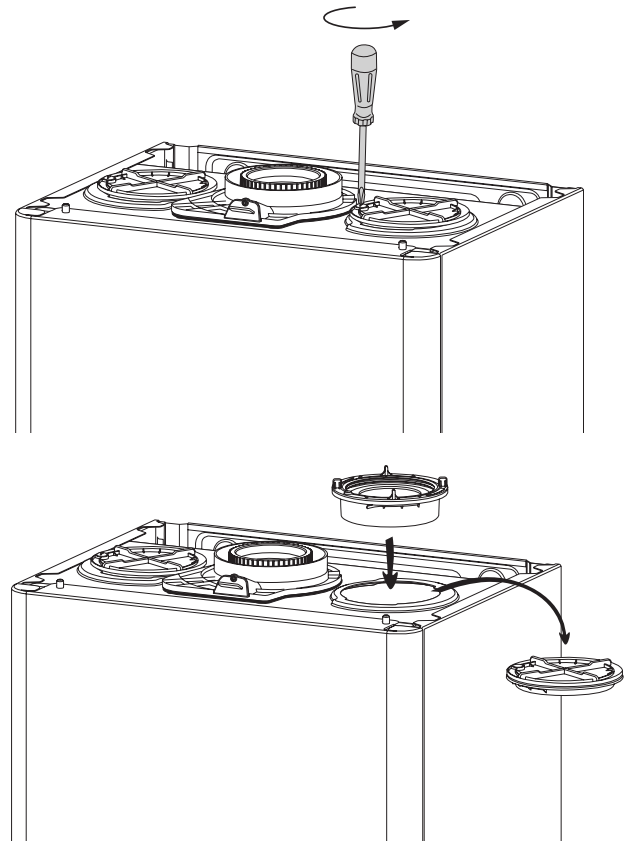

Note: See table for maximum and minimum flue runs.

Where it is not possible to terminate the flue within the distance permitted for coaxial flues, the twin flue pipe can be used by fitting a special adaptor to the flue connector and using the aperture for the air intake located on top of the combustion chamber.

Always ensure that the flue is adequately supported, using one flue bracket per extension and avoiding low points. (ARISTON supply suitable clamps as Part No. 705778).

To utilise the air intake it is necessary to:

- 1) Take the air intake cover off the top of the appliance
- 2) Assemble the flange on the header supplied with the boiler
- 3) Insert the header on the tube or the elbow up until the lower stop (you do not have to use the washer).
- 4) Insert the elbow/header in the boiler air intake hole and fasten it with screws.

The twin flue pipes can be fitted with or without additional elbows and need no clamps, simply ensure that the lip seal is inserted in the female end of the flue pipe and push the extension piece fully into the previous section of flue pipe or elbow, check that the lip seal is not dislodged when assembling the flue (greasing the seal will aid assembly).

Twin pipe can also be converted back to Coaxial flue to enable vertical termination with a coaxial kit by using the pipe bridge (Twin - Coaxial Adaptor - Part No. 3318089). When running the twin flue pipe vertically.

It is not possible to terminate concentrically horizontally. Termination is only possible with separate air and exhaust terminals.

INSTALLATION


When siting the twin flue pipe, the air intake and exhaust terminals must terminate on the same wall, the centres of the terminals must be a minimum of 280 mm apart and the air intake must not be sited above the exhaust terminal (refer to Fig. 10). The air intake pipe can be run horizontally, however, the terminal and the final 1 metre of flue must be installed either horizontally or with a slight fall away from the boiler to avoid rain ingress.

It is also strongly recommended that the air intake pipe run be constructed of insulated pipe to prevent condense forming on the outside of the tube.

Ensure the exhaust tube has a minimum fall back to the boiler of 1° / metre ($1^\circ = 17.5\text{mm/metre}$)

The maximum permissible flue length for twin flue is dependent on the type of run used (see table on page 22).


For further information relating to flue runs not illustrated, please contact the Technical Department on 0333 240 7777.

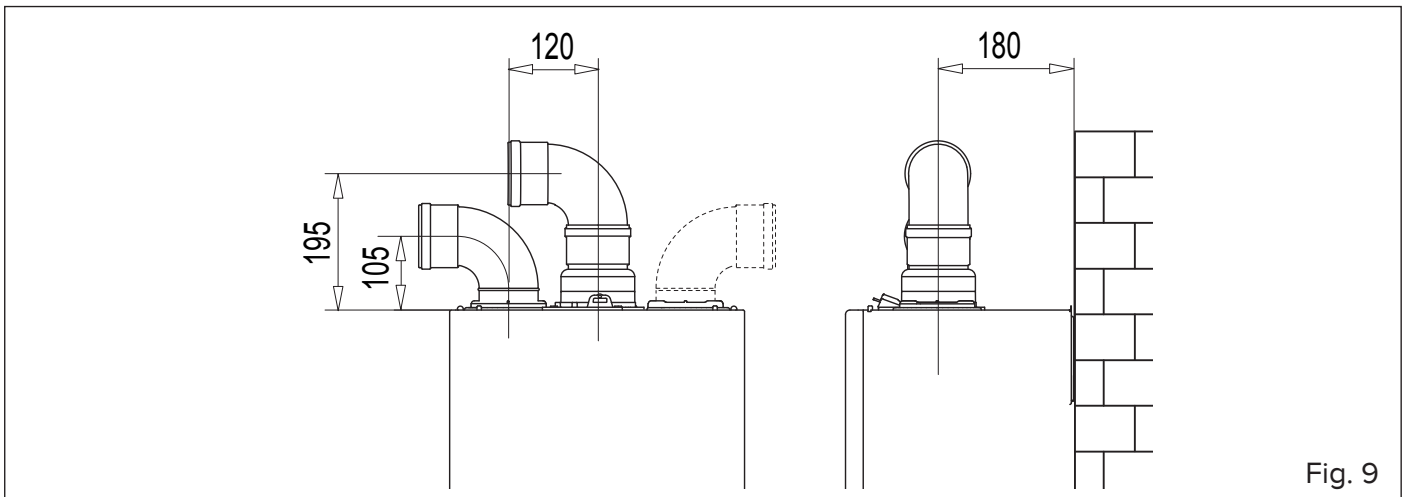

For coaxial systems, the maximum development value, mentioned in the table below also takes into account an elbow. For twin flue systems the maximum development value, mentioned in the table includes the exhaust gas/air intake terminal.

Twin flue systems outlets should respect the following instructions:

- 1- Use the same $\varnothing 80$ mm flue pipes for the air intakes and exhaust gas ducts.
- 2- If you need to insert elbows in the air intake and exhaust gas ducts, you should consider for each one the equivalent length to be included in the calculation of developed length.
- 3- The exhaust gas duct should jut above the roof by at least 0.5 m.
- 4- The intake and exhaust gas ducts in Type C13 + C53 must be installed on the same wall, or where the exhaust is vertical and the air intake horizontal, the terminals must be on the same side of the building.

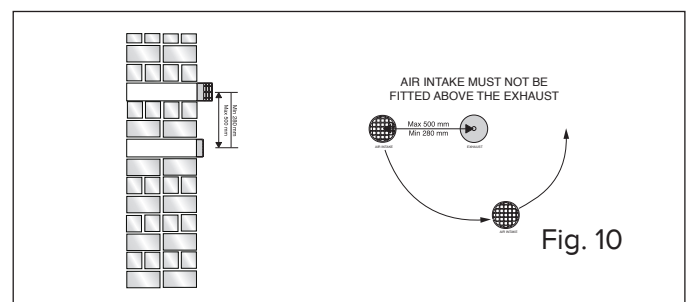






INSTALLATION

Table of flue gas exhaust duct lengths

FLUE TYPE		Maximum Extension Exhaust-air (m)		Diameter of pipe (mm)
		CLAS ONE R		
		15	24	
Coaxial System	C13 C33 C43	13	12	ø 60/100
	C13 C33 C43	30	36	ø 80/125
		S1 = S2		ø 80/80
Twin-pipe System	C13	38	36	
	C33	46	60	
	C43			
	C53	S1 + S2		
		76	84	ø 80/80

S1 = Air intake S2 = Flue gas exhaust

S1 = S2 - Air intake and flue gas exhaust equal lengths
S1 + S2 - Air intake and flue gas exhaust unequal lengths

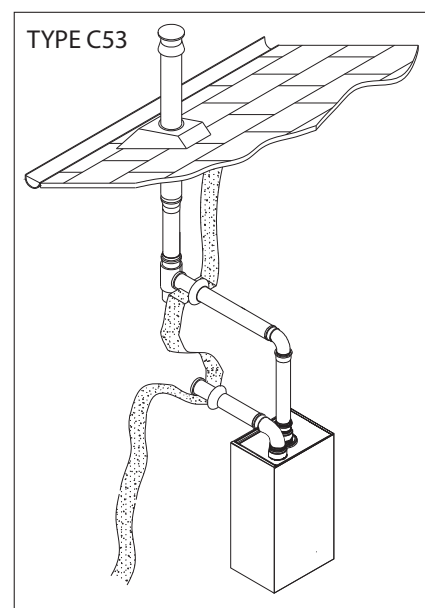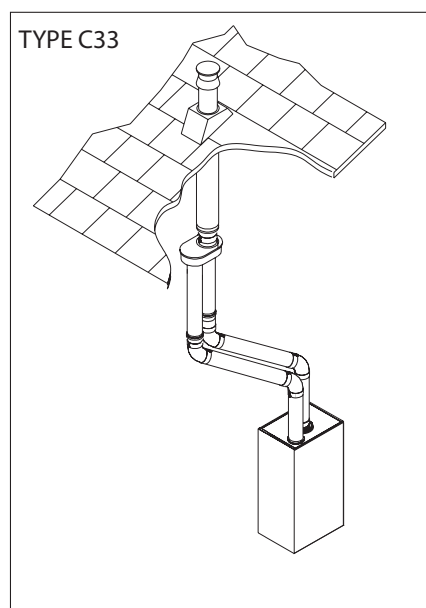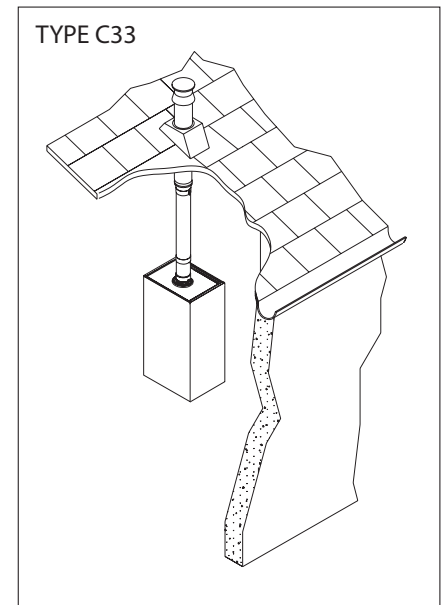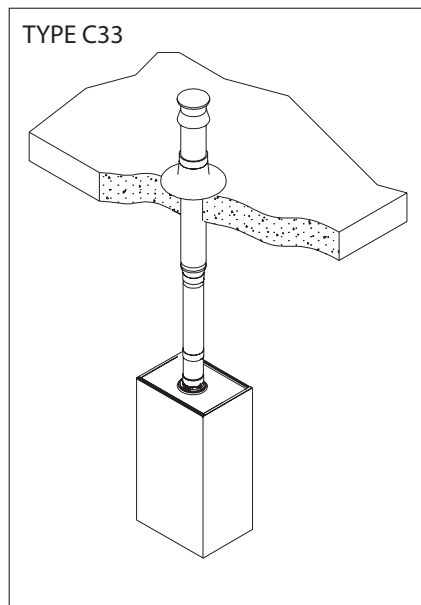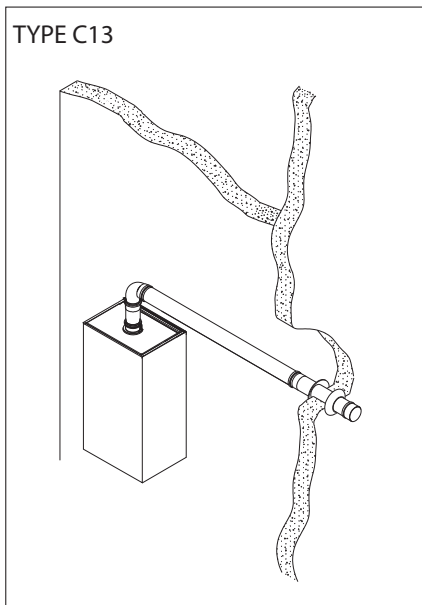

WARNING!
BEFORE PERFORMING ANY WORK ON THE BOILER, FIRST DISCONNECT IT FROM THE ELECTRICAL POWER SUPPLY USING THE ISOLATOR SWITCH AND REMOVE THE FUSE.




Electrical connections

For increased safety, ask a qualified technician to perform a thorough check of the electrical system. The manufacturer is not responsible for any damage caused by the lack of a suitable earthing system or by the malfunctioning of the electricity mains supply. Make sure that the system is able to withstand the maximum power absorbed by the boiler (this is indicated on the appliance data plate). Check that the section of the wires is suitable and is not less 0,75 mm². The appliance must be connected to an efficient earthing system if it is to operate correctly. The power supply cable must be connected to a 230V-50Hz network, where the L-N poles and the earth connection are all respected.

IMPORTANT!

IN THE EVENT THAT THE POWER SUPPLY CABLE MUST BE CHANGED, REPLACE IT WITH ONE WITH THE SAME SPECIFICATIONS.


Power supply cable



Important!
 The appliance is supplied with a fly-lead already connected, this must be connected to a 240V supply fused at 3 Amp and must facilitate completed electrical isolation of the appliance, by use of a fused double pole isolator having a contact separation of at least 3mm in all poles or alternatively by means of a 3A fused three pin plug and unswitched shuttered socket outlet both complying with BS1363.



The use of multiplug, extension leads or adaptors is strictly prohibited. It is strictly forbidden to use the piping from the hydraulic, heating and gas systems for the appliance earthing connection. The boiler is not protected against the effects caused by lightning. If the mains fuses need to be replaced, use 2A rapid fuses.

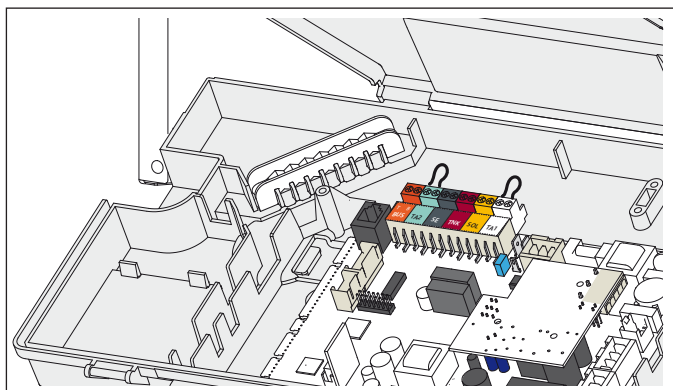

Electrical connection unit

To access the electrical connection unit carry out the following steps:



- Disconnect the boiler from the power supply
- Loosen the screws on the cover of the outside connection boxes below the boiler (see diagram below)
- Open the cover
- The connection PCB may be accessed in order to connect :

Connection box a

- Main supply
- Live to pump
- Zone valves
- Outdoor sensor
- Switched live connection/s
- Cylinder stat

Connection box b

- Live to pump

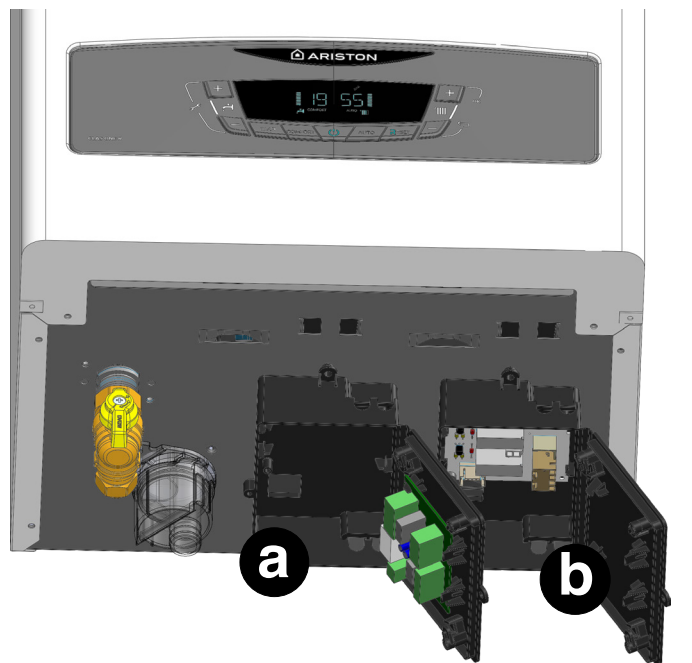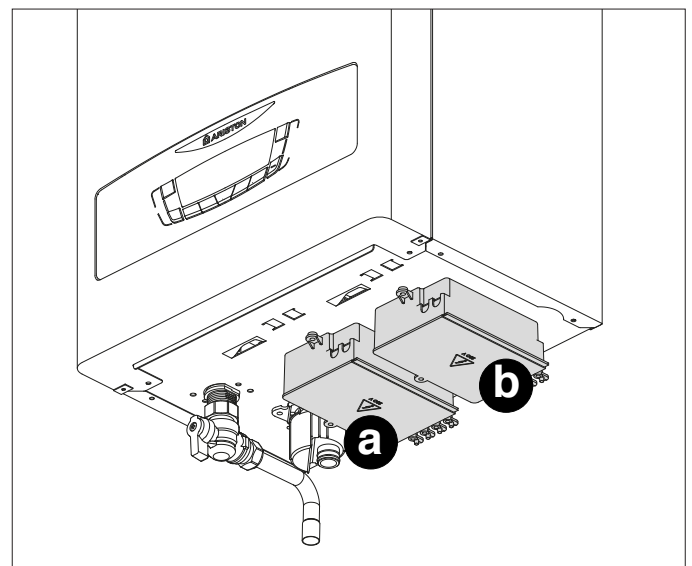

Caution!
 For the connection and positioning of the wires belonging to optional peripheral units, please refer to the installation manuals of these units.




INSTALLATION


Electrical diagram

For increased safety, ask a qualified technician to perform a thorough check of the electrical system.

The manufacturer is not responsible for any damage caused by the lack of a suitable earthing system or by the malfunctioning of the electricity mains supply.

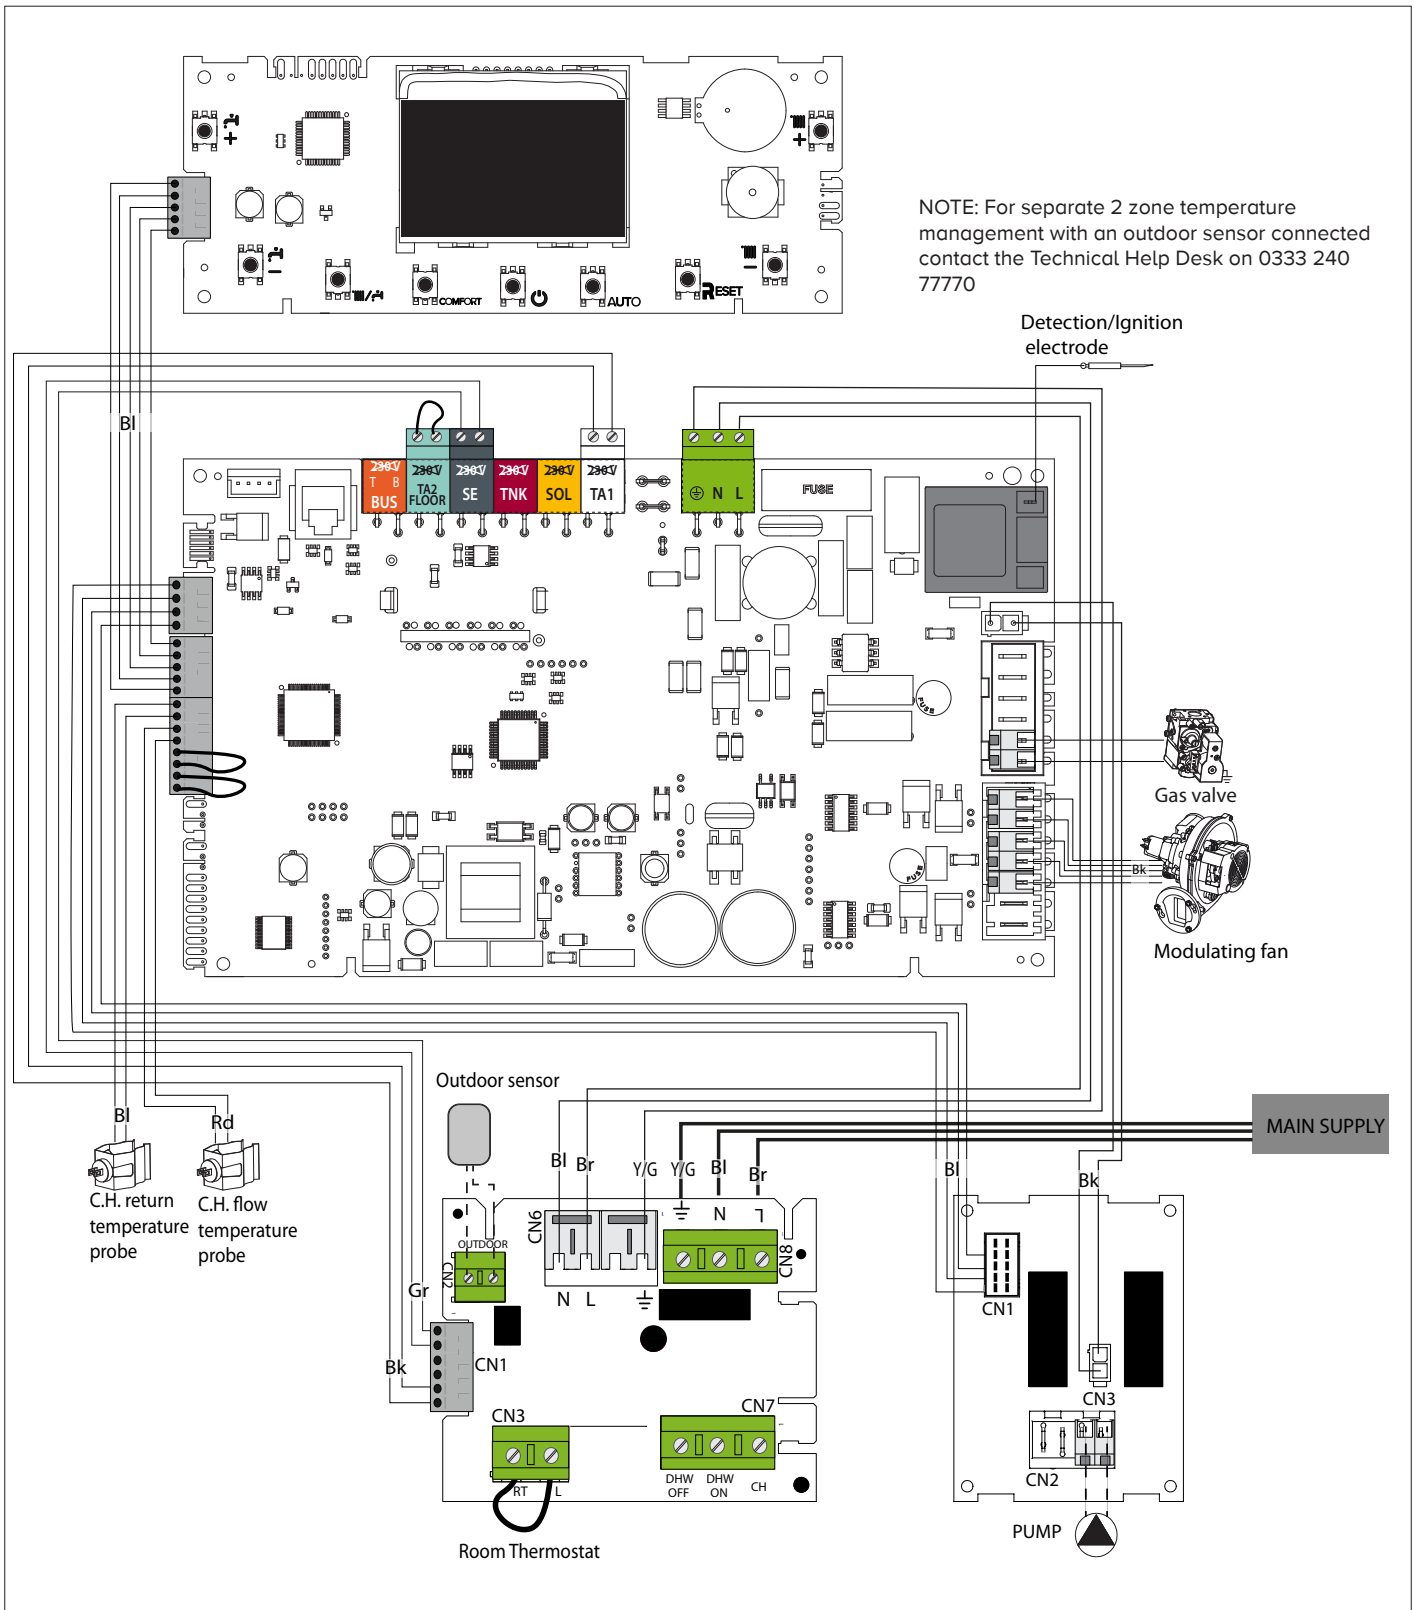

S Plan system utilizing external 2 channel programmer and Ariston hot water cylinder

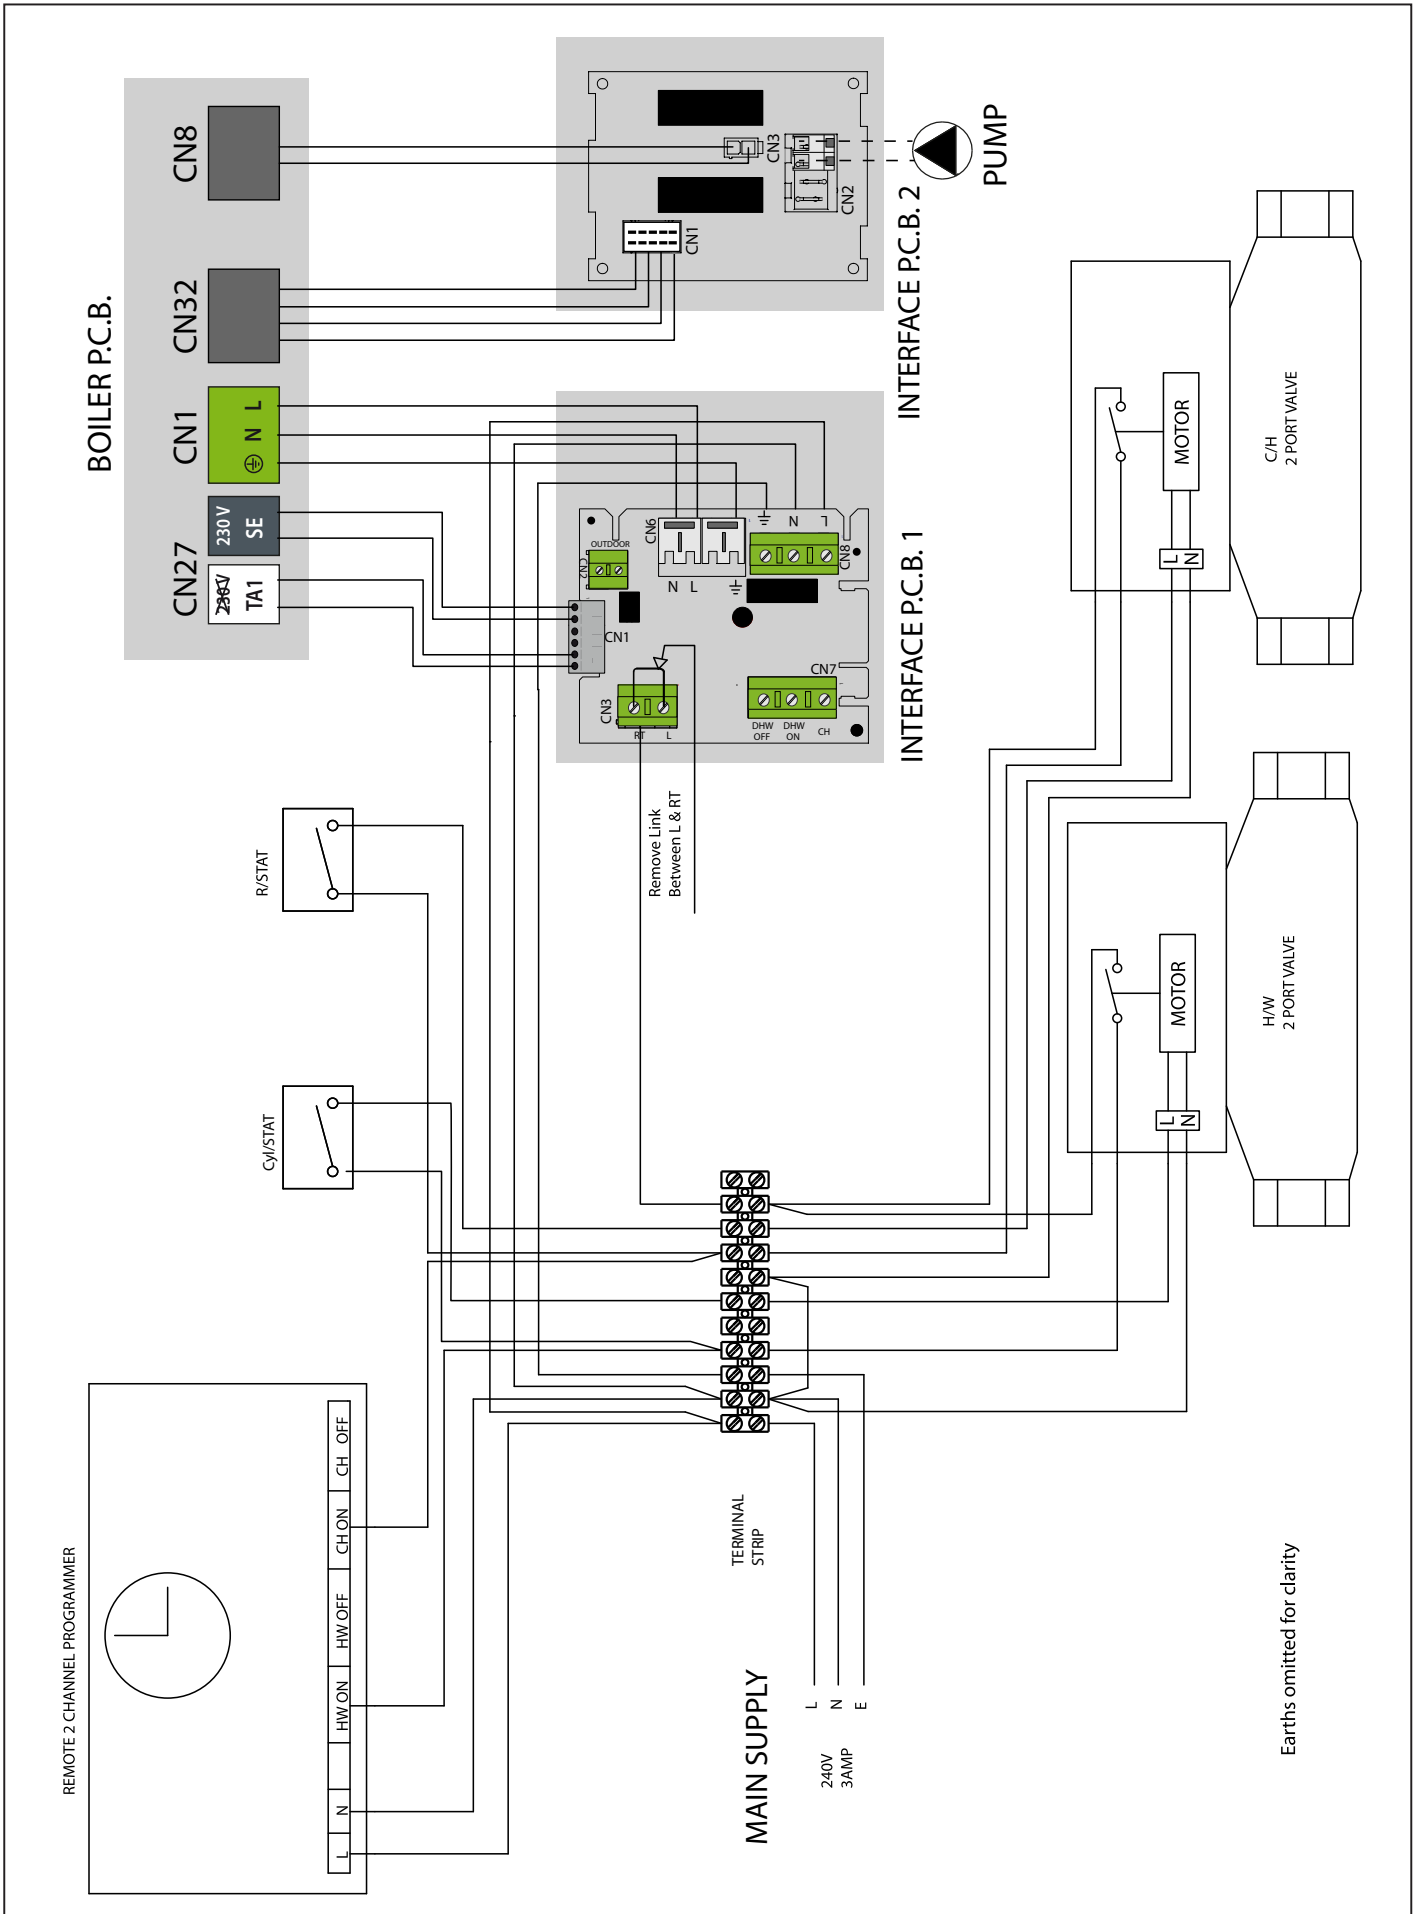

COMMISSIONING

Initial preparation

Ariston UK Ltd support the benchmark initiative. On pages 59 and 60 of this manual the Benchmark Commissioning Checklist and Service interval Record can be found. It is important that this is completed in the presence of your customer, they are shown how to use it, and it is signed by them. Please instruct your customer that they must have this manual with them whenever they contact a service engineer or us.

Preliminary electrical system checks to ensure electrical safety must be carried out by a competent person i.e. polarity, earth continuity, resistance to earth and short circuit.

Electricity supply

- Check that the voltage and frequency of the electricity supply correspond to the data shown on the boiler data plate;
- Make sure that the earthing connection is efficient.

Filling the Heating System:

Close all air release valves on the central heating system;

Open system

Fill the boiler system via the feed and expansion tank.

Gas Supply:

Inspect the entire installation including the gas meter and test for tightness. The entire installation should be in accordance with the relevant standards. In GB this is IGEM/UP/1B ED.3 and in IE this is the current edition of IS 813:2014+A1.

The connection on the the appliance is a 15mm nut and olive located at the rear of the gas service cock.

If the gas supply serves other appliances, ensure that an adequate supply is available both to the boiler and the other appliances when they are in use at the same time.

Pipe work must be of an adequate size. The final pipe size must not be smaller than the appliance inlet size.

Pipe work must be of an adequate size.

Open the gas isolating valve (supplied with the connection kit) to the appliance and check the gas connection on the appliance for leaks.

Water Treatment:

The boiler is equipped with a stainless steel heat exchanger. The detailed recommendations for water treatment are given in BS7593:2019 (Treatment of water in domestic hot water central heating systems); the following notes are given for general guidance;

If the boiler is installed on an existing system, any unsuitable additives must be removed;

Under no circumstances should the boiler be fired before the system has been thoroughly flushed; the flushing procedure must be in line with BS7593:2019.

Firstly fill the central heating system with the power off, and flush through cold, fill the central heating system again, adding a flushing detergent, run the boiler on central heating until it reaches its operating temperature and flush the system, refill the system with a suitable corrosion inhibitor,

NOTE: FAILURE TO CARRY OUT THE FLUSHING PROCEDURE WILL RESULT IN THE WARRANTY BECOMING VOID.

FIRST IGNITION OPERATION

Date

Installer

1. Check the electrical supply.

Complete

2. Check the type of gas and change the gas if necessary.

Complete

3. Check the gas tightness.

Complete

4. Measure the gas inlet standing pressure

Complete

5. Check the Flue

Complete

6. Fill the installation.

Complete

7. Check the hydraulic water tightness.

Complete

8. Set the heating power.

Complete

9. Balance the central heating circuit.

Complete

10. Measure the gas inlet working pressure.

Complete

11. Check the boiler combustion.

Complete

12. Gas rate the appliance.

Complete

13. Explain to the end user how to use the boiler/ timer/control


Complete

14. Complete the Benchmark Log Book

Complete

Ignition procedure

Press the ON/OFF button on the control panel to switch on the boiler.

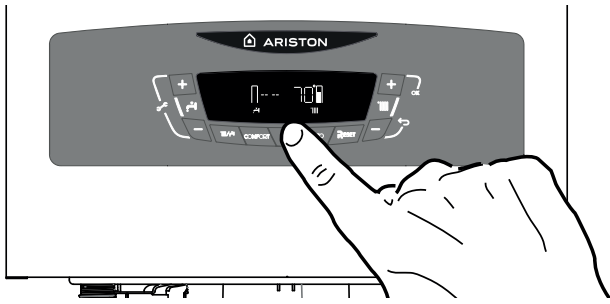

The display shows:

- the operating mode:



winter

- The figures indicate:
 - the flow temperature when no heating requests have been made
 - the flow temperature in central heating mode
 - the temperature of the hot water set in domestic hot water

The carrying out of certain functions is shown:

Deaeration cycle started	
Central Heating Post-circulation	

Electricity supply

- Check that the voltage and frequency of the electricity supply correspond to the data shown on the boiler data plate;
- Make sure that the earthing connection is efficient.

First ignition

1. Make sure that:

- The gas valve is closed;
- The electrical connection has been properly carried out. Make sure that, in any case, the green/yellow earthing wire is connected to an efficient earthing system;
- Use a screwdriver to lift the cap on the automatic air relief valve;
- Switch on the boiler (by pressing the ON/OFF button) and use the MODE button to select the standby mode, where no hot water or heating requests are made.

ATTENTION!

DEAERATION CYCLE

THE DEAERATION CYCLE IS AUTOMATICALLY ACTIVATED WHEN THE BOILER IS POWERED ON FOR THE FIRST TIME. THE DISPLAY SHOWS "PURGE". AT THE END OF THE FUNCTION (7 MINUTES) THE DISPLAY RETURNS TO NORMAL VIEW.

- Bleed the air from the system;
- The exhaust duct for combustion products should be suitable and free from any obstructions;
- Any necessary ventilation inlets in the room should be open (type B installation).
- Check whether the condensate trap contains water; if not, it must be refilled. If necessary, open the manual air vent on the main exchanger until complete filling.

N.B.: if the boiler will not be used for long periods, the trap should be filled before the boiler is started up again. It is dangerous not to refill the siphon as fumes may be released into the environment.

- Open the gas cock and check the connection seals, including the boiler connection joints, making sure that the meter does not detect any passage of gas. Eliminate any leaks.
- Start the boiler by selecting the heating or domestic hot water operation using the MODE button.

COMMISSIONING

Combustion checking procedure

The order of operations for this procedure must always be respected.

Competence and use of a combustion performance demonstrated to BS7967, Parts 1 to 4 standards must be carried out.



OPERATION 1

Supply pressure check

Loosen the screw **1** and insert the pressure gauge connection pipe into the pipe tap.

Switch the boiler on at maximum power.


To activate combustion test function:

- Press the mode selector to ensure the  icons displayed.
- Press & hold the reset button for 10 seconds. 'TEST' will appear on the screen. Ensure the boiler is on max power by pressing the button **2** .

The supply pressure should correspond to the value established in relation to the type of gas, for which the boiler is designed see Table summarising changes.

Note:


The absolute minimum working pressure measured at the inlet test nipple on the gas valve is 15.0 mbar.

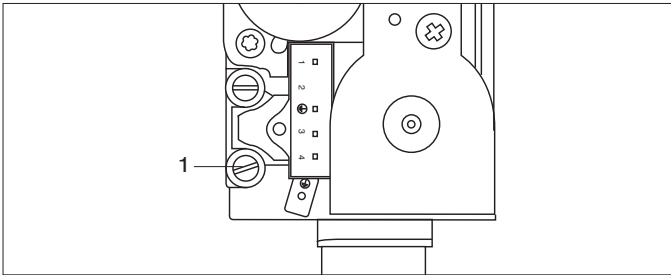

OPERATION 2

Preparing the measuring equipment

Connect the calibrated flue gas analyser to the left-hand combustion outlet by unscrewing the screw and removing the blanking cover.

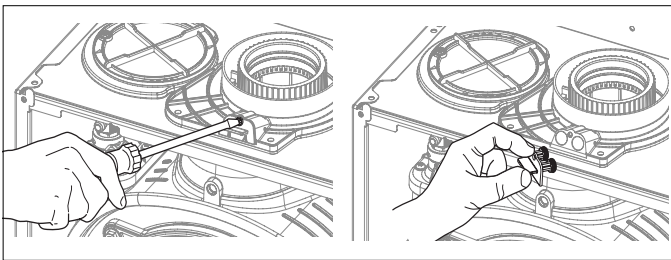


OPERATION 3



Adjusting the CO₂ at maximum gas flow rate (domestic hot water)



Select the Test function by pressing the **RESET** button for 10 seconds.

WARNING! BY ACTIVATING THE TEST FUNCTION, THE TEMPERATURE OF THE WATER SENT TO THE INSTALLATION IS LIMITED TO 88°C; CAUTION IS THEREFORE REQUIRED WITH REGARD TO LOW-TEMPERATURE INSTALLATIONS.

On the display appear **TEST** and the icon . The boiler is forced to the maximum heating power.



Press the **2**  button to forced the boiler at the maximum DHW power. On the display appear the icon .

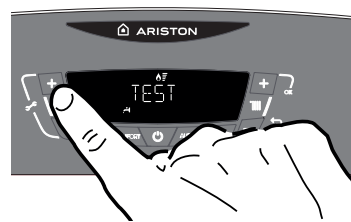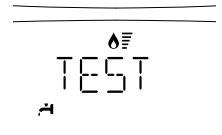

Wait 1 minute for the boiler to stabilise before carrying out the combustion analyses.

Read the CO₂ value (%) and compare it with the values given in the table below


CLAS ONE R 15 / 24		
Gas	CO ₂ (%) MAX	CO ₂ (%) MIN
G20	8,7% - 9,7%	8,2% - 9,2%
G31	9,7% - 10,7%	9,0% - 10,0%
ATTENTION! CO₂max – CO₂min > 0,5%		

N.B.: VALUES WITH THE CASING CLOSED.

If the CO₂ value (%) read differs from the values given in the table, then adjust the gas valve following the instructions below, otherwise move directly onto operation 4.

Adjusting the gas valve at maximum gas flow

Adjust the gas valve by turning setting screw **4** clockwise in increments to reduce the CO₂ level (a 1 turn adjusts the CO₂ level by approximately 0.2%). Wait 1 minute after each change

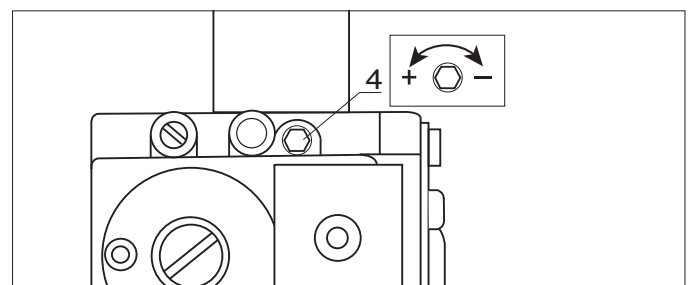



in setting for the CO₂ value to stabilise.


If the value measured corresponds to the value given in the table, max adjustment is complete, otherwise start the setting procedure again.

N.B. The Test function is automatically deactivated after 10 minutes or manually by briefly pressing the RESET button.

OPERATION 4

Checking the CO2 at minimum gas flow

With the Test function active, press the **2** button to select the icon  and . The boiler is forced to the minimum power.

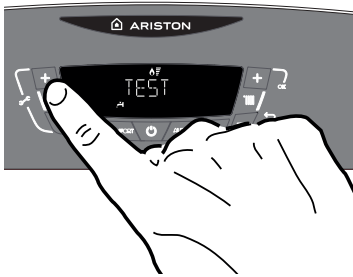

Wait 1 minute for the boiler to stabilise before carrying out the combustion analyses.
If the CO2 value (%) read differs by 0.5 % from the value found, then adjust the gas valve following the instructions below, otherwise move directly onto operation 5.

Adjusting the gas valve to minimum gas flow

Remove cap and adjust screw **2** by turning anti-clockwise in increments to reduce the CO2 level. Wait 1 minute after each adjustment for the CO2 value to stabilise.

WARNING! This adjustment is sensitive: a rotation of a 1 turn corresponds to 0.2% of CO2.

If the value measured corresponds to the value given in the table, adjustment is complete, otherwise start the setting procedure again.

Attention! If the value of the CO2 at the minimum power has been changed, it is necessary repeat the adjusting at maximum gas flow.

OPERATION 5

Ending the adjustment

Exit cleaning mode by pressing RESET.
Stop the draw-off.

Verify and repair any leaks of gas.
Refit the front panel to the device.
Refit the blanking cover at combustion test point.

menu 2 - Boiler parameters

submenu 3 - parameter 1 Maximum Heating Power adjustment

submenu 2 - parameter 0 Soft light Ignition

submenu 3 - parameter 5 Heating ignition delay

Maximum Heating Power adjustment

The maximum heating power can be adjusted to between the maximum power allowed by the boiler and the minimum power).

The display shows the value between 100% ("100" on the display) and 0% ("0") of this interval.

To check the maximum heating power, access menu 2/sub menu 3/parameter 1, check the value and, if necessary, modify it as indicated in the Gas Regulation table below. (See page 40 for more details).

Checking slow ignition power

The soft light can be adjusted between the maximum power (shown on the display as "100", i.e. 100%) and the minimum power (shown on the display as "1", i.e. 1%).


To check the slow ignition power, access menu 2/sub menu 2/parameter 0.

Heating ignition delay adjustment

This parameter – menu 2/sub menu 3/parameter 5 - can be used to manually (0) or automatically (1) set the delay time before the subsequent reignition of the burner after it has switched off on reaching the desired temperature in central heating mode.

By selecting manual, it is possible to set the delay in minutes using the successive parameter (menu 2/sub menu 3/parameter 6), to a time between 0 and 7 minutes.

Automatic selection means that the boiler will establish the delay time based on the set-point temperature

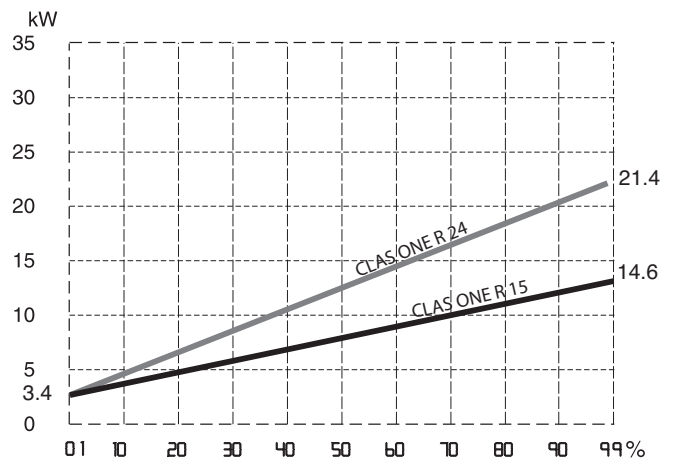

COMMISSIONING

Gas setting	parameters	CLAS ONE R 15		CLAS ONE R 24	
		G20	G31	G20	G31
Lower Wobbe index (15°C, 1013 mbar) (MJ/m ³)		45,67	70,69	45,67	70,69
Inlet Gas pressure (mbar)		20	37	20	37
Slow ignition	220	100	100	64	64
Maximum heating power setting	231	33	61	62	62
Minimum fan speed(%)	233	4	2	4	3
Domestic hot water maximum percentage	232	51	48	100	94
Maximum output fan speed (%)	234	51	48	85	49
Gas valve restrictor (ø) mm		NO	3,6	NO	3,6
Gas flow max/min (15°C, 1013 mbar) (nat - m ³ /h) (GPL - kg/h)	Max C.H.	1,59	1,17	2,33	1,71
	Min	0,39	0,29	0,39	0,29

Converting the appliance from Natural gas to LPG


These appliances are designed to operate with different gas types.

The appliance must only be converted for use with a different gas type by a Gas Safe Registered installer.


To convert the appliance to LPG:

(use these instructions in conjunction with the Instruction sheet supplied with the LPG Kit).


1. Electrically isolate the appliance (fig 1)
2. Turn off the gas supply (fig 2)

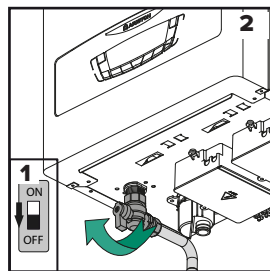


3. Remove the outer case, lower the front control panel.
4. Remove the silencer (fig 3)

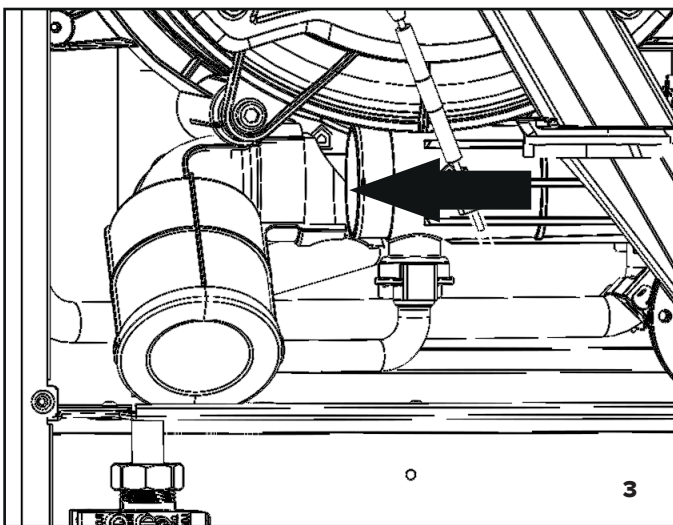

5. Disconnect the gas supply from the venturi assembly (fig 4)

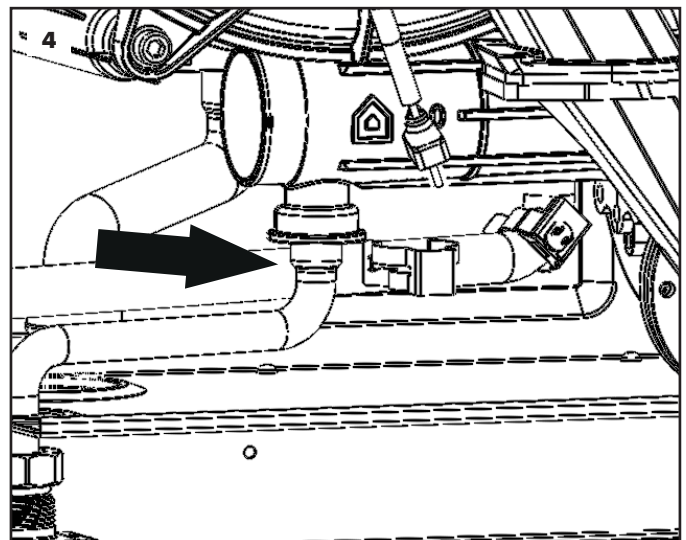

6. Inset the correct diaphragm (depending on the output of the appliance) into the venturi spigot (fig 5)

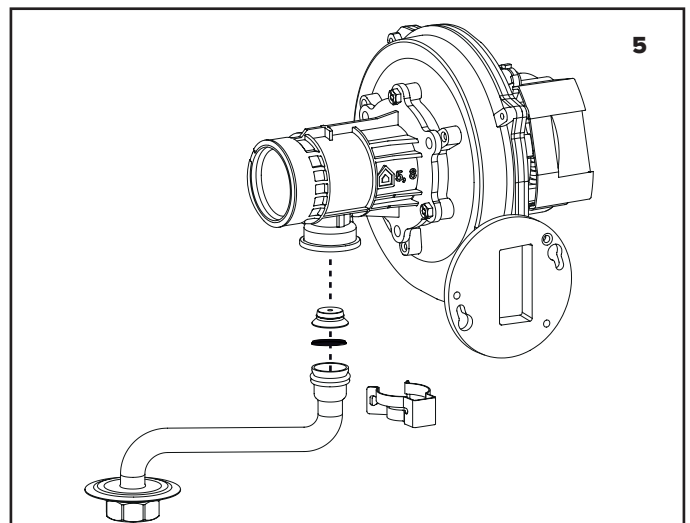

7. Reassemble the gas supply onto the venture assembly (fig 4) and reattach the silencer.
8. Turn on gas supply and test for tightness

COMMISSIONING

9. Purge gas supply
10. Turn the electrical supply on to the appliance.
11. Commission the appliance, check the working pressure is adequate then test and adjust the CO² values at maximum and minimum output described in the commissioning section of the appliance installation instructions. Ensure the flue gas analyser used is calibrated and set for the gas group the appliance is being adjusted for.
12. Check the appliance for gas leaks using gas leak detection fluid.
13. Affix the label to the appliance that is supplied with the conversion kit.

AUTO function

The AUTO function determines the best power output and flow temperature for the heating system by continually monitoring demand. It uses advanced modulating technology to closely track demand and matches output with the highest precision. This ensures that either with or without the addition of further controls the activation of the AUTO function will enhance boiler performance. Optimum performance can be achieved by the addition of an outdoor sensor and indoor modulating controls. Depending on the peripheral units connected and the number of zones controlled, the boiler adjusts its flow temperature automatically.

The various corresponding parameters should therefore be set (see adjustments menu).

To activate the function, press the **AUTO** button.

Example 1:

Single zone system (high-temperature) with on/off room thermostat:

In this case the following parameters must be set:

- 4 21 - Activation of temperature adjustment using sensors
 - Select 1 = Basic temperature adjustment

- 4 24 - Boost Time (optional)

The wait time for the flow temperature increase in steps of 4°C may be set. The value varies according to the type of system and installation.


If the Boost Time value = 00 the function is not activated.

Example 2:

Single zone system (high-temperature) with on/off room thermostat + outdoor sensor:

In this case the following parameters must be set:

- 4 21 - Activation of temperature adjustment using sensors
 - Select 3 = outdoor sensor only
- 4 22 - Temperature adjustment curve selection
 - Select the relevant curve according to the type of system, installation, heat insulation used in the building, etc (see page 45).
- 4 23 - Perform a parallel curve shift if necessary, increasing or decreasing the set-point temperature (this may also be modified by the user, using the heating temperature adjustment knob, which, with the Auto function activated, is used to shift the curve in a parallel manner).

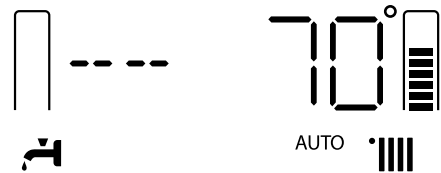

NOTE: Two zone temperature management is not suitable for use with Y Plan systems.

NOTE: Where an outdoor sensor is connected and the system is supplying stored domestic hot water and a central heating circuit, each circuit must be separately connected to the PCB using the 'RT' and 'Cyl' connections.

This is to ensure a correct flow temperature to the stored hot water in the summer.

For further information please contact the Technical Help Desk on 0333 240 77770

BOILER PROTECTION DEVICES

Boiler protection devices

The boiler is protected from malfunctioning by means of internal checks performed by the P.C.B., which stops the boiler from operating if necessary.

In the event of the boiler being shut off in this manner, a code appears on the display which refers to the type of shut-off and the reason behind it.

There are two types of shut-off:

Safety shut-off

This type of error is "volatile", which means that the boiler starts up again automatically as soon as the problem which caused the shut-off is removed; the error is indicated by the «Err» symbol which appears on the display and the error code. In fact, as soon as the cause of the shut-off disappears, the boiler starts up again and continues to operate normally. While the boiler is shut off for safety reasons it is possible to attempt to restore normal operation by switching the appliance off and on again using the on/off button on the control panel. If after attempting this the boiler still shows a safety shut off, switch it off and ensure that the external electrical switch is in the off position.

Shutdown

This type of error is "non-volatile", which means that it is not removed automatically. To restore normal operation press the **Reset** button on the control panel.

The first figure of the error code (e.g. 1 01) indicates within which operational assembly the error occurred.

- 1 - Primary Circuit
- 3 - Internal Electronic Part
- 5 - Ignition and Detection
- 6 - Air inlet - flue gas outlet

Malfunction warning

This warning is shown by the display in the following format:
5 P1 = FIRST IGNITION ATTEMPT UNSUCCESSFUL
the first figure indicating the operational assembly is followed by a P (warning) and the code relating to the specific warning.

Important

If this shutdown occurs frequently, contact an authorised Technical Service Centre for assistance. For safety reasons, the boiler will permit a maximum of 5 resets in 15 minutes (5 presses of the RESET button); at the 6th attempt within this 15-minute period the boiler will shut down and may only be operated again after the electricity supply has been disconnected. If the shutdown is occasional or an isolated event, this is not a problem.

Anti-frost Device.

The anti-frost function acts on the central heating flow temperature probe, independently from other regulations, when the electrical supply is turned on. If the primary circuit temperature is between 3°C and 8°C the pump will run until the temperature reaches > 9°C.

If the flow temperature remains between 3°C and 8°C the pump will continue to run for a maximum of 20 minutes unless a temperature above > 9°C is detected in the central heating flow, after this the burner will fire (heating position) until a temperature of > 30°C is detected.

If the central heating flow temperature is < 3°C, the burner will fire (heating position) at minimum power until the temperature reaches > 30°C, the burner will go out.

If lockout is caused by overheat the burner will not fire but the pump will continue to run.

The anti-frost device activates only when (with the boiler operating correctly):

- the boiler is electrically powered;
- there is a supply of gas.

Table summarising error codes

Central Heating circuit	
Display	Description
1 01	Overheat
1 03	Insufficient circulation
1 04	
1 05	
1 06	
1 07	
1 10	C.H. Flow temp. probe circuit open / short circuit
1 12	C.H. Return temp. probe circuit open / short circuit
1 14	External sensor circuit open / short circuit
1 16	Floor Thermostat contact open
1 18	Heating delivery probe problem
1 P1	Insufficient circulation indication
1 P2	
1 P3	
D.H.W. circuit	
2 05	DHW In Probe Open Circuit (Solar temp. probe)
Internal P.C.B.'s	
3 01	EEPROM error
3 02	Communication error
3 03	Main P.C.B. error
3 04	Too many (> 5) resets in 15 minutes
3 05	Main P.C.B. error
3 06	Main P.C.B. error
3 07	Main P.C.B. error
3 P9	Sched.Maintanace-Call Service
External P.C.B.'s	
4 11	Room sensor circuit open or short circuit Zone 1
4 12	Room sensor circuit open or short circuit Zone 2
4 13	Room sensor circuit open or short circuit Zone 3
Ignition and Detection	
5 01	No flame detected
5 02	Flame detected with gas valve closed
5 04	Flame lift
5 P1	1st Ignition Failed
5 P2	2nd Ignition Failed
5 P3	Flame cut-off
Air Inlet / Flue gas outlet	
6 12	Insufficient fan speed
Multi-zone Heating (Heating Zone Modules - optional)	
7 01	Zone 1 send sensor defective
7 02	Zone 2 send sensor defective
7 03	Zone 3 send sensor defective
7 11	Zone 1 return sensor defective
7 12	Zone 2 return sensor defective
7 13	Zone 3 return sensor defective
7 22	Zone 2 overheating
7 23	Zone 3 overheating
7 50	All Heating Zones locked

TECHNICAL AREA

Technical Area

The boiler can be used to manage the heating and domestic hot water production system in its entirety.

Navigation within the menus enables the boiler system + connected peripheral units to be customised, optimising operation for maximum comfort and maximum saving. It also provides important information relating to the efficient operation of the boiler.

Before access to the menus, the display show some "quick settings" to have direct access to the parameters.

To see all available parameters and menu access to view FULL MENU.

GAS - Direct access to the parameters:	220 - 231- 232- 233 - 234 - 270
SET - Direct access to the parameters:	220 - 231- 223 - 245 - 246
PCB - Direct access to the parameters:	220 - 228 - 229 - 231- 232- 233 - 234 - 247 - 250 - 253
VIS - Direct access to the parameters:	821 - 822 - 824 - 825 - 827 - 830 - 831 - 832 - 833- 840 - 835
ZONE - Direct access to the parameters:	402 - 502 - 602 - 420 - 520 - 620 -434 - 534 - 634 - 830
FULL MENU - see table on following pages	
0 NETWORK	
0 4 User Interface	
2 Boiler Parameter	
2 0 General setting	
2 2 Boiler parameter	
2 2 General setting	
2 3 C.H. Parameters - Part 1	
2 4 C.H. Parameters - Part 2	
2 5 Domestic Hot Water	
2 6 Boiler manual settings	
2 7 Test & Utilities	
2 8 Menu 2 Reset to factory setting	
4 Zone 1 Parameters	
4 0 Set-point Zone 1	
4 2 Zone 1 Setting	
4 3 Diagnostics	
5 Parameters Zona 2	
5 0 Set-point Zone 2	
5 2 Zone 2 Setting	
5 3 Diagnostics	
6 Parameters Zona 3	
6 0 Set-point Zone 3	
6 2 Zone 3 Setting	
6 3 Diagnostics	
8 Service Parameter	
8 0 Statistics-1	
8 1 Statistics-2	
8 2 Boiler	
8 3 Boiler Temperature	
8 4 Solar & Storage	
8 5 Service	
8 6 Error History	
8 7 Free parameter	

The parameters relating to each individual menu are listed in the following pages.

The various parameters can be accessed and modified using the "+" and "-" buttons, "+" OK and "-" ESC buttons. (see fig. below).

The description of the menus and of each individual parameter will be shown on the display.



- "+" and "-" buttons to access and modify the parameters.
- "+" OK button to store the adjustments of various parameters.
- "-" ESC button to exit from the parameters.

The menus and parameters number is shown by the figures of the display.

CAUTION! THE MENUS RESERVED FOR QUALIFIED TECHNICIANS MAY ONLY BE ACCESSED AFTER SETTING THE ACCESS CODE.

To access the Menus, open the cover and proceed as follows (for example: **231**)


- Simultaneously press the 2 "+" and "-" buttons for 5 seconds. Insert the service code, the display shows **222**
- Press the "+" button to select **234**.
- Press the "+" OK button. the display shows the first "quick setting" **GAS**
- Press the "+" button to select **MENU** (Complete MENU)
- Press the "+" OK button. The display shows menu **0**
- Press the "+" button to select menu **2**.
- Press the "+" OK button to access to the menu. The display shows the sub-menu **20**.
- Press the "+" button to select the sub-menu **23**.
- Press the "+" OK button to access to the sub-menu. The display shows the parameter **230**.
- Press the "+" button to select the parameter **231**.
- Press the "+" OK button to access to the parameter. The display shows the value "ex: **70**".
- Press the 2 "+" or "-" button to select the new value "ex: **75**".

- Press the "+" OK button to save the change or press "-" ESC button to exit without saving.

Press the "-" ESC button until the normal display screen is restored.

TECHNICAL AREA

menu	sub-menu	parameter	description	value	default settings
------	----------	-----------	-------------	-------	------------------


SERVICE CODE					
Press the button “+”  to select code 234 and press Ok. Turn the encoder to select MENU and press OK button.					
0	NETWORK				
0	4	DISPLAY SETTING			
0	4	0	Zone to be set by display	1 = 1 Zone 2 = 2 Zone 3 = 3 Zone	1
0	4	1	Backlight timing	from 0 to 10 (minutes) or 24 (hour)	24
0	4	2	Thermoregulation button deactivation	0 = OFF 1 = ON	0
2	BOILER PARAMETER SETTING				
2	0	GENERAL			
2	0	0	DHW Setpoint Temperature NOT ACTIVE		
2	0	1	DHW Pre-heating NOT ACTIVE		
2	1	BOILER PARAMETERS			
2	1	0	Boiler circulator type NOT ACTIVE		
2	2	BOILER GENERAL SETTINGS			
2	2	0	Soft ignition	from 0 to 90	--
See parag. Gas settings					
2	2	3	Underfloor thermostat or zone 2 ambient thermostat selection	0 = Floor safety thermostat 1 = Zone 2 ambient thermostat	0
2	2	4	Thermoregulation	0 = Absent 1 = Present	0
2	2	5	Heating ignition delay	0 = Deactivated 1 = 10 seconds 2 = 90 seconds 3 = 210 seconds	0
2	2	8	Boiler Version	from 0 to 5	2
CANNOT BE MODIFIED					
RESERVED FOR TECHNICAL ASSISTANCE Only if the PCB is changed					
2	2	9	Set boiler heat power		
RESERVED FOR TECHNICAL ASSISTANCE Only if the PCB is changed					
2	3	BOILER PARAMETER - PART 1			
2	3	1	Maximum heating power setting	from 0 to 99	60
see the “Gas setting” table, information on Starting					
2	3	2	Domestic hot water maximum percentage	from 0 to 99	
CANNOT BE MODIFIED					
RESERVED FOR TECHNICAL ASSISTANCE Only if the gas or PCB is changed see “gas setting” table					

menu	sub-menu	parameter	description	value	default settings
------	----------	-----------	-------------	-------	------------------

2	3	3	Minimum percentage	from 0 to 99	
CANNOT BE MODIFIED					
RESERVED FOR TECHNICAL ASSISTANCE Only if the gas or PCB is changed see “gas setting” table					
2	3	4	Heating maximum percentage	from 0 to 99	
CANNOT BE MODIFIED					
RESERVED FOR TECHNICAL ASSISTANCE Only if the gas or PCB is changed see “gas setting” table					
2	3	5	Selection of ignition delay type when heating	0 = Manual 1 = Automatic	1
2	3	6	Ignition delay when heating timer setting	from 0 to 7 (minutes)	3
2	3	7	Post-circulation when heating	from 0 to 15 minutes or OC (AC)	3
2	3	8	<Not Available>		
2	3	9	<Not Available>		
2	4	BOILER PARAMETER - PART 2			
2	4	3	Post-ventilation after heating request	0 = OFF 1 = ON	0
2	4	4	Time delay after heating temperature increase	from 0 to 60 (minutes)	16
This parameter allows the time delay to be set before automatic increase of the flow temperature calculated in increments of 4°C (max 12°C). If this parameter retains the value 00, this function is not active.					
Activated only with thermostat On/Off and heating control activated (parameter 421 - 521 - 621 = 01)					
2	4	5	Circulation pump MAX speed - NOT ACTIVE		
2	4	6	Circulation pump MIN speed - NOT ACTIVE		
2	4	7	Device indicator for heating circuit pressure	0 = temperature sensor only 1 = pressure switch at minimum 2 = pressure sensor	0
RESERVED FOR TECHNICAL ASSISTANCE Only if the PCB is changed					
2	4	8	<Not Available>		
2	4	9	External temperature correction	from -3 to +3 (°C)	0
Only active with external sensor connected					
2	5	DOMESTIC HOT WATER PARAMETER			
2	5	0	COMFORT function	0 = deactivated 1 = timed 2 = always on	0
NOT ACTIVE					
2	5	2	Hot water flow delay	from 5 to 200 (0.5 to 20 seconds)	5
NOT ACTIVE					
Anti “water hammering”					

menu	sub-menu	parameter	description	value	default settings	
2	5	3	Extinction of the burner in D.H.W. NOT ACTIVE	0 = anti-scale (stop at > 67°C) 1 = + 4°C /setting	0	
2	5	4	Post-circulation and post-ventilation after a domestic hot water draw-off OFF = 3 minutes post-circulation and post-ventilation after domestic hot water draw-off if the boiler temperature measured requires it. ON = always on for 3 minutes post-circulation and post-ventilation after domestic hot water draw-off.	0 = OFF 1 = ON	0	
2	5	5	Domestic hot water timer	from 0 to 30 (minutes)	0	
2	5	7	<Not Available>			
2	5	8	<Not Available>			
2	6	BOILER MANUAL SETTINGS				
2	6	Only to test components				
2	6	0	Manual mode activation	0 = OFF 1 = ON	0	
2	6	1	Boiler pump control NOT ACTIVE	0 = OFF 1 = ON	0	
			Set parameter 260=1			
2	6	2	Fan control	0 = OFF 1 = ON	0	
			Set parameter 260=1			
2	6	3	3 way valve control NOT ACTIVE	0 = Sanitary 1 = Heating	0	
			Set parameter 260=1			
2	6	4	<Not Available>			
2	7	TEST & UTILITIES				
2	7	0	Test mode	TEST+ = Max Heating power TEST+ = Max DHW power TEST+ + = Minimum power.		
			Activation can also be obtained by pressing the Reset button for 10 seconds. The function is deactivated after 30 minutes or by pressing Reset			
2	7	1	Bleed cycle NOT ACTIVE	press OK button for 5 seconds		
			see First Ignition parag.			
2	8	RESET MENU' 2				
2	8	0	Automatically resetting to the default setting in menu 2	Reset OK = yes ESC = no		
			To reset all default parameter settings, press the OK button			

menu	sub-menu	parameter	description	value	default settings
4	ZONE 1 PARAMETER				
4	0	ZONE 1 TEMPERATURE SETTING			
4	0	2	Heating fixed temperature setting "Heating fixed temp"	from 35 to 82 °C (high temperature - para. 420 =1) from 20 to 45 °C (high temperature - para. 420 =0)	35 20
			Activated only with temperature control and fixed temperature (see 421)		
4	2	ZONE 1 SETTING			
4	2	0	Heating appliance temperature value setting	0 = from 20 to 45°C (low temperature) 1 = from 35 to 85°C (high temperature)	1
			select in the appliance type base		
4	2	1	Basic heating control type selection type depending on the peripheral devices connected	0 = fixed flow temperature 1 = device On/Off 2 = room sensor 3 = external sensor only 4 = room sensor + external sensor	1
			To activate heating control, press the AUTO button. The display lights up the AUTO symbol		
4	2	2	Slope	from 0_2 to 0_8 (low temperature) from 1_0 to 3_5 (high temperature)	 1_5
			If the external sensor is used, the boiler calculates the most suitable heating flow temperature taking the external temperature and the type of appliance into account. The type of curve must be chosen according to the type of appliance radiator and the heat losses present in the building.		

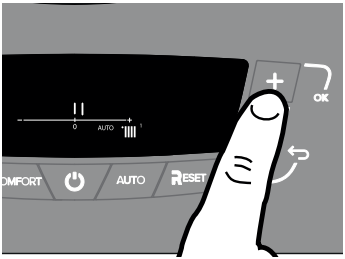menu	sub-menu	parameter	description	value	default settings
4	2	3	Parallel shift	from - 7 to + 7 (low temperature)	0
				from - 14 to + 14 (high temperature)	
 <p>To adapt the thermal curve to the appliance requirements, it is possible to perform a parallel shift of the curve in order to alter the calculated flow temperature and therefore the ambient temperature.</p> <p>By accessing this parameter or pressing the buttons 8 the curve can be shifted in a parallel manner as indicated in the figure shown below. The value is indicated on the display:</p> <ul style="list-style-type: none"> - from -7 to +7 (low temperature) - from -14 to +14 (high temperature) <p>Each step represents a flow temperature increase/ decrease of 1°C in relation to the set-point value.</p>					
4	2	4	Compensation	from 0 to 20	20
				if setting = 0, the temperature taken from the ambient sensor does not affect the calculation of the setting. If setting = 20, the temperature taken has maximum influence on the setting.	
4	2	5	Zone 1 heating MAXIMUM temperature setting	from 35 to 85 °C if parameter 420 = 1	82
				from 20 to 45 °C if parameter 420 = 0	45
4	2	6	Zone 1 heating MINIMUM temperature setting	from 35 to 85 °C if parameter 420 = 1	35
				from 20 to 45 °C if parameter 420 = 0	25
4	3	DIAGNOSTICS			
4	3	4	Zone 1 heat request	0 = OFF 1 = ON	
5 ZONE 2 PARAMETER					
5 0 ZONE 2 TEMPERATURE SETTING					
5	0	2	Heating fixed temperature setting "Heating fixed temp"	from 35 to 82 °C (high temperature - para. 420 =1)	35
				from 20 to 45 °C (high temperature - para. 420 =0)	
Activated only with temperature control and fixed temperature (see 521)					

menu	sub-menu	parameter	description	value	default settings
5 2 ZONE 2 SETTING					
5	2	0	Heating appliance temperature value setting	0 = from 20 to 45°C (low temperature) 1 = from 35 to 85°C (high temperature)	1
				select in the appliance type base	
5	2	1	Basic heating control type selection type depending on the peripheral devices connected	0 = fixed flow temperature 1 = device On/Off 2 = NOT PRESENT 3 = external sensor only 4 = NOT PRESENT	1
				To activate heating control, press the AUTO button. The display lights up the AUTO symbol	
5	2	2	Slope	from 0_2 to 0_8 (low temperature)	1_5
				from 1_0 to 3_5 (high temperature)	
<p>- see graph on the previous page</p> <p>If the external sensor is used, the boiler calculates the most suitable heating flow temperature taking the external temperature and the type of appliance into account.</p> <p>The type of curve must be chosen according to the type of appliance radiator and the heat losses present in the building.</p>					
5	2	3	Parallel curve shift Zone 2 Offset	from - 7 to + 7 (low temperature)	0
				from - 14 to + 14 (high temperature)	
<p>To adapt the thermal curve to the appliance requirements, it is possible to perform a parallel shift of the curve in order to alter the calculated flow temperature and therefore the ambient temperature.</p> <p>By accessing this parameter or pressing the buttons 12 the curve can be shifted in a parallel manner as indicated in the figure shown below. The value is indicated on the display:</p> <ul style="list-style-type: none"> - from -7 to +7 (low temperature) - from -14 to +14 (high temperature) <p>Each step represents a flow temperature increase/ decrease of 1°C in relation to the set-point value.</p>					
5	2	4	Compensation	from 0 to 20	20
				<p>If setting = 0, the temperature taken from the ambient sensor does not affect the calculation of the setting.</p> <p>If setting = 20, the temperature taken has maximum influence on the setting.</p>	
5	2	5	Zone 2 heating MAXIMUM temperature setting	from 35 to 85 °C if parameter 520 = 1	82
				from 20 to 45 °C if parameter 520 = 0	45

menu	sub-menu	parameter	description	value	default settings
5	2	6	Zone 2 heating MINIMUM temperature setting	from 35 to 85 °C if parameter 520 = 1	35
				from 20 to 45 °C if parameter 520 = 0	25
5	3	DIAGNOSTICS			
5	3	4	Zone 2 heat request	0 = OFF 1 = ON	
6	ZONE 3 PARAMETER				
6	0	ZONE 3 TEMPERATURE SETTING			
6	0	2	Heating fixed temperature setting "Heating fixed temp"	from 35 to 82 °C (high temperature - para. 420 =1)	70
				from 20 to 45 °C (high temperature - para. 420 =0)	20
Activated only with temperature control and fixed temperature (see 621)					
6	2	ZONE 3 SETTING			
6	2	0	Heating appliance temperature value setting	0 = from 20 to 45°C (low temperature) 1 = from 35 to 85°C (high temperature)	1
				select in the appliance type base	
6	2	1	Basic heating control type selection type depending on the peripheral devices connected	0 = fixed flow temperature 1 = device On/Off 2 = NOT PRESENT 3 = external sensor only 4 = NOT PRESENT	1
				To activate heating control, press the AUTO button. The display lights up the AUTO symbol	
6	2	2	Slope	from 0_2 to 0_8 (low temperature)	
				from 1_0 to 3_5 (high temperature)	1.5
- see graph on page 42 If the external sensor is used, the boiler calculates the most suitable heating flow temperature taking the external temperature and the type of appliance into account. The type of curve must be chosen according to the type of appliance radiator and the heat losses present in the building.					

menu	sub-menu	parameter	description	value	default settings
6	2	3	Parallel curve shift Zone 2 Offset	from - 7 to + 7 (low temperature)	0
				from - 14 to + 14 (high temperature)	
To adapt the thermal curve to the appliance requirements, it is possible to perform a parallel shift of the curve in order to alter the calculated flow temperature and therefore the ambient temperature. By accessing this parameter or pressing the buttons 12 the curve can be shifted in a parallel manner as indicated in the figure shown below. The value is indicated on the display: - from -7 to +7 (low temperature) - from -14 to +14 (high temperature) Each step represents a flow temperature increase/decrease of 1°C in relation to the set-point value.					
6	2	4	Compensation	from 0 to 20	20
				if setting = 0, the temperature taken from the ambient sensor does not affect the calculation of the setting. If setting = 20, the temperature taken has maximum influence on the setting.	
6	2	5	Zone 3 heating MAXIMUM temperature setting	from 35 to 85 °C if parameter 620 = 1	82
				from 20 to 45 °C if parameter 620 = 0	45
6	2	6	Zone 3 heating MINIMUM temperature setting	from 35 to 85 °C if parameter 620 = 1	35
				from 20 to 45 °C if parameter 620 = 0	25
6	3	DIAGNOSTICS			
6	3	4	Zone 3 heat request	0 = OFF 1 = ON	
8	SERVICE PARAMETERS				
8	0	BOILER STATISTICS-1			
8	0	0	Number of diverter valve cycles (n x10) NOT ACTIVE		
8	0	1	Time of circulator on (h x 10)		
8	0	2	Number of boiler circulator cycles (n x10)		
8	0	3	Boiler Life Time (h x 10)		
8	0	4	Time of fan ON (h x 10)		
8	0	5	Number of fan cycles (n x10)		
8	0	6	Number of flame detection in CH (n x10)		
8	0	7	Number of flame detection in DHW (n x10)		
8	1	BOILER STATISTICS-2			
8	1	0	Number of hours burner operating in heater mode (xxh/10)		
8	1	1	Number of hours burner operating in hot water mode (xxh/10) NOT ACTIVE		
8	1	2	Number of flame separations (nr/10)		
8	1	3	Number of ignition cycles (nr/10)		
8	1	4	Average length of heating request (minutes)		

MAINTENANCE

menu	sub-menu	parameter	description	value	default settings
8	2	BOILER			
8	2	1	Fan Status	0 = OFF 1 = ON	
8	2	2	Fan speed (x100) rpm		
8	2	4	Diverter valve position NOT ACTIVE		
8	2	7	Modulating Pump (%) NOT ACTIVE		
8	2	8	Gas Power (kW)		
8	3	BOILER TEMPERATURE			
8	3	1	Heating flow temperature (in °C)		
8	3	2	Heating backflow temperature (in °C)		
8	4	SOLAR & STORAGE			
8	4	2	Solar appliance water input temperature		
8	5	SERVICE			
8	5	0	Months to next maintenance	from 0 to 60 (month)	24
			If setted the boiler will display that is time to call the installer for maintenance		
8	5	1	Enable Maintenance advice	0 = OFF 1 = ON	0
8	5	2	Maintenance Warning Reset	Reset? OK= Yes Esc = No	
			to erase the advice for maintenance		
8	5	3	2nd Heat Exchanger Clogging State	0 = DHW Exchanger OK 1 = Partially Clogged 2 = Very Clogged Please Replace	
8	5	4	PCB hardware version		
8	5	5	PCB software version		
8	6	ERROR LIST			
8	6	0	10 last errors	from ERROR 0 to ERROR 9	
			This parameter allows the last 10 boiler errors flagged to be displayed, indicating the day, month and year. When the parameter is accessed, the errors are displayed listed from ERROR 0 to ERROR 9. For each error, the following sequence is displayed: E00 - error number 108 - error code		
8	6	1	Error list reset	Reset OK = yes ESC = no	

Important

Maintenance is an essential part of the safe and efficient operation of the boiler and ensures its durability. It should be performed according to the instructions given in current legislation. Perform combustion analysis regularly in order to check the operating efficiency of the boiler and to make sure any polluting substances released are within the boundaries set by current legislation.

Before beginning maintenance work:

- Disconnect the appliance from the electricity supply by turning the isolator switch to the "OFF" position;
- Remove the fuse
- Close the gas isolation valve.

After the work has been completed the initial settings will be restored.

After servicing, complete the relevant Service Interval Record section of the Benchmark Checklist located on the inside back pages of this document



General comments

It is recommended that the following inspections be carried out on the boiler at least once a year:

1. Check the seals in the water part and, if necessary, replace the gaskets and restore the seal to perfect working order.
2. Check the seals in the gas part and, if necessary, replace the gaskets and restore the seal to perfect working order.
3. Visually check the overall condition of the boiler.
4. Visually check the combustion and, if necessary, disassemble and clean the burner.
5. Following the inspection detailed in point "3", disassemble and clean the combustion chamber, if necessary.
6. Following the inspection detailed in point "4", disassemble and clean the burner and injector, if necessary.
7. Cleaning the primary heat exchanger
8. Make sure the following heating safety devices are operating correctly:
 - temperature limit safety device.
9. Make sure that the following gas part safety devices are operating correctly:
 - absence of gas or flame safety device (ionisation).
10. Perform a general inspection of the boiler operation.
11. Remove oxide from the detection electrode using an emery cloth.
12. After servicing, complete the relevant Service Interval Record section of the Benchmark Checklist (page 59).
13. These checks are not exhaustive. Further mechanical, electrical, condensate and combustion maintenance checks may be required.
14. Clean and refill the condensate trap

Operational test

After having carried out the maintenance operations, ensure the system is filled and bled fully of any excess air.

- Begin operating the boiler.
- If necessary, release the air from the heating system again.
- Check the settings and make sure all the command, adjustment and monitoring parts are working correctly.
- Check the flue system is sealed and operating correctly.

Draining procedures

The heating system must be drained using the following procedure:

- Switch off the boiler, make sure the isolator switch is in the OFF position;
- Open the system drain off cock and collect the escaping water in a container;
- Empty the water from the lowest points of the system (where applicable).

If the system is to be left inactive in areas where the room temperature may fall below 0°C during winter, we recommend that anti-freeze liquid is added to the water in the heating system in order to avoid the need for repeated draining; when this liquid is used make sure it is compatible with the stainless steel used for the bodywork of the boiler.

We recommend the use of anti-freeze products which contain PROPYLENE GLYCOLS as these inhibit corrosion and that they are used in conjunction with the anti-scaling and anti-corrosion function, in the quantities suggested by the manufacturer, at the minimum temperature.

Regularly check the pH level of the water/anti-freeze mix in the boiler circuit and replace it when the value measured is lower than the limit prescribed by the manufacturer.

DO NOT MIX DIFFERENT TYPES OF ANTI-FREEZE.

The manufacturer will not be held liable for any damage caused by the appliance or the system due to the use of inappropriate anti-freeze substances or additives.

WARNING

Before handling, empty all components which may contain hot water, performing bleeding where necessary.

Descale the components in accordance with the instructions provided on the safety data leaflet supplied with the product used, make sure the room is well ventilated, wear protective clothing, avoid mixing different products, and protect the appliance and surrounding objects.

Seal all openings used to take a gas pressure reading or to make any gas adjustments.

Make sure that the nozzle is compatible with the supplied gas. If a smell of burning is detected or smoke is seen leaking from the appliance, or there is a smell of gas, disconnect it from the electricity supply, shut off the gas valve, open the windows and call for technical assistance.

Cleaning the condensate trap

The trap is accessed by emptying the condensate bowl located in the bottom section. Wash with water and detergent.

Replace the condensate collection bowl in its housing.

NB: In the event of prolonged use of the appliance, the trap must be filled before being used again.


A lack of water in the siphon is dangerous and may cause exhaust gases to be released into the atmosphere.

1. GENERAL ACCESS


1.0 Disconnect the boiler

Before beginning maintenance work:


- a. Disconnect the appliance from the electricity supply.
Press the ON/OFF button and wait 1 minute
Turn the isolator switch to the "OFF" position.
- b. Close the gas valve and the central heating system valves.

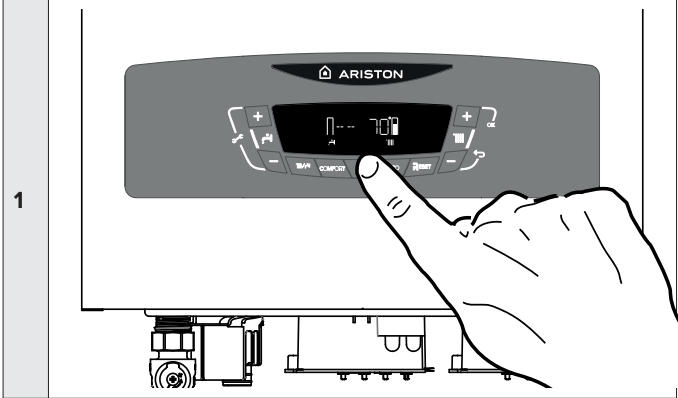


Remove the front panel

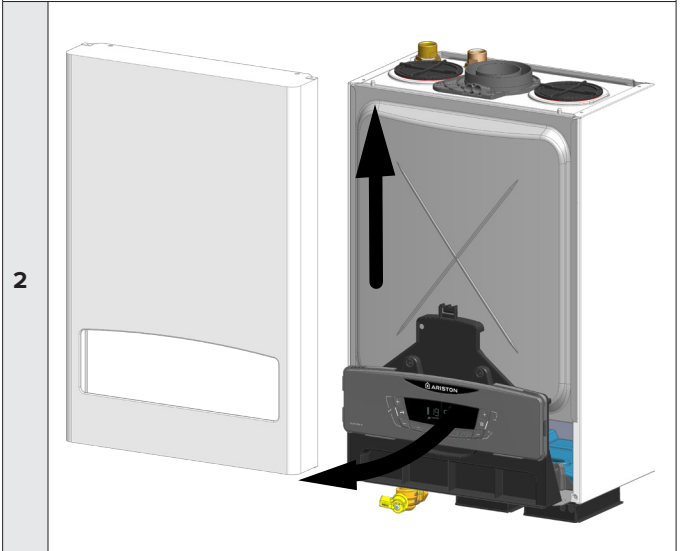

Lower the electrical front panel

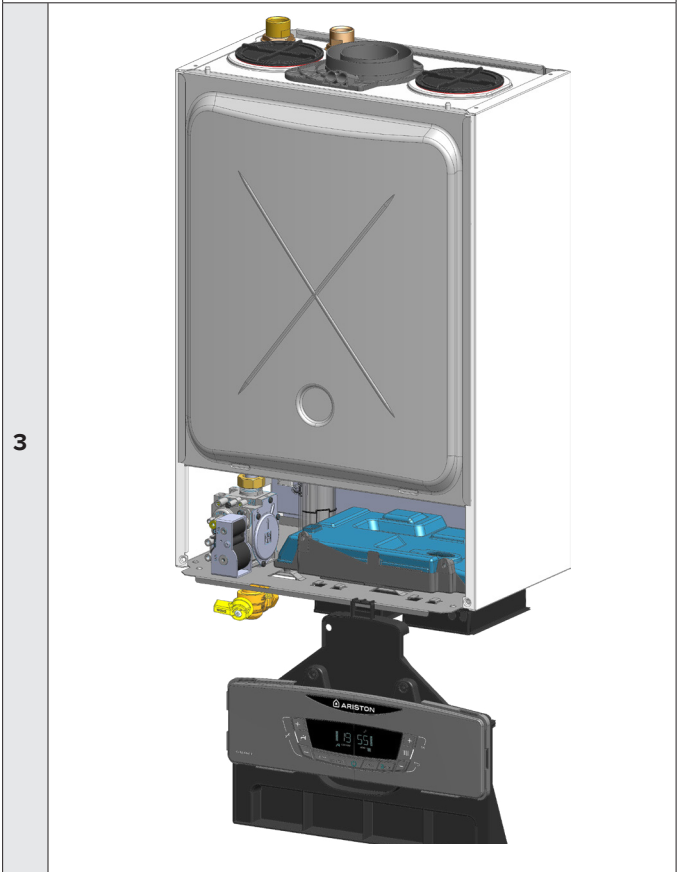

1.1 General Access




TIME 3 min

Remove the two screws




Remove the combustion chamber front panel by releasing the clips

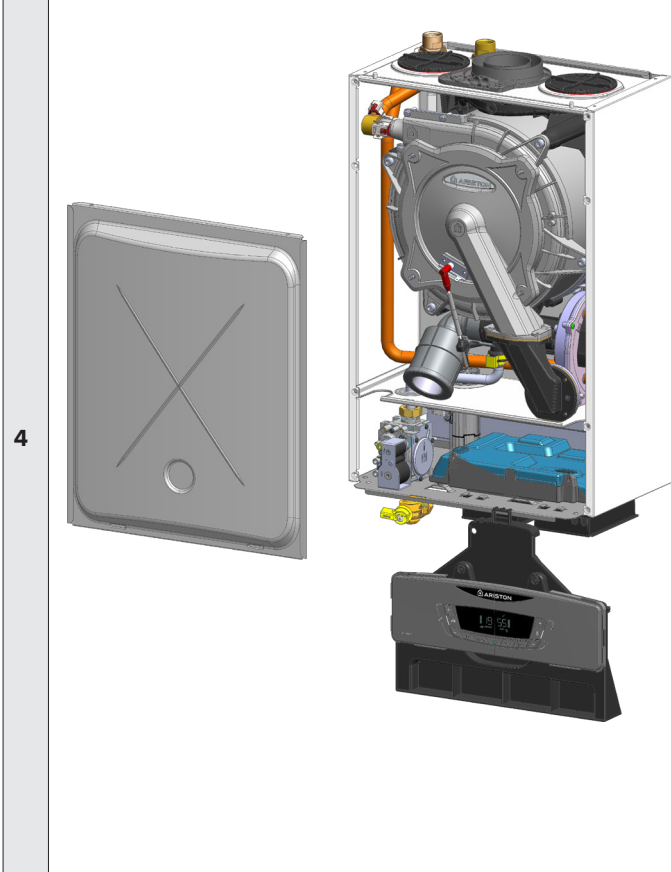


2. ELECTRICAL UNIT

2.1 Control box access





TIME 4 min


Pull and Lower the electrical box

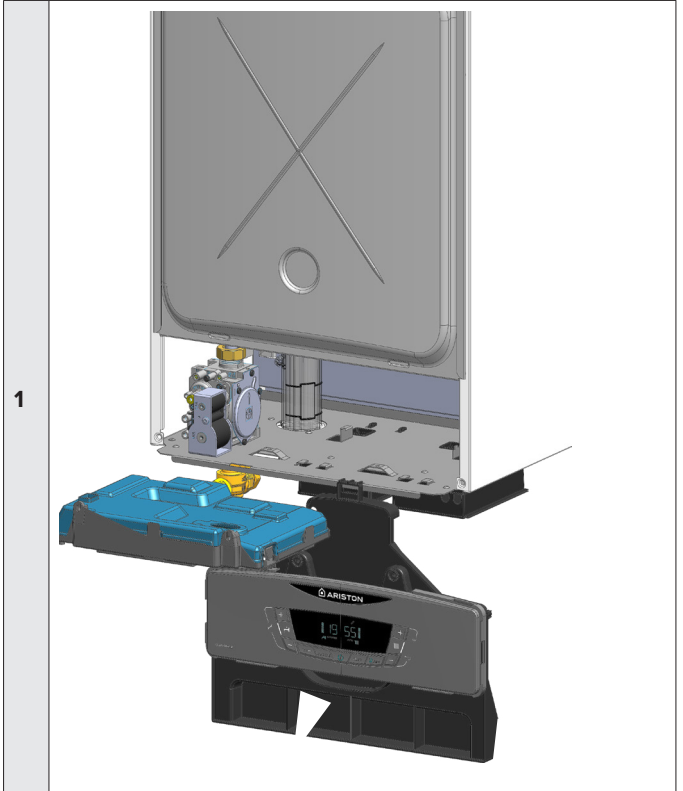

Remove the electrical box cover

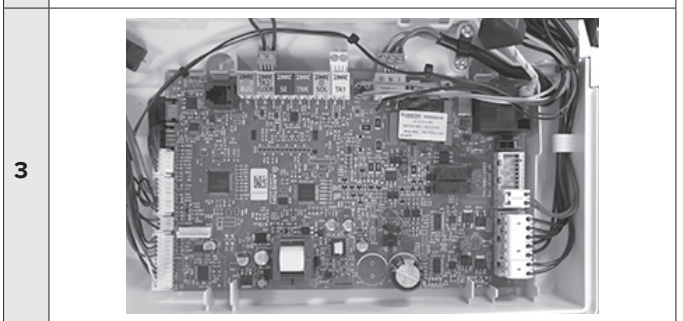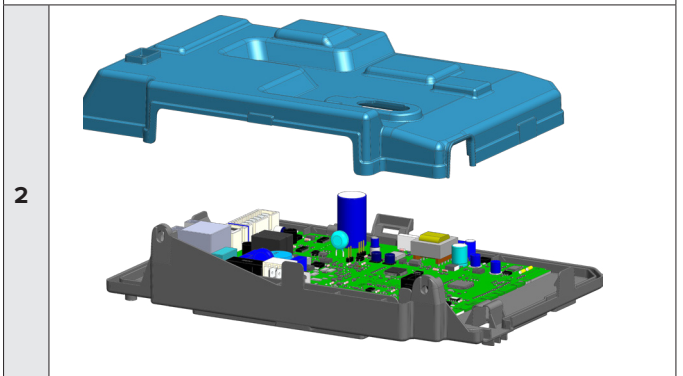


2.2 Fuse



TIME  5 min


Open the control box as above

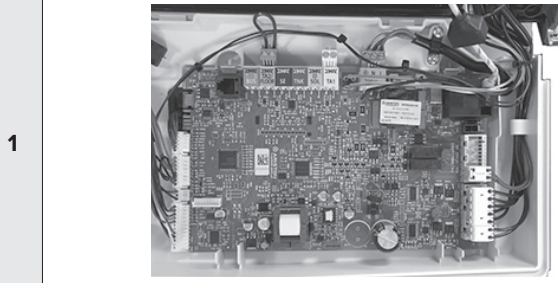

Remove the fuse




2.3 Main P.C.B.




TIME  5 min

After opening the control box, disconnect the electrical plug connections

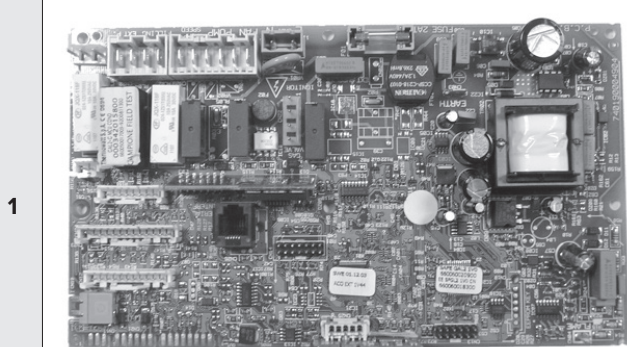


Unhook and remove the P.C.B.

2.4 Display P.C.B.






TIME  5 min

Unscrews the two screws and pull the assembly towards you

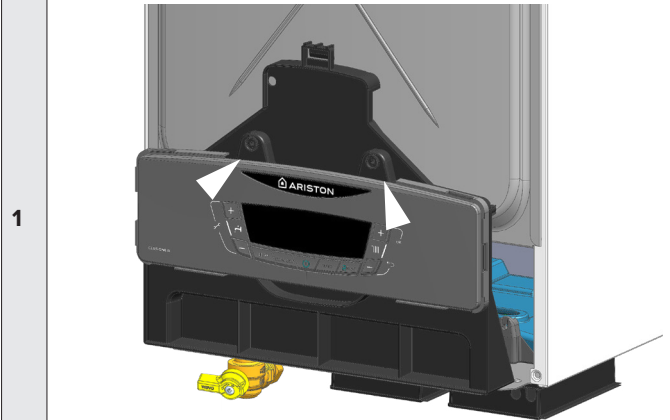

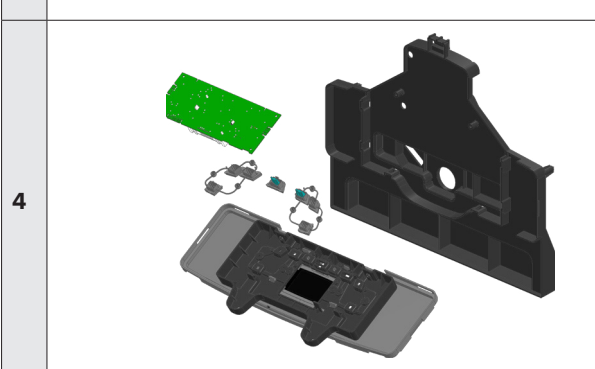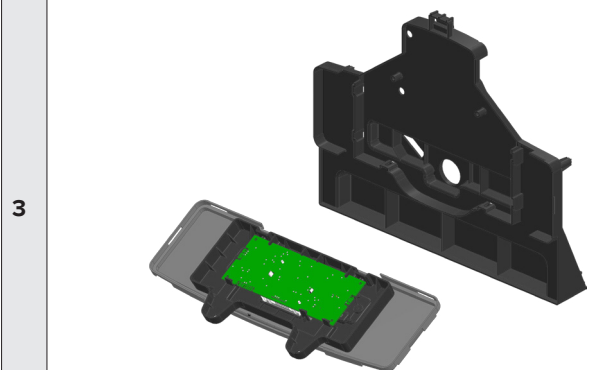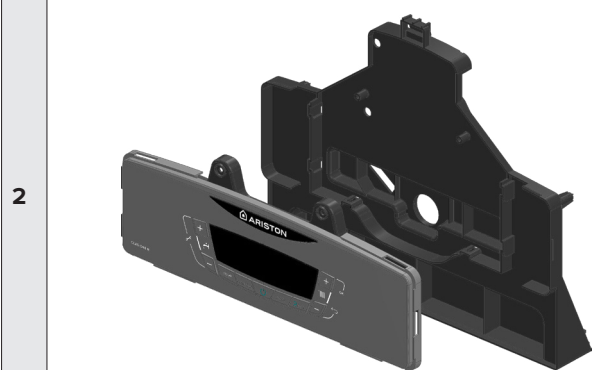

Disconnect the electrical plug connections and unhook and remove the P.C.B.




3. HYDRAULIC UNIT

3.1 Display P.C.B.


Tools 


TIME  3 min

Unscrew the condensate trap from the condensate body

1 


3.2 Temperature sensors


Tools 

TIME  5 min

Unplug the electrical connectors
NTC1 : Black
NTC2: Red

Remove the clip and the temperature sensor

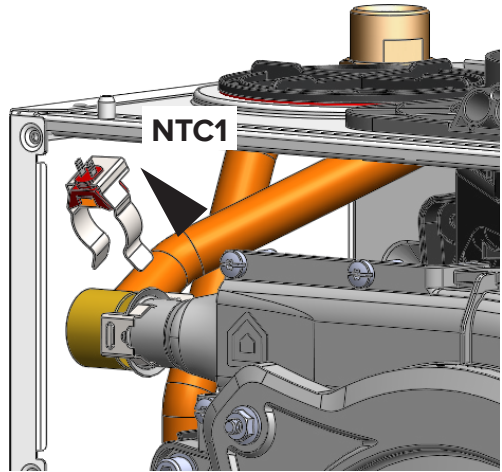1 

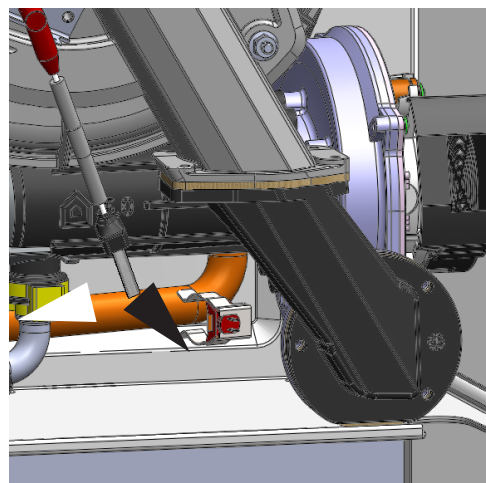2 

Remove the clip and the temperature sensor

IMPORTANT ! Do not use conducting paste for the contact sensors because it will alter the resistance value.


TEMPERATURE	RESISTANCE (kOhm)
0	27
10	17
20	12
25	10
30	8
40	5
50	4

3.3 Main heat exchanger




TIME  20 min


Drain boiler
Remove the silencer

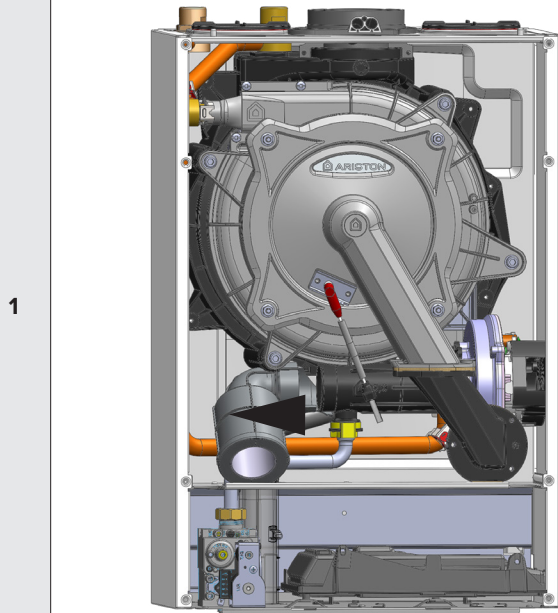


Remove the clip on the gas pipe and disconnect the gas pipe from the gas valve

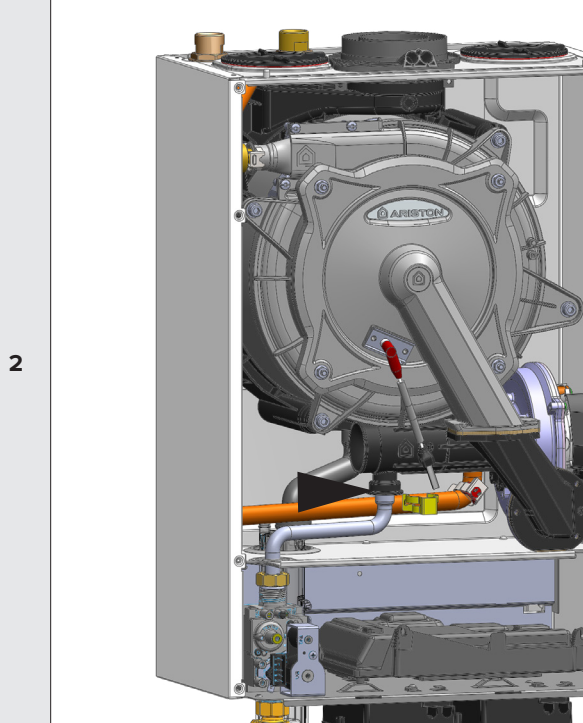


Rotate the gas pipe

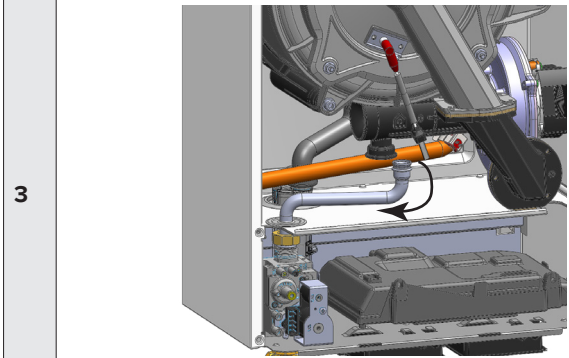


Disconnect the cable of the electrode and fan.
Remove the four nuts .

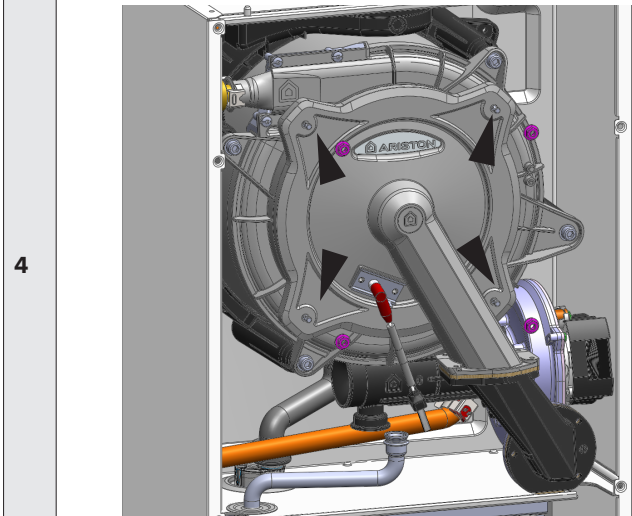


Remove the burner unit

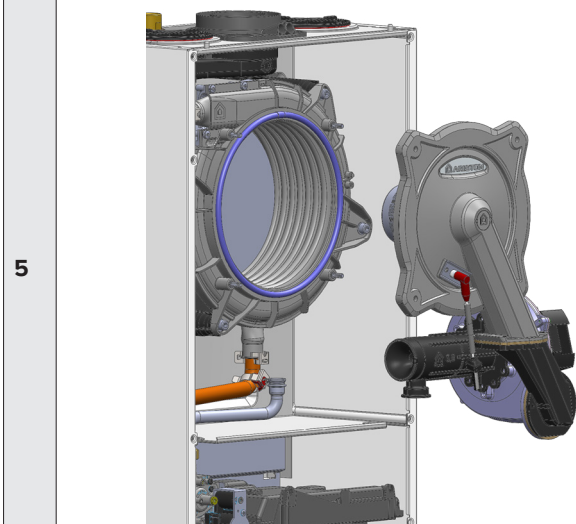


Remove the gas pipe

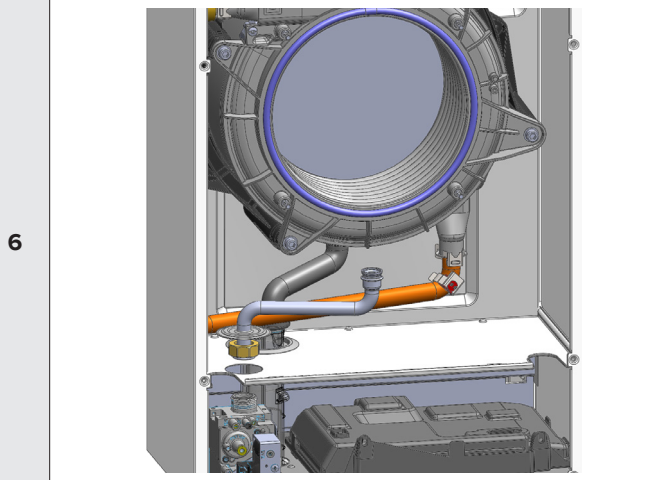


Remove the screws on the side panel and open it.

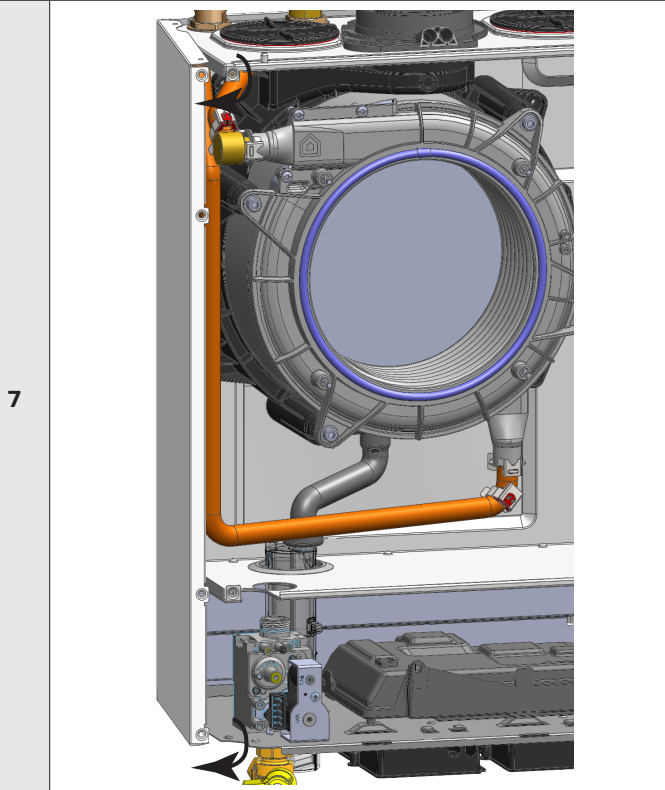


Remove the nuts on the return and flow pipe on the top of the boiler

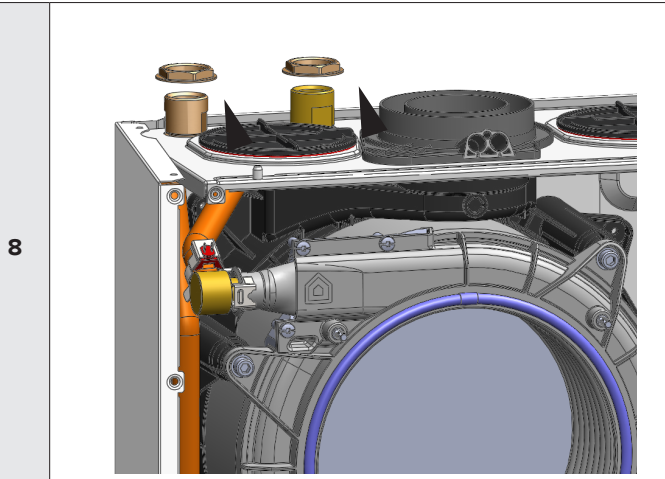


Remove the clip on the return pipe





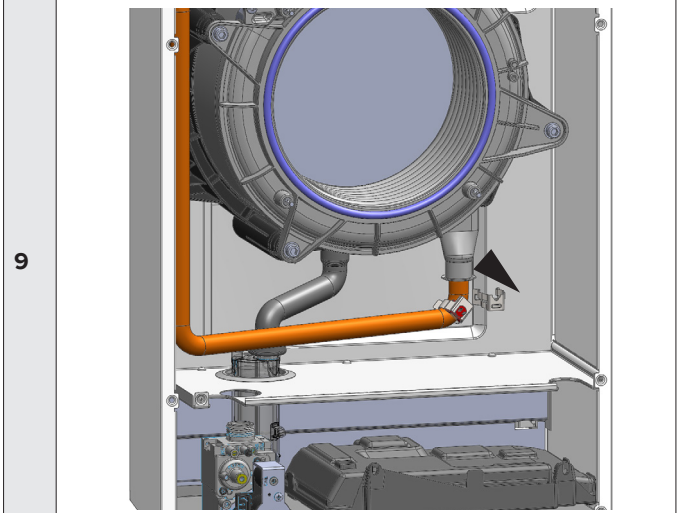


Bring down the return pipe and Rotate forward. Remove the return pipe.

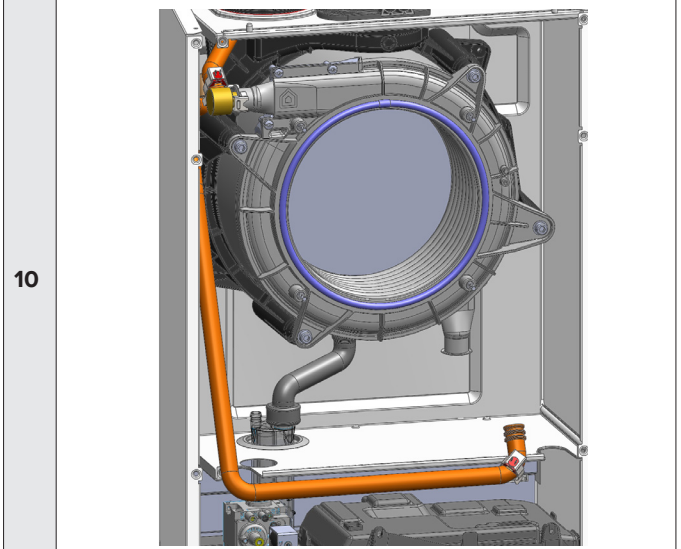


Disconnect the condensate pipe from the exchanger, and turn it to the left

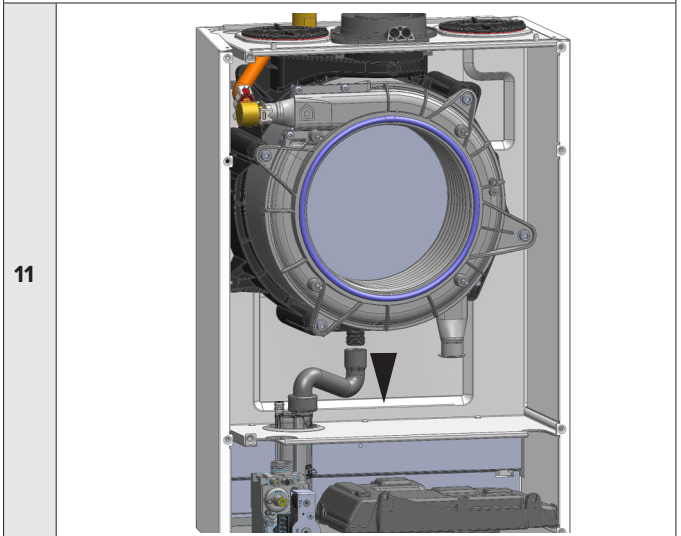

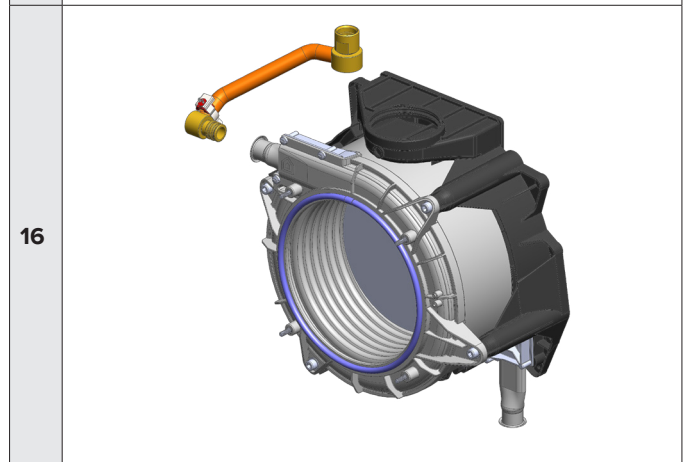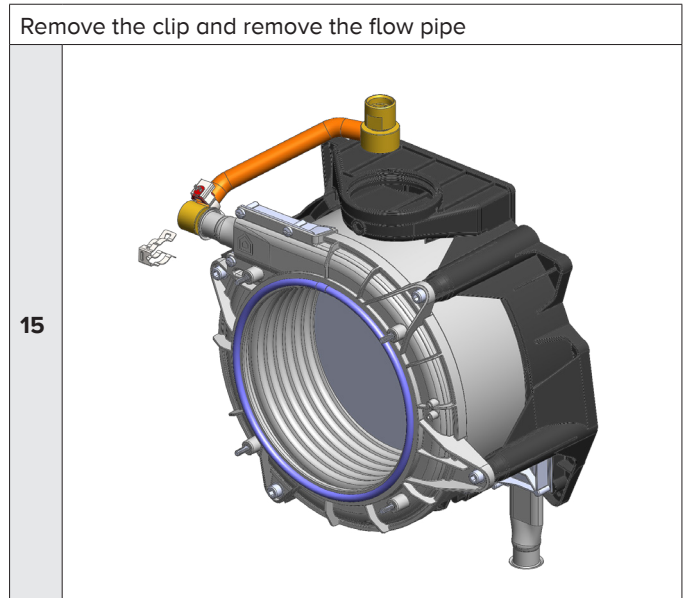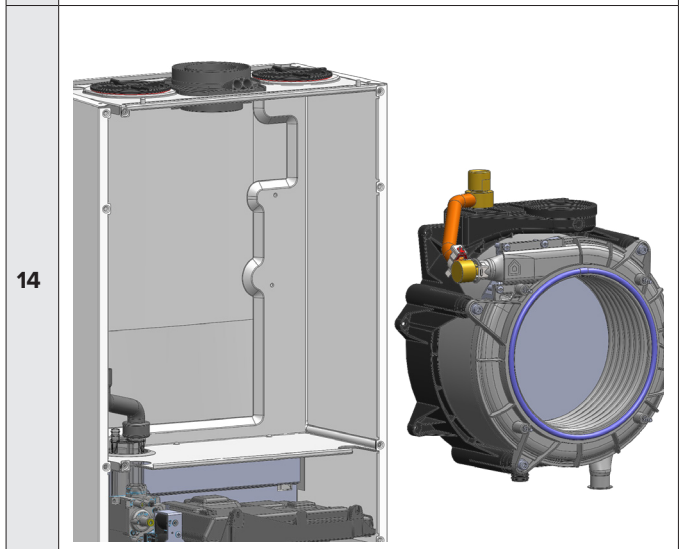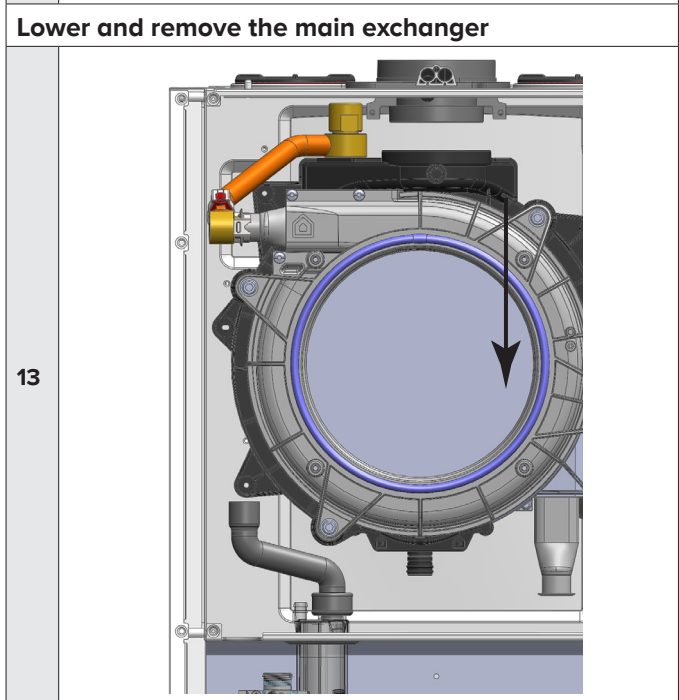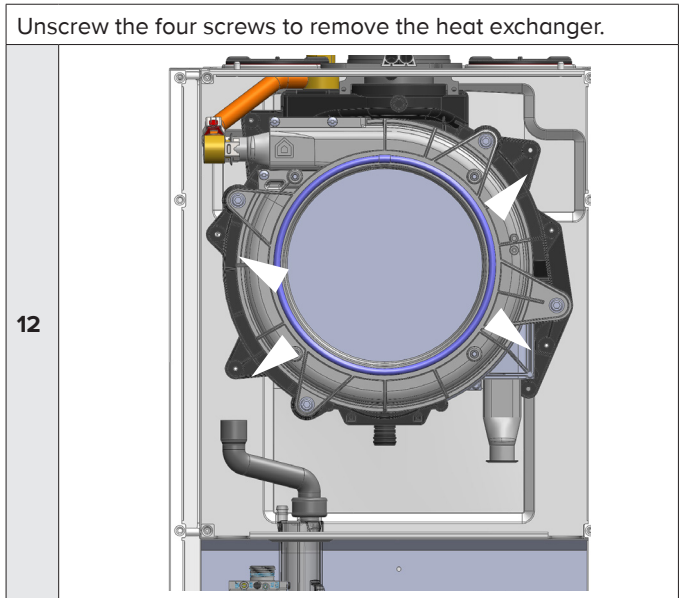

4. BURNER UNIT

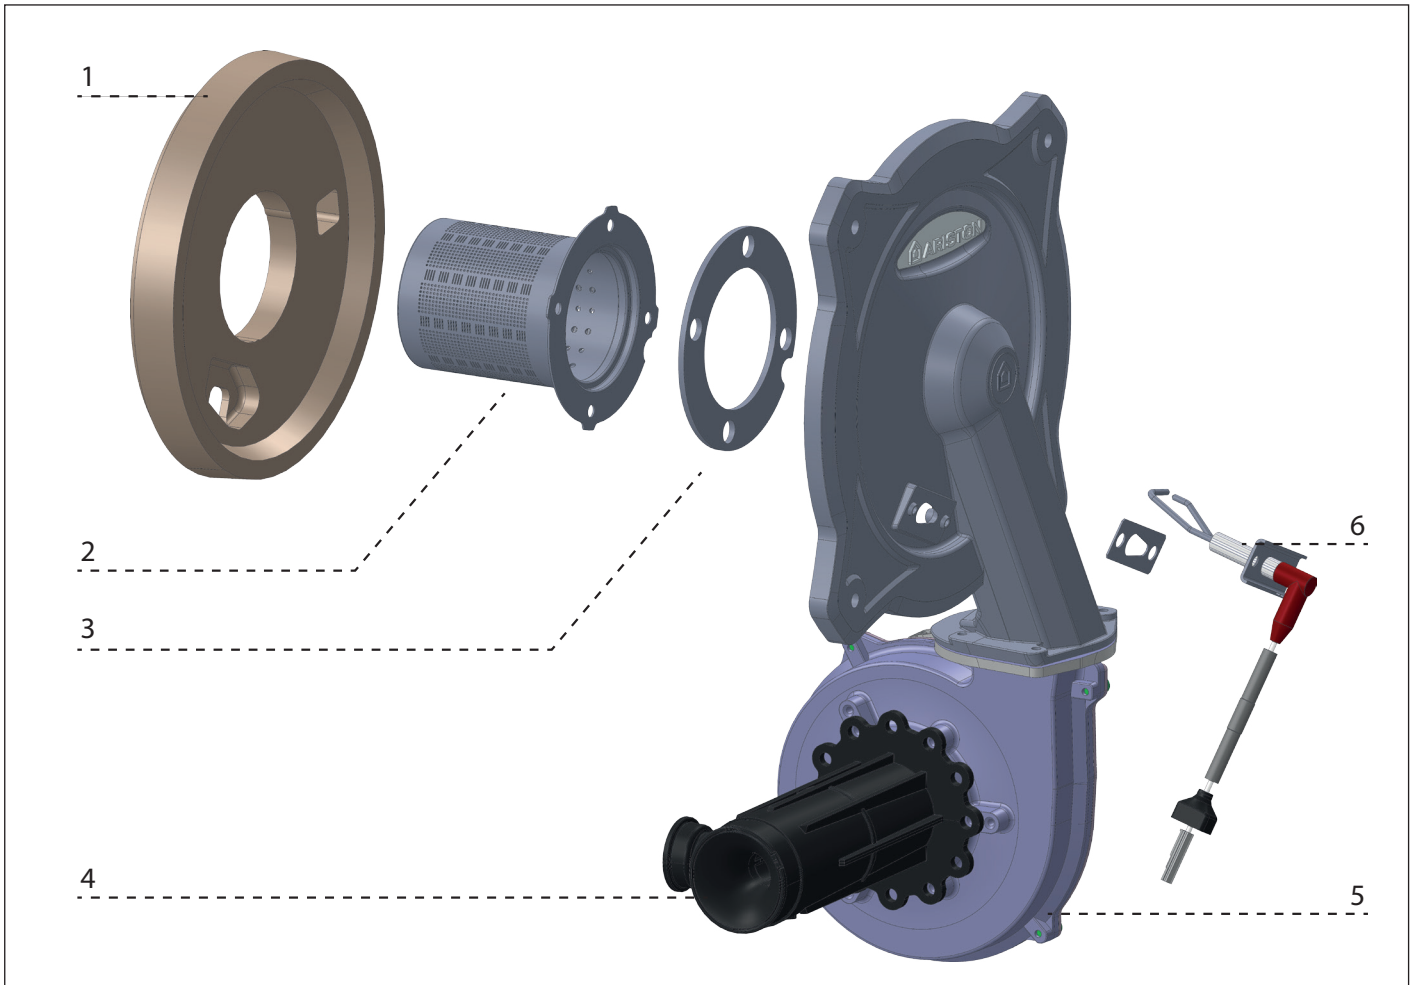


Legend:

- 1 - Ceramic fibre
- 2 - Burner
- 3 - Silencer
- 4 - Mixing tube
- 5 - Fan
- 6 - Detection/ignition electrode


MAINTENANCE GUIDE

4.1 Electrode (detection and ignition)



TIME  5 min

Unplug the electrode on the control box
Remove the screws and pull the electrodes towards you.

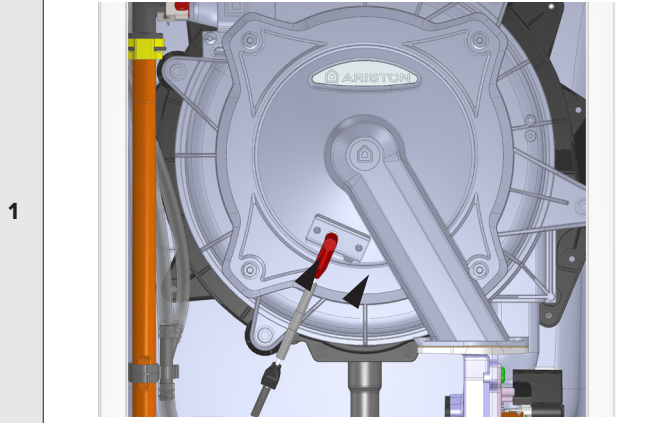


4.2 Burner




TIME  15 min


Drain boiler
Remove the silencer

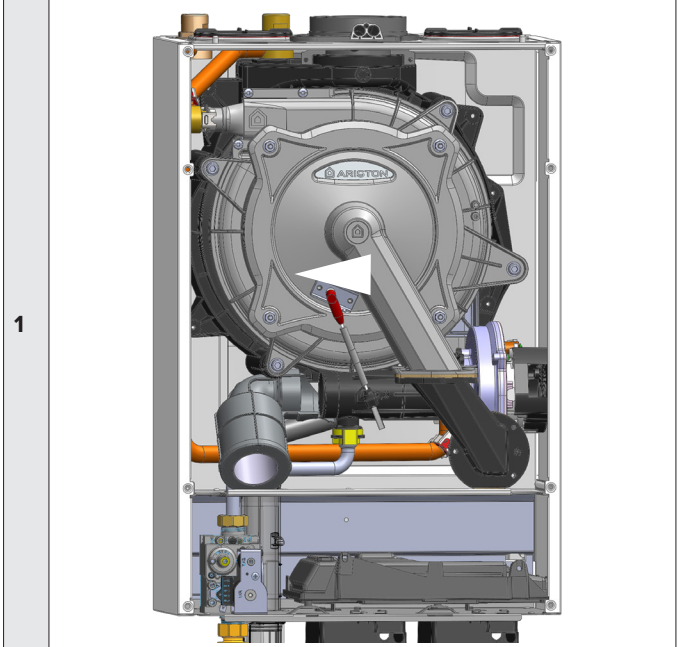


Remove the clip on the gas pipe and disconnect the gas pipe from the gas valve

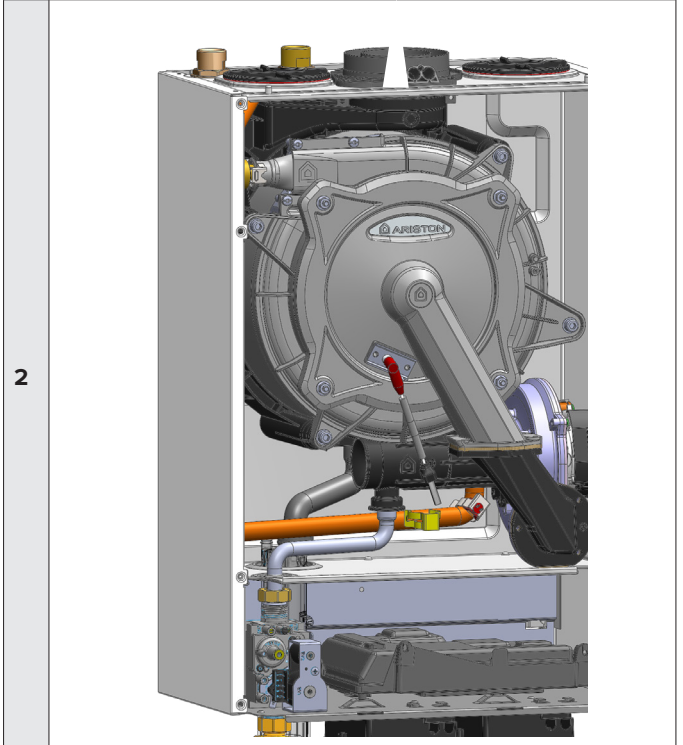


3 Rotate the gas pipe

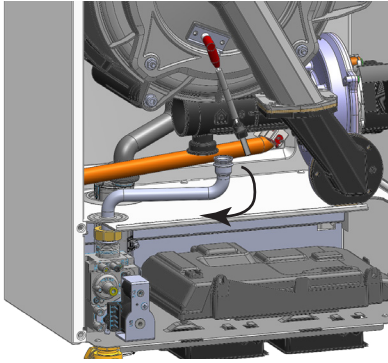


Disconnect the cable of the electrode and fan.
Remove the four nuts .

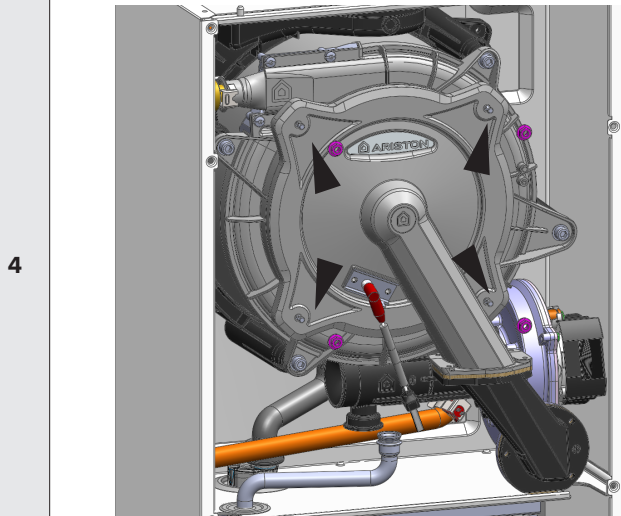

5 Remove the burner unit

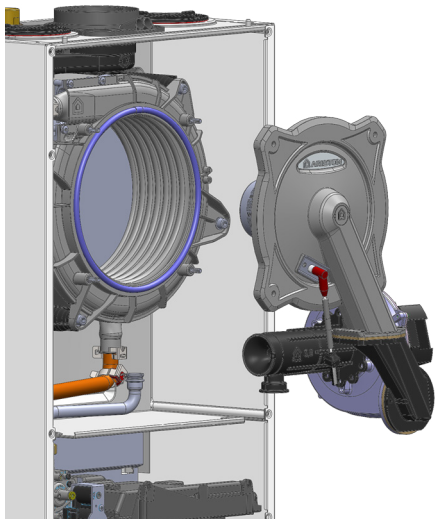


6 Remove the two screws and remove the electrode

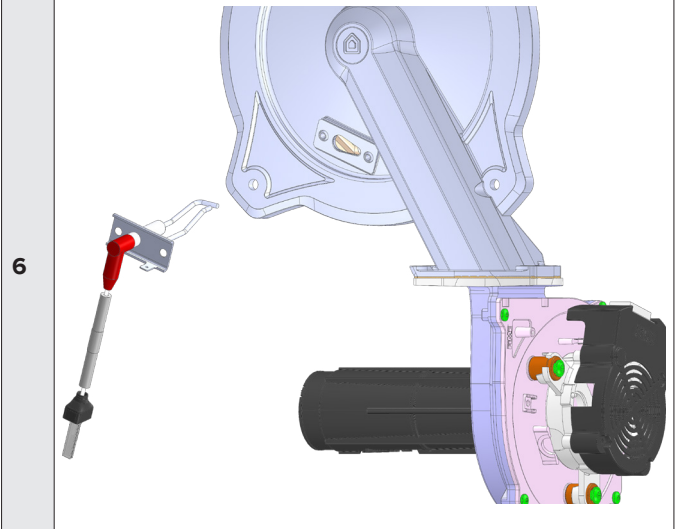

Remove the ceramic fibre.

Remove the four screws and pull the burner toward you.
Always replace the burner gasket (*).

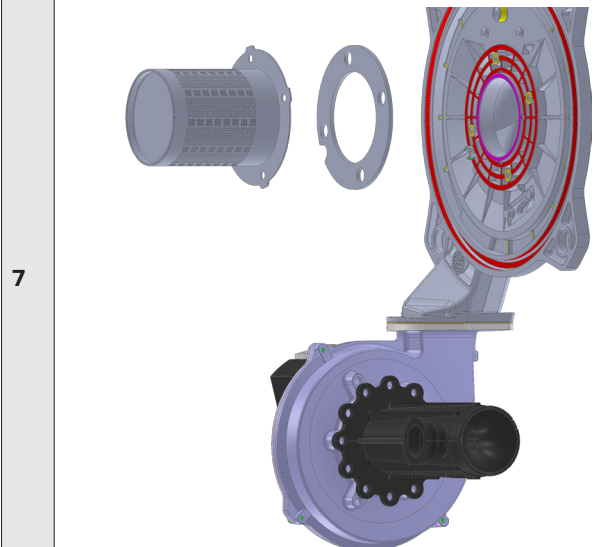

Verify and replace the other gaskets if they are damaged or showing signs of deterioration

MAINTENANCE GUIDE


4.3 Fan

Tools




TIME 15 min

Remove the silencer (see 3.3 - 1)
Isolate the gas supply.
Disconnect the gas pipe

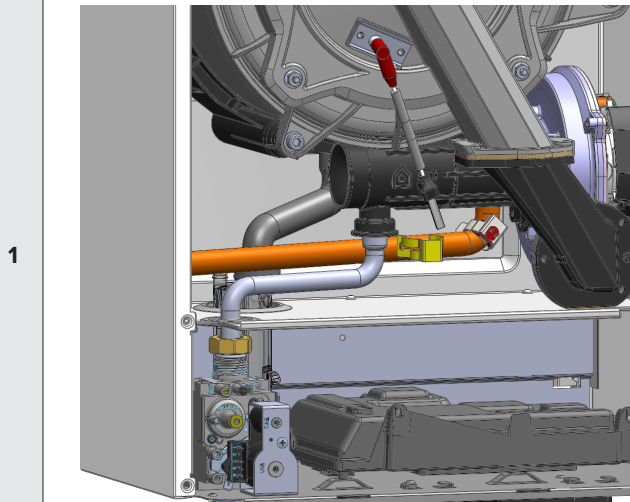


Remove the three screws to free the fan.

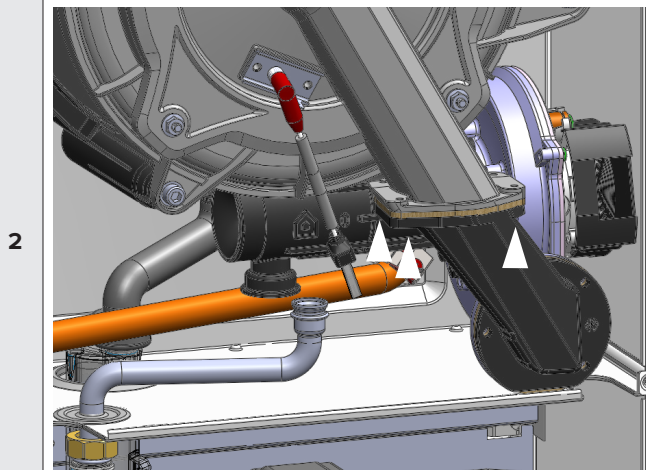

Remove the three nuts.

Verify and replace the gasket if it's damaged or showing signs of deterioration

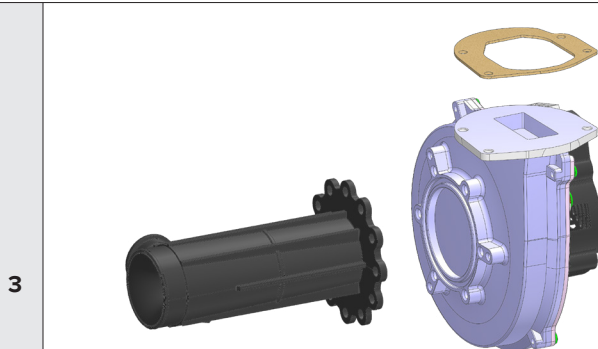


Legend:
1 - Fan
2 - Venturi
3 - Gasket

Fan & mixer venturi according to the model

Power	Fan	Venturi diameter
24 kW	EBM 118 85W	Ø 16,1


4.4 Gas Valve

Tools





TIME 15 min

Remove the two screws under the boiler and disconnect the gas pipe on the top of the gas valve

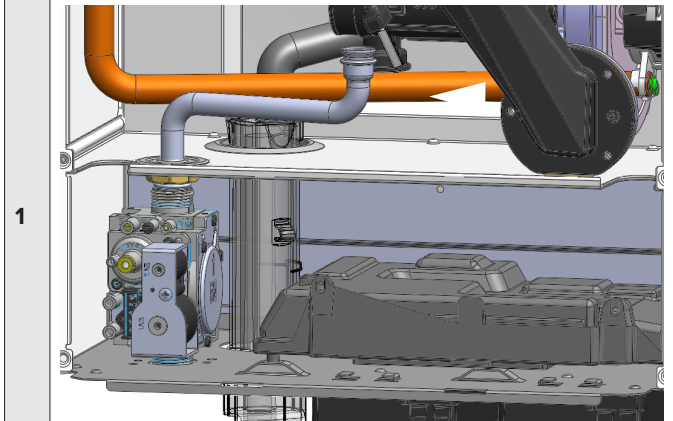
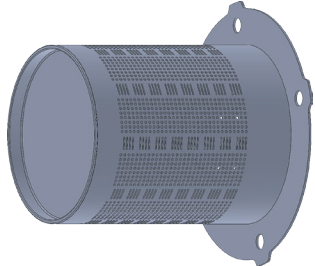
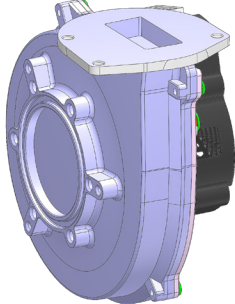
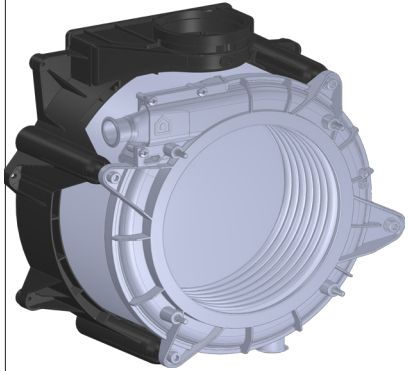
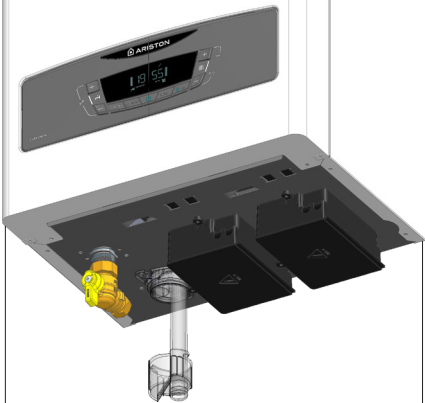


Remove the gas valve

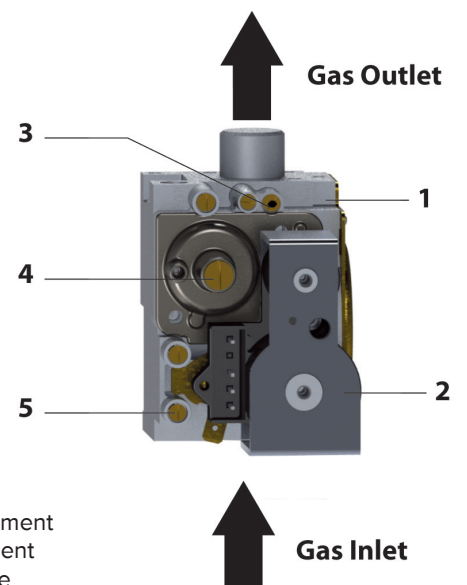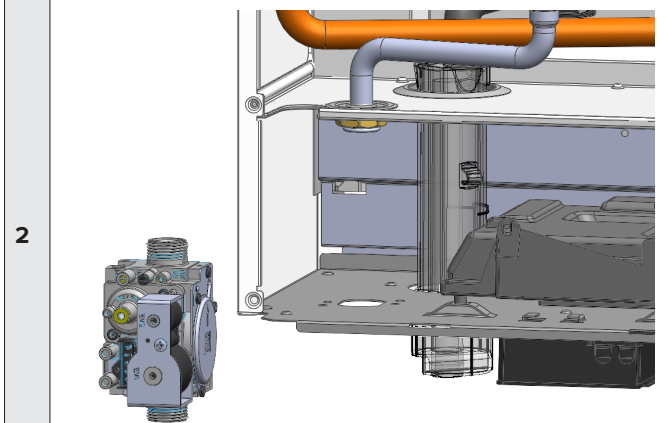

Legend:
1 - Gas valve
2 - Solenoids
3 - Throttle adjustment
4 - Offset adjustment
5 - Inlet test nipple

5. ANNUAL MAINTENANCE

<p>Ignition & detection electrode Maintenance Interval: Annually How: Visual inspection / Clean as necessary / Distance from the burner / Ionisation current more than 1 µA</p>	
<p>Burner Maintenance Interval: Annually How: Visual inspection / Clean as necessary</p>	
<p>Fan Maintenance Interval: Annually How : Visual inspection / Clean as necessary</p>	
<p>Primary Heat exchanger Maintenance Interval: Annually How : Visual inspection / Clean as necessary</p>	
<p>Condensate trap Maintenance Interval: Annually or after cleaning primary heat exchanger How : Visual inspection / Clean as necessary / Add water before replacing</p>	

TECHNICAL DATA




GENERAL NOTE	Model		CLAS ONE R 15	CLAS ONE R 24
	CE Certification (pin)		0085CT0207	
	Gas category		II ₂ HY203P	
	Boiler type		B23-B23p-B33 C13(x)-C33(x)-C43(x)-C53(x)-C63(x) C83(x)-C93(x)	
POWER SPECIFICATIONS	Max/min nominal calorific flow rate (Pci) Qn	kW	15.0 / 3.7	22,0 / 3,7
	Max/min nominal calorific flow rate (Pcs) Qn	kW	16.7 / 4.1	24,4 / 4,1
	Max/min power output (80°C-60°C) Pn	kW	14.6 / 3.4	21,4 / 3,4
	Max/min power output (50°C-30°C) Pn	kW	15.9 / 3.9	23,6 / 3,9
	Combustion efficiency (of flue gas)	%	98.0	97.9
	Nominal calorific flow rate efficiency (60/80°C) Hi/Hs	%	97.1 / 87.4	97.5 / 87.9
	Nominal calorific flow rate efficiency (30/50°C) Hi/Hs	%	106.1 / 95.6	106.1 / 95.6
	Efficiency at 30% at 30°C Hi/Hs	%	109.1 / 98.3	109.8 / 98.9
	Minimum calorific flow rate efficiency (60/80°C) Hi/Hs	%	92.0 82.8	95.6 / 86.1
	Efficiency rating (dir. 92/42/EEC)	stars	★★★★	
	Sedbuk Band Rating 2009	band/%	A / 89.1	A / 89.4
	Loss when stopped (ΔT = 50°C)	%	0.3	0.2
	Loss of burner gas when operating	%	2.0	2.1
	EMISSIONS	Available air pressure	Pa	100
NoX class (less than 70mg/kWh)		class	6	
Flue gas temperature (G20) (80°C-60°C)		°C	60	64
Max/min CO ₂ content (G20) (80°C-60°C)		%	9.2 / 8.7	
Max/min CO content (0%O ₂) (80°C-60°C)		ppm	72 / 9	143
O ₂ content (G20) (80°C-60°C)		%	4.3	4.1
Maximum flue gas flow (G20) (80°C-60°C)		Kg/h	24.4 / 6.3	35.5
Excess air (80°C-60°C)		%	26	25
HEATING CIRCUIT	Minimum/Maximum heating pressure	bar	0,2 / 3	
	Min/max heating temperature (high temperature range)	°C	35 / 82	
	Min/max heating temperature (low temperature range)	°C	20 / 45	
ELECTRICAL	Power supply frequency/voltage	V/Hz	230/50	
	Total electrical power absorbed	W	27	27
	Minimum ambient temperature for use	°C	+5	
	Protection level for the electrical appliance	IP	X5D	
	Weight	kg	23	23

TECHNICAL DATA


ErP Data - EU 813/2013

Model:			CLAS ONE R 15	CLAS ONE R 24
Condensing boiler	yes/no		yes	yes
Low-temperature boiler:	yes/no		no	no
B1 boiler	yes/no		no	no
Cogeneration space heater	yes/no		no	no
Combination heater	yes/no		no	no
Contact details (Name and address of the manufacturer or its authorised representative)			ARISTON S.p.A. Viale A. Merloni 45 60044 FABRIANO AN - ITALIA	
ErP HEATING				
Power output	P_n	kW	15	21
Useful heat output at rated heat output and high-temperature regime	P_4	kW	14,5	21,4
Useful heat output at 30 % of rated heat output and low-temperature regime (Return temperature 30°C)	P_1	kW	4,7	6,4
Seasonal space heating energy efficiency	η_s	%	93	94
Useful efficiency at rated heat output and high-temperature regime (60-80°C)	η_4	%	87,4	87,8
Useful efficiency at 30 % of rated heat output and low-temperature regime (Return temperature 30°C)	η_1	%	98,2	98,9
AUXILIARY ELECTRICITY CONSUMPTION				
At full load	el_{max}	kW	0,0027	0,030
At part load	el_{min}	kW	0,014	0,014
In standby mode	P_{SB}	kW	0,003	0,003
OTHER ITEMS				
Standby heat loss	P_{stby}	kW	0,039	0,047
Ignition burner power consumption	P_{ign}	kW	0,000	0,000
Sound power level, indoors	L_{WA}	dB	50	50
Emissions of nitrogen oxides	NO_x	mg/kWh	35	53

PRODUCT FICHE - EU 811/2013

Brand				
Model			CLAS ONE R 15	CLAS ONE R 24
Seasonal space heating energy efficiency class				
Power output	P_n	kW	15	21
Seasonal space heating energy efficiency	η_s	%	93	94
Annual energy consumption	Q_{HE}	GJ	47	47
Sound power level, indoors	L_{WA}	dB	50	50

Package fiche

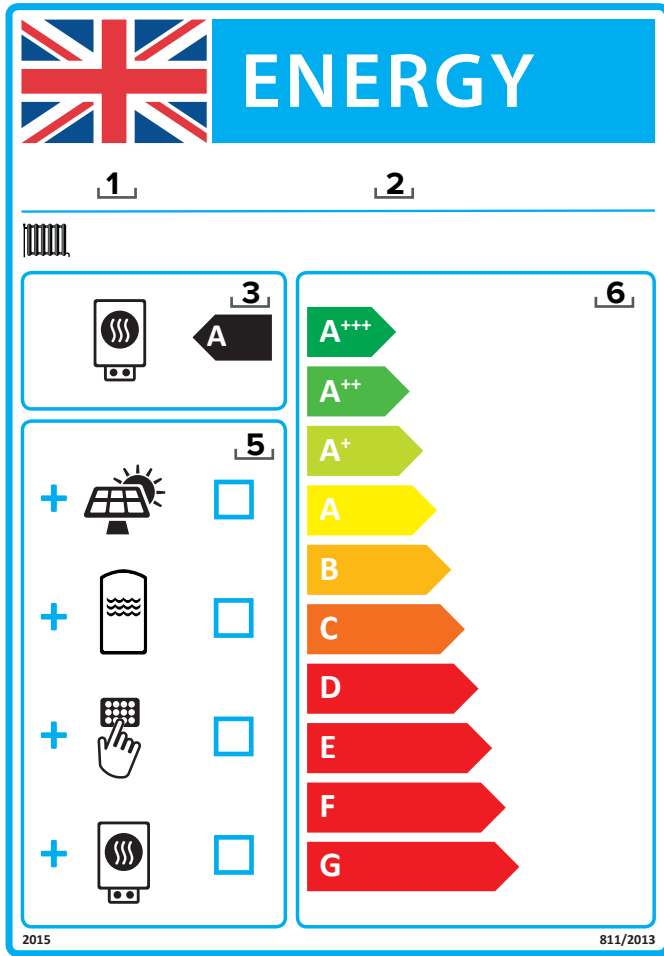

Instructions for filling the label for packages of space heater (or combination heater), temperature control and solar device.

1. supplier's name or trademark;
2. supplier's model identifier;
3. the seasonal space heating energy efficiency class of the space heater, already filled;
4. the seasonal space heating and water heating energy efficiency classes of the combination heater already filled;
5. Indication ✓ of whether a solar collector, hot water storage tank, temperature control and/or supplementary heater, may be included in the package of combination heater, temperature control and solar device;
6. the seasonal space heating energy efficiency class of the package of combination heater, temperature control and solar device, determined in accordance with the figure 1 in the following pages.
The head of the arrow containing the seasonal space heating energy efficiency class of the package of combination heater, temperature control and solar device shall be placed at the same height as the head of the relevant energy efficiency class;
7. the water heating energy efficiency class of the package of combination heater, temperature control and solar device, determined in accordance with the figure 5 in the following pages.
The head of the arrow containing the water heating energy efficiency class of the package of combination heater, temperature control and solar device shall be placed at the same height as the head of the relevant energy efficiency class.

PACKAGES OF COMBINATION HEATER, TEMPERATURE CONTROL AND SOLAR DEVICE

The fiche for packages of combination heater, temperature control and solar device shall contain the elements set out in points (a) and (b):

- a) the elements set out in Figure 1, respectively, for evaluating the seasonal space heating energy efficiency of a package of combination heater, temperature control and solar device, including the following information:
- I: the value of the seasonal space heating energy efficiency of the preferential combination heater, expressed in %;
 - II: the factor for weighting the heat output of the preferential and supplementary heaters of a package (see COMMISSION DELEGATED REGULATION (EU) No 811/2013 - annex IV - 6.a);
 - III: the value of the mathematical expression: $294/(11 \cdot Prated)$, whereby Prated is related to the preferential combination heater;
 - IV: the value of the mathematical expression $115/(11 \cdot Prated)$, whereby Prated is related to the preferential combination heater;
- in addition, for preferential heat pump combination heaters:
- V: the value of the difference between the seasonal space heating energy efficiencies under average and colder climate conditions, expressed in %;
 - VI: the value of the difference between the seasonal space heating energy efficiencies under warmer and average climate conditions, expressed in %;

- (b) the elements set out in Figure 5 for evaluating the water heating energy efficiency of a package of combination heater, temperature control and solar device, where the following information shall be included:
- I: the value of the water heating energy efficiency of the combination heater, expressed in %;
 - II: the value of the mathematical expression $(220 \cdot Q_{ref})/Q_{nonsol}$, where Q_{ref} is taken from Table 15 in Annex VII of the COMMISSION DELEGATED REGULATION (EU) N. 811/2013 and Q_{nonsol} from the product fiche of the solar device for the declared load profile M, L, XL or XXL of the combination heater;
 - III: the value of the mathematical expression $(Q_{aux} \cdot 2,5)/(220 \cdot Q_{ref})$, expressed in %, where Q_{aux} is taken from the product fiche of the solar device and Q_{ref} from Table 15 in Annex VII of the COMMISSION DELEGATED REGULATION (EU) N. 811/2013 for the declared load profile M, L, XL or XXL.

Figure 1

Seasonal space heating energy efficiency of boiler ①
 %

Temperature control
 From fiche of temperature control

Class
 I = 1%, II = 2%, III = 1,5%, IV = 2%,
 V = 3%, VI = 4 %, VII = 3,5%, VIII = 5%

+ %

Supplementary boiler
 From fiche of boiler

Seasonal space heating energy efficiency (in %)

(- 'I') x 0,1 = ③
 ± %

Solar contribution - From fiche of solar device

Collector size (in m²) Tank volume (in m³) Collector efficiency (in %) Tank rating
 A* = 0,95, A = 0,91,
 B = 0,86, C = 0,83, D-G = 0,81

('III' x + 'IV' x) x 0,9 x (/100) x = ④
 + %

Supplementary heat pump
 From fiche of heat pump

Seasonal space heating energy efficiency (in %)


(- 'I') x 'II' = ⑤
 + %

Solar contribution and supplementary heat pump

Select smaller value 0,5 x OR 0,5 x = ⑥
 - %

Seasonal space heating energy efficiency of package ⑦
 %

Seasonal space heating energy efficiency class of package

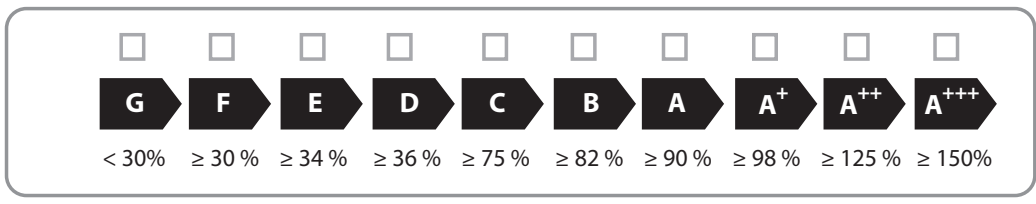

Boiler and supplementary heat pump installed with low temperature heat emitters at 35 °C?
 From fiche of heat pump

⑦
 + (50 x 'II') = %

The energy efficiency of the package of products provided for this fiche may not correspond to its actual energy efficiency once installed in a building, as the efficiency is influenced by further factors such as heat loss in the distribution system and the dimensioning of the products in relation to building size and characteristics.

Figure 5

Water heating energy efficiency of combination heater

Declared load profile:

¹
'1' %

Solar contribution - From fiche of solar device

Auxiliary electricity

$$(1,1 \times '1' - 10\%) \times 'II' - 'I' = + \text{[]} \%$$

³
[] %

Water heating energy efficiency of package under average climate

Water heating energy efficiency class of package under average climate

		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
		G	F	E	D	C	B	A	A⁺	A⁺⁺	A⁺⁺⁺
<input type="checkbox"/>	M	< 27 %	≥ 27 %	≥ 30 %	≥ 33 %	≥ 36 %	≥ 39 %	≥ 65 %	≥ 100 %	≥ 130 %	≥ 163 %
<input type="checkbox"/>	L	< 27 %	≥ 27 %	≥ 30 %	≥ 34 %	≥ 37 %	≥ 50 %	≥ 75 %	≥ 115 %	≥ 150 %	≥ 188 %
<input type="checkbox"/>	XL	< 27 %	≥ 27 %	≥ 30 %	≥ 35 %	≥ 38 %	≥ 55 %	≥ 80 %	≥ 125 %	≥ 160 %	≥ 200 %
<input type="checkbox"/>	XXL	< 28 %	≥ 28 %	≥ 32 %	≥ 36 %	≥ 40 %	≥ 60 %	≥ 85 %	≥ 131 %	≥ 170 %	≥ 213 %

Water heating energy efficiency under colder and warmer climate conditions

Colder: ³ [] - 0,2 x ² [] = [] %

Warmer: ³ [] + 0,4 x ² [] = [] %

The energy efficiency of the package of products provided for this fiche may not correspond to its actual energy efficiency once installed in a building, as the efficiency is influenced by further factors such as heat loss in the distribution system and the dimensioning of the products in relation to building size and characteristics.

Benchmark Commissioning & Warranty Validation Service Record

It is a requirement that the boiler is installed and commissioned to the manufacturers' instructions and the data fields on the commissioning checklist completed in full.

To instigate the boiler warranty the boiler needs to be registered with the manufacturer within one month of the installation. The warranty rests with the end-user (consumer), and they should be made aware it is ultimately their responsibility to register with the manufacturer, within the allotted time period.

It is essential that the boiler is serviced in line with the manufacturers' recommendations, at least annually. This must be carried out by a competent Gas Safe registered engineer. The service details should be recorded on the Benchmark Service and Interim Boiler Work Record and left with the householder. Failure to comply with the manufacturers' servicing instructions and requirements will invalidate the warranty.



www.hhic.co.uk

This Commissioning Checklist is to be completed in full by the competent person who commissioned the boiler as a means of demonstrating compliance with the appropriate Building Regulations and then handed to the customer to keep for future reference.

Failure to install and commission according to the manufacturers' instructions and complete this Benchmark Commissioning Checklist will invalidate the warranty. This does not affect the customer's statutory rights.

* All installations in England and Wales must be notified to Local Authority Building Control (LABC) either directly or through a Competent Persons Scheme. A Building Regulations Compliance Certificate will then be issued to the customer.

© Heating and Hotwater Industry Council (HHIC)



www.benchmark.org.uk

GAS BOILER SYSTEM COMMISSIONING CHECKLIST & WARRANTY VALIDATION RECORD

Address:															
Boiler make and model:															
Boiler serial number:															
Commissioned by (PRINT NAME):						Gas Safe registration number:									
Company name:						Telephone number:									
Company email:						Company address:									
										Commissioning date:					
Heating and hot water system complies with the appropriate Building Regulations?											Yes				
Optional: Building Regulations Notification Number (if applicable):															
Time, temperature control and boiler interlock provided for central heating and hot water											Yes				
Boiler Plus requirements (tick the appropriate box(s))															
Boiler Plus option chosen for combination boiler in ENGLAND						Weather compensation			Smart thermostat with automisation and optimisation						
						Load compensation			Flue Gas Heat Recovery						
Time and temperature control to hot water		Cylinder thermostat and programmer/timer						Combination boiler							
Zone valves		pre-existing				Fitted		Not required							
Thermostatic radiator valves		pre-existing				Fitted		Not required							
Automatic bypass to system		pre-existing				Fitted		Not required							
Underfloor heating		pre-existing				Fitted		Not required							
Water quality															
The system has been flushed, cleaned and a suitable inhibitor applied upon final fill, in accordance with BS7593 and boiler manufacturers' instructions											Yes				
What system cleaner was used?						Brand:			Product:						
What inhibitor was used?						Brand:			Product:						
Primary water system filter		pre-existing				Fitted		Not required							
CENTRAL HEATING MODE measure and record (as appropriate)															
Gas rate (for combination boilers complete DHW mode gas rate)						m ³ /hr			or		ft ³ /hr				
Central heating output left at factory settings?						Yes			No						
If no, what is the maximum central heating output selected?												kW			
Dynamic gas inlet pressure												mbar			
Central heating flow temperature												°C			
Central heating return temperature												°C			
System correctly balanced/rebalanced?												Yes			
COMBINATION BOILERS ONLY															
Is the installation in a hard water area (above 200ppm)?						Yes			No						
Water scale reducer/softener		pre-existing				Fitted		Not required							
What type of scale reducer/softener has been fitted?						Brand:			Product:						
Water meter fitted?						Yes			No						
If yes- DHW expansion vessel		pre-existing				Fitted		Not required							
Pressure reducing valve		pre-existing				Fitted		Not required							
DOMESTIC HOT WATER MODE Measure and record															
Gas rate						m ³ /hr			or		ft ³ /hr				
Dynamic gas inlet pressure at maximum rate												mbar			
Cold water inlet temperature												°C			
Hot water has been checked at all outlets						Yes			Temperature			°C			
CONDENSATE DISPOSAL															
The condensate drain has been installed in accordance with the manufacturers' instructions and/or BS5546/BS6798											Yes				
Point of termination						Internal			External (only where internal termination impractical)						
Method of disposal						Gravity			Pumped						
ALL INSTALLATIONS															
Record the following		At max rate:		CO		ppm		CO ₂		%		CO/CO ₂		Ratio	
		At min rate (where possible)		CO		ppm		CO ₂		%		CO/CO ₂		Ratio	
Where possible, has a flue integrity check been undertaken in accordance with manufacturers' instructions, and readings are correct?											Yes				
The operation of the boiler and system controls have been demonstrated to and understood by the customer											Yes				
The manufacturers' literature, including Benchmark Checklist and Service Record, has been explained and left with the customer											Yes				
Commissioning Engineer's signature															
Customer's signature (To confirm satisfactory demonstration and receipt of manufacturers' literature)															

* All installations in England and Wales must be notified to Local Authority Building Control (LABC) either directly or through a Competent Persons Scheme. A Building Regulations Compliance Certificate will then be issued to the customer.

© Heating and Hotwater Industry Council (HHIC)



www.benchmark.org.uk

SERVICE & INTERIM BOILER WORK RECORD

It is recommended that your boiler and heating system are regularly serviced and maintained, in line with manufacturers' instructions, and that the appropriate service / interim work record is completed.

Service provider

When completing a service record (as below), please ensure you have carried out the service as described in the manufacturers' instructions. Always use the manufacturers' specified spare parts.

SERVICE/INTERIM WORK ON BOILER <small>delete as appropriate</small>					Date:
Engineer name:		Company name:			
Telephone N°:		Gas Safe registration N°:			
Max rate	CO	ppm	CO ₂	%	CO/CO ₂
Min rate	CO	ppm	CO ₂	%	CO/CO ₂
Where possible, has a flue integrity check been undertaken in accordance with manufacturers' instructions, and readings are correct?"					yes
Gas rate:	m ³ /h	OR	ft ³ /h		
Were parts fitted? <small>delete as appropriate</small>		Yes	No		
Parts fitted:					
System inhibitor concentration has been checked and appropriate action taken, in accordance with BS 7593 and boiler manufacturers' instructions. *					yes n/a
Comments:					
Signature:					

*A System inhibitor efficacy test is required on every annual service in accordance with the manufacturers' instructions and BS 7593. It is only acceptable to not have undertaken this if the service engineers attendance visit was in between annual services to attend a non-water facing component.

SERVICE/INTERIM WORK ON BOILER <small>delete as appropriate</small>					Date:
Engineer name:		Company name:			
Telephone N°:		Gas Safe registration N°:			
Max rate	CO	ppm	CO ₂	%	CO/CO ₂
Min rate	CO	ppm	CO ₂	%	CO/CO ₂
Where possible, has a flue integrity check been undertaken in accordance with manufacturers' instructions, and readings are correct?"					yes
Gas rate:	m ³ /h	OR	ft ³ /h		
Were parts fitted? <small>delete as appropriate</small>		Yes	No		
Parts fitted:					
System inhibitor concentration has been checked and appropriate action taken, in accordance with BS 7593 and boiler manufacturers' instructions. *					yes n/a
Comments:					
Signature:					

*A System inhibitor efficacy test is required on every annual service in accordance with the manufacturers' instructions and BS 7593. It is only acceptable to not have undertaken this if the service engineers attendance visit was in between annual services to attend a non-water facing component.

SERVICE/INTERIM WORK ON BOILER <small>delete as appropriate</small>					Date:
Engineer name:		Company name:			
Telephone N°:		Gas Safe registration N°:			
Max rate	CO	ppm	CO ₂	%	CO/CO ₂
Min rate	CO	ppm	CO ₂	%	CO/CO ₂
Where possible, has a flue integrity check been undertaken in accordance with manufacturers' instructions, and readings are correct?"					yes
Gas rate:	m ³ /h	OR	ft ³ /h		
Were parts fitted? <small>delete as appropriate</small>		Yes	No		
Parts fitted:					
System inhibitor concentration has been checked and appropriate action taken, in accordance with BS 7593 and boiler manufacturers' instructions. *					yes n/a
Comments:					
Signature:					

*A System inhibitor efficacy test is required on every annual service in accordance with the manufacturers' instructions and BS 7593. It is only acceptable to not have undertaken this if the service engineers attendance visit was in between annual services to attend a non-water facing component.

SERVICE/INTERIM WORK ON BOILER <small>delete as appropriate</small>					Date:
Engineer name:		Company name:			
Telephone N°:		Gas Safe registration N°:			
Max rate	CO	ppm	CO ₂	%	CO/CO ₂
Min rate	CO	ppm	CO ₂	%	CO/CO ₂
Where possible, has a flue integrity check been undertaken in accordance with manufacturers' instructions, and readings are correct?"					yes
Gas rate:	m ³ /h	OR	ft ³ /h		
Were parts fitted? <small>delete as appropriate</small>		Yes	No		
Parts fitted:					
System inhibitor concentration has been checked and appropriate action taken, in accordance with BS 7593 and boiler manufacturers' instructions. *					yes n/a
Comments:					
Signature:					

*A System inhibitor efficacy test is required on every annual service in accordance with the manufacturers' instructions and BS 7593. It is only acceptable to not have undertaken this if the service engineers attendance visit was in between annual services to attend a non-water facing component.

SERVICE/INTERIM WORK ON BOILER <small>delete as appropriate</small>					Date:
Engineer name:		Company name:			
Telephone N°:		Gas Safe registration N°:			
Max rate	CO	ppm	CO ₂	%	CO/CO ₂
Min rate	CO	ppm	CO ₂	%	CO/CO ₂
Where possible, has a flue integrity check been undertaken in accordance with manufacturers' instructions, and readings are correct?"					yes
Gas rate:	m ³ /h	OR	ft ³ /h		
Were parts fitted? <small>delete as appropriate</small>		Yes	No		
Parts fitted:					
System inhibitor concentration has been checked and appropriate action taken, in accordance with BS 7593 and boiler manufacturers' instructions. *					yes n/a
Comments:					
Signature:					

*A System inhibitor efficacy test is required on every annual service in accordance with the manufacturers' instructions and BS 7593. It is only acceptable to not have undertaken this if the service engineers attendance visit was in between annual services to attend a non-water facing component.

SERVICE/INTERIM WORK ON BOILER <small>delete as appropriate</small>					Date:
Engineer name:		Company name:			
Telephone N°:		Gas Safe registration N°:			
Max rate	CO	ppm	CO ₂	%	CO/CO ₂
Min rate	CO	ppm	CO ₂	%	CO/CO ₂
Where possible, has a flue integrity check been undertaken in accordance with manufacturers' instructions, and readings are correct?"					yes
Gas rate:	m ³ /h	OR	ft ³ /h		
Were parts fitted? <small>delete as appropriate</small>		Yes	No		
Parts fitted:					
System inhibitor concentration has been checked and appropriate action taken, in accordance with BS 7593 and boiler manufacturers' instructions. *					yes n/a
Comments:					
Signature:					

*A System inhibitor efficacy test is required on every annual service in accordance with the manufacturers' instructions and BS 7593. It is only acceptable to not have undertaken this if the service engineers attendance visit was in between annual services to attend a non-water facing component.

* All installations in England and Wales must be notified to Local Authority Building Control (LABC) either directly or through a Competent Persons Scheme. A Building Regulations Compliance Certificate will then be issued to the customer.

SERVICE & INTERIM BOILER WORK RECORD

It is recommended that your boiler and heating system are regularly serviced and maintained, in line with manufacturers' instructions, and that the appropriate service / interim work record is completed.

Service provider

When completing a service record (as below), please ensure you have carried out the service as described in the manufacturers' instructions. Always use the manufacturers specified spare parts.

SERVICE/INTERIM WORK ON BOILER delete as appropriate				Date:	
Engineer name:		Company name:			
Telephone N°:		Gas Safe registration N°:			
Max rate	CO	ppm	CO ₂	% CO/CO ₂	
Min rate	CO	ppm	CO ₂	% CO/CO ₂	
Where possible, has a flue integrity check been undertaken in accordance with manufacturers' instructions, and readings are correct?*				yes	
Gas rate:	m ³ /h	OR	ft ³ /h		
Were parts fitted?delete as appropriate		Yes	No		
Parts fitted:					
System inhibitor concentration has been checked and appropriate action taken, in accordance with BS 7593 and boiler manufacturers' instructions. *				yes	n/a
Comments:					
Signature:					

*A System inhibitor efficacy test is required on every annual service in accordance with the manufacturers' instructions and BS 7593. It is only acceptable to not have undertaken this if the service engineers attendance visit was in between annual services to attend a non-water facing component.

SERVICE/INTERIM WORK ON BOILER delete as appropriate				Date:	
Engineer name:		Company name:			
Telephone N°:		Gas Safe registration N°:			
Max rate	CO	ppm	CO ₂	% CO/CO ₂	
Min rate	CO	ppm	CO ₂	% CO/CO ₂	
Where possible, has a flue integrity check been undertaken in accordance with manufacturers' instructions, and readings are correct?*				yes	
Gas rate:	m ³ /h	OR	ft ³ /h		
Were parts fitted?delete as appropriate		Yes	No		
Parts fitted:					
System inhibitor concentration has been checked and appropriate action taken, in accordance with BS 7593 and boiler manufacturers' instructions. *				yes	n/a
Comments:					
Signature:					

*A System inhibitor efficacy test is required on every annual service in accordance with the manufacturers' instructions and BS 7593. It is only acceptable to not have undertaken this if the service engineers attendance visit was in between annual services to attend a non-water facing component.

SERVICE/INTERIM WORK ON BOILER delete as appropriate				Date:	
Engineer name:		Company name:			
Telephone N°:		Gas Safe registration N°:			
Max rate	CO	ppm	CO ₂	% CO/CO ₂	
Min rate	CO	ppm	CO ₂	% CO/CO ₂	
Where possible, has a flue integrity check been undertaken in accordance with manufacturers' instructions, and readings are correct?*				yes	
Gas rate:	m ³ /h	OR	ft ³ /h		
Were parts fitted?delete as appropriate		Yes	No		
Parts fitted:					
System inhibitor concentration has been checked and appropriate action taken, in accordance with BS 7593 and boiler manufacturers' instructions. *				yes	n/a
Comments:					
Signature:					

*A System inhibitor efficacy test is required on every annual service in accordance with the manufacturers' instructions and BS 7593. It is only acceptable to not have undertaken this if the service engineers attendance visit was in between annual services to attend a non-water facing component.

SERVICE/INTERIM WORK ON BOILER delete as appropriate				Date:	
Engineer name:		Company name:			
Telephone N°:		Gas Safe registration N°:			
Max rate	CO	ppm	CO ₂	% CO/CO ₂	
Min rate	CO	ppm	CO ₂	% CO/CO ₂	
Where possible, has a flue integrity check been undertaken in accordance with manufacturers' instructions, and readings are correct?*				yes	
Gas rate:	m ³ /h	OR	ft ³ /h		
Were parts fitted?delete as appropriate		Yes	No		
Parts fitted:					
System inhibitor concentration has been checked and appropriate action taken, in accordance with BS 7593 and boiler manufacturers' instructions. *				yes	n/a
Comments:					
Signature:					

*A System inhibitor efficacy test is required on every annual service in accordance with the manufacturers' instructions and BS 7593. It is only acceptable to not have undertaken this if the service engineers attendance visit was in between annual services to attend a non-water facing component.

SERVICE/INTERIM WORK ON BOILER delete as appropriate				Date:	
Engineer name:		Company name:			
Telephone N°:		Gas Safe registration N°:			
Max rate	CO	ppm	CO ₂	% CO/CO ₂	
Min rate	CO	ppm	CO ₂	% CO/CO ₂	
Where possible, has a flue integrity check been undertaken in accordance with manufacturers' instructions, and readings are correct?*				yes	
Gas rate:	m ³ /h	OR	ft ³ /h		
Were parts fitted?delete as appropriate		Yes	No		
Parts fitted:					
System inhibitor concentration has been checked and appropriate action taken, in accordance with BS 7593 and boiler manufacturers' instructions. *				yes	n/a
Comments:					
Signature:					

*A System inhibitor efficacy test is required on every annual service in accordance with the manufacturers' instructions and BS 7593. It is only acceptable to not have undertaken this if the service engineers attendance visit was in between annual services to attend a non-water facing component.

SERVICE/INTERIM WORK ON BOILER delete as appropriate				Date:	
Engineer name:		Company name:			
Telephone N°:		Gas Safe registration N°:			
Max rate	CO	ppm	CO ₂	% CO/CO ₂	
Min rate	CO	ppm	CO ₂	% CO/CO ₂	
Where possible, has a flue integrity check been undertaken in accordance with manufacturers' instructions, and readings are correct?*				yes	
Gas rate:	m ³ /h	OR	ft ³ /h		
Were parts fitted?delete as appropriate		Yes	No		
Parts fitted:					
System inhibitor concentration has been checked and appropriate action taken, in accordance with BS 7593 and boiler manufacturers' instructions. *				yes	n/a
Comments:					
Signature:					

*A System inhibitor efficacy test is required on every annual service in accordance with the manufacturers' instructions and BS 7593. It is only acceptable to not have undertaken this if the service engineers attendance visit was in between annual services to attend a non-water facing component.

* All installations in England and Wales must be notified to Local Authority Building Control (LABC) either directly or through a Competent Persons Scheme. A Building Regulations Compliance Certificate will then be issued to the customer.

© Heating and Hotwater Industry Council (HHIC)



www.benchmark.org.uk

Manufactured by

Ariston S.p.A.

Viale Aristide Merloni 45
60044 Fabriano (AN)
ITALY

ariston.com

Imported by

Ariston UK Ltd

3 Juniper West
Basildon
SS15 6SJ
UK

ariston.com/uk

Customer Service: 0333 240 8777